




Smart Protective Film Plotter ZC3-B

Product Manual

Shenzhen Renqing Excellent Technology Co., Ltd.




Product List

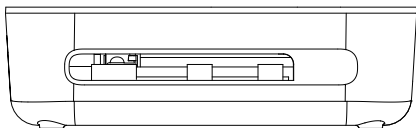

Blade Kit



 Blade




Adapter




Power Cord


Film Installation
Accessories

Appearance And Function

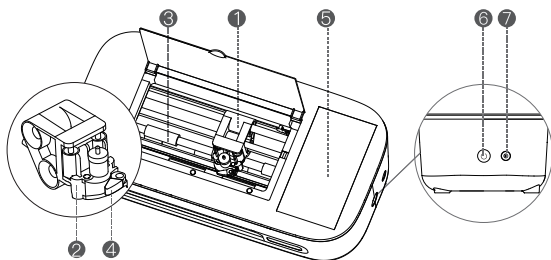

- 1 Driver**
Control the lateral movement of the blade kit
- 2 Blade Kit**
Cut protective film. See details 8, 9, 10, 11
- 3 Platen Roller**
Fix protective film
- 4 Blade Kit Clamp**
Lock the knife handle to secure the blade kit
- 5 QR Code Sticker**
Scan to download App.
- 6 Power Switch**
Start device
- 7 Power Interface**
Connect to power

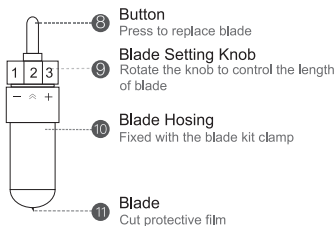

Notice:

Adjust blade:


Rotate the knob ⑨ to control the length of the blade. Lengthen the blade in the direction of symbol "+" and shorten the blade in the direction of symbol "-".

Replace blade:


Press the button ⑧ to remove the old blade and then put in the new blade ⑪ (The built-in magnet can absorb the blade)

Instructions

Install blade kit

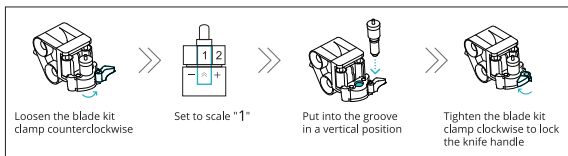

2. Power on

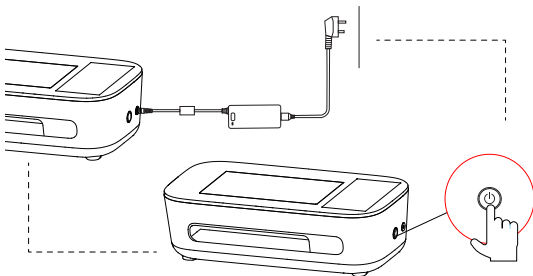

Connect the power cord to the adapter and socket. To ensure the normal operation of the device, please use 100-240volts AC power. Connect the adapter to the power interface of the device; Install the blade kit on the clamp to ensure it is fixed correctly. After connecting, press [PowerSwitch] to start the device.

3. Cut Film

Scan the QR code to download App (Only available for Android phones).


To connect to Bluetooth after power on, you need to click [BLUETOOTH SETTING], and then click the corresponding device model to automatically connect.



- (1) Please prepare a protective film to be cut as shown in the figure. Confirm that the protective film is flat and complete, without bending, folding or missing layer.




- (2) Feed the front end of film to the bottom of platen roller and align the right side of film with the guide line. Please don't place the film into the white area. Hold the film gently for 3 seconds until it enters automatically.

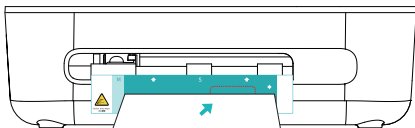

- (3) After the App starts normally, enters the home page.




- (4) Enter keywords in the search box to search for the product model you need to cut; select the appropriate protective film.

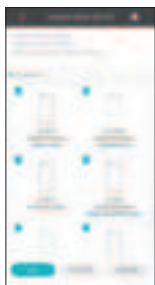

- (5) After checking that the protective film has been placed correctly, click 【DONE】 to start cutting.



- (6) After cutting, the protective film will be pushed out automatically. Take out the protective film and finish cutting.

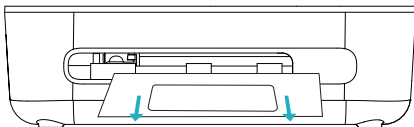







4. Activate Film Code

Scratch the coating on the film package then enter the identification code in the plotter [Consumables] and click [ADD] to add the film stock.










5. Attention


-  Shut down: Press and hold the power button for 2 seconds, the machine will automatically shut down after hearing a beep;
-  Emergency stop: In the power-on state, press the power button once, the machine will terminate the film cutting and return to the initial state, and exit the film paper.
-  Please don't move the driver manually when powered on to avoid damage to the machine.
-  Please don't touch or bump the blade against anything hard for it is sharp and fragile .
-  In order to ensure perfect cutting effect, it is suggested to replace the blade and the rubber strip every 500 times of cutting or 3 months of use.
-  Please shut down the machine normally through the App, and please don't unplug the power cable directly, for it may cause irreversible damage to the machine

Product Specification	
Input	100-240V 2A 50-60Hz
Output	24V 2.75A DC
Size	420*183*130mm
Net Weight	4.2kg
Working power	<40w
Bluetooth protocol	Bluetooth 4.2 BR/EDR-BLE+2.4FHz-Proprietar

 Cautions

	Don't touch the tip of the blade with your finger. It will hurt your finger.
	Liquid or metal objects are not allowed to enter into the machine. These objects can cause fires.
	Do not destroy or arbitrarily replace the original power cord, Do not bend, pull or bind the power cord excessively or place the power cord under heavy object. This can cause damage to the power supply, resulting in an electric shock or fire.
	If you do not use the device for a long time, remove the power cord from the socket. Otherwise, it will cause a fire.
	The device should be placed on a firm surface. Otherwise, the device will fall down and get damaged.
	When the power cord is unplugged from the socket, the plug should be unplugged instead of the cable. Pulling a cable strongly can cause an electric shock or fire.
	It is forbidden to use in thunderstorm and lightning weather. Lest the machine be damaged by electric shocks.

 6. How to Install the Film




1

Wipe the screen with the cleaning kit;



2

 Tear off the outer frame of the film from the tearing position at the upper right corner of the front of the film;




3

Place the film flatly. Roll down the bottom layer to release the protective film.




4

 Remove the holes of film and tear off the middle auxiliary strip; (Please fix the film with your index and middle fingers.)




5

 Place the film flatly on the screen and align the film to the phone precisely and press the auxiliary strip; (Be careful not to touch either end of the auxiliary strip)



6

 Lift the upper part of the film and then push forward slowly with a scratch card from the middle of the auxiliary strip;




7

Then lift the lower part of the film and pull back 2cm, then push forward slowly with a scratch card;



8

 Use a cleaning cloth to smooth the curved surface if necessary;



9

Finally uncover the surface PET film and finish installing the film.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ① Reorient or relocate the receiving antenna.
- ② Increase the separation between the equipment and receiver.
- ③ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ④ Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



If you are a user beyond China, please scan the QR code to follow us in Facebook for more information.