



TRUE WIRELESS STEREO EARPHONES



ENACFIRE A9 INSTRUCTION

Customer Support

support@enacfireglobal.com (US/CA)

moongu@enacfireglobal.com (UK)

desupport@163.com(DE)

esenacfire@163.com (ES)

itenacfire@163.com (IT)

We will reply to you within 24 hours and 100% solve your issues

Packaging List



Earphones x1



Charging Case x1



Eartips x3



USB Type-C
Charging Cable x1



Manual x1



Warranty Card x1

Product Overview

1. Charging Case LED Light
2. Charging Port
3. Multifunctional Button
4. Earphone LED
5. Magnetic Charging Pin



Power On & Pairing

Approach 1 - With Charging Case

US: Open charging case cap

DE: Öffnen Sie den Ladekoffer

ES: Abre la tapa de la caja de carga.

IT: Aprire il cappuccio della custodia di ricarica.

 


US: Select 'ENACFIRE A9' from Bluetooth list

DE: Wählen Sie „ENACFIRE A9“ aus Ihrer Bluetooth Liste

ES: Selecciona "ENACFIRE A9" de la lista de dispositivos Bluetooth.

IT: Seleziona "ENACFIRE A9" dall'elenco dei dispositivi Bluetooth.

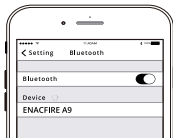

Approach 2 - Without Charging Case

US: Power On: Touch the earphones for 2 seconds with prompt sound 'Power on'
Pairing: Right earphone Blue and White light flash
Select 'ENACFIRE A9'

Note: Right earphone is the master earphone

DE: Anschalten: Berühren Sie die Köpfhörer für zwei Sekunden und die Benachrichtigung „Power on“ hören.
Paaren: Die Köpfhörer verbinden, der rechten Köpfhörer ein weißes und blaues Licht blinkt Wählen Sie „ENACFIRE A9“

Hinweis: Der rechte Kopfhörer ist der Hauptkopfhörer.

 
ES: Encender: Pulsa el botón de los auriculares hasta escuchar un breve sonido de "Power On".
Emparejando: Sobre el auricular derecho parpadea una luz azul y blanca. Seleccionar "ENACFIRE A9".

Nota: El auricular derecho es el auricular maestro.

IT: Accensione: tocca gli auricolari per 2 secondi con il suono rapido "Power on".

Accoppiamento: una luce blu e bianca lampeggia sopra l'auricolare destro. Seleziona "ENACFIRE A9".

Nota: l'auricolare destro è l'auricolare principale.

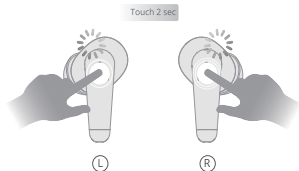

ANC/Transparency Mode —

US: Tap Left earphone once to switch between ANC/Transparency mode
Active Noise Cancellation Mode
Prompt Sound: Noise cancelling on
Transparency Mode Prompt Sound: Ambient on

DE: Tippen Sie einmal auf den linken Kopfhörer, um zwischen ANC- und Transparentmode zu wechseln
Active Noise Cancellation Mode Prompt Sound: Noise cancelling on
Transparentmode Prompt Sound: Ambient on

ES: Pulsa el auricular izquierdo una vez para activar o desactivar el modo de cancelación de ruido.
Cuando se activa la cancelación de ruido se escucha un breve sonido: "Noise cancelling on".
Cuando se activa el modo normal se escucha un breve sonido: "Ambient on".

IT: Premi una volta l'auricolare sinistro per attivare o disattivare la modalità di cancellazione del rumore.
Quando la cancellazione del rumore è attivata, si sente un breve suono: "Noise cancelling on".
Quando è attivata la modalità normale, si sente un breve suono: "Ambient on".

Incoming call

US: Answer call/End call

Tap the Left / Right earphone once

DE: Anruf annehmen/beenden

Drücken Sie den linken/rechten Kopfhörer ein mal

ES: Responder llamada/ Colgar

Pulsa el auricular izquierdo/ derecho una vez

IT: Rispondi alla chiamata / Termina la chiamata

Toccare una volta l'auricolare sinistro / destro

US: Reject call

Touch the Left / Right earphone for 2 seconds

DE: Anruf ablehnen

Drücken Sie den linken/rechten Kopfhörer für zwei Sekunden

ES: Rechazar llamada

Toca el auricular izquierdo/ derecho durante 2 segundos

IT: Rifiuta chiamata

Toccare l'auricolare sinistro / destro per 2 secondi

Music

US: Pause / Play

Tap the Right earphone once

DE: Pausieren/Abspielen

Drücken Sie den linken/rechten Kopfkörer ein mal

ES: Pausa / Reproducir

Pulsa el auricular derecho una vez

IT: Pausa / Play

Tocca una volta l'auricolare destro

US: Voice Assistant

Tap the Left / Right earphone 3 times

DE: Sprachassistent

Drücken Sie den linken/rechten Kopfhörer drei mal

ED: Asistente de voz

Pulsa el auricular izquierdo/ derecho 3 veces

IT: Assistente vocale

Toccare l'auricolare sinistro / destro 3 volte

US: Change Song

Double-tap the Left/Right earphone

DE: Lied wechseln

Drücken Sie den linken/rechten Kopfhörer zwei Mal

ES: Cambiar canción

Doble pulsación sobre el auricular izquierdo/ derecho

IT: Cambia canzone

Tocca due volte l'auricolare sinistro / destro

US: Adjust Volume

Touch and hold the Left/Right earphone

DE: Lautstärke anpassen

Drücken und halten Sie den linken/rechten Kopfhörer

ES: Ajustar volumen

Mantén pulsado el auricular izquierdo/ derecho

IT: Regola il volume

Tocca e tieni premuto l'auricolare sinistro / destro

Power Off

Without Charging Case

US: Turn off Bluetooth to disconnect the earphones

Touch either one earphone for 8 seconds to power off both earphones

DE: Schalten Sie Bluetooth aus, um die Kopfhörer von Gerät zu trennen.

 
Drücken Sie acht Sekunden lang einen der Kopfhörer, um sie auszuschalten.

ES: Apaga el Bluetooth para desconectar los auriculares.

Mantén pulsado cualquiera de los dos auriculares durante 8 segundos para apagar ambos auriculares.

IT: Disattiva il Bluetooth per scollegare gli auricolari.

Toccare uno degli auricolari per 8 secondi per spegnere entrambi gli auricolari.

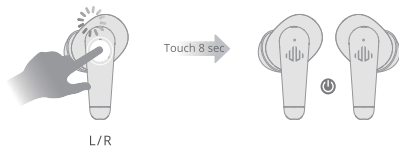

Single Mode

Single Mode	Earphone
Without Charging Case	<p>US: Turn off both earphones Touch the Left / Right earphone for 4 seconds enter pairing mode. Select 'ENACFIRE A9' from Bluetooth list</p> <p>DE: Ausschalten die beide Kopfhörer Berühren Sie den Linken/Rechten Kopfhörer für vier Sekunden, um ihn einzuschalten Wählen Sie „ENACFIRE A9“ in der Bluetooth Liste aus</p> <p>ES: Apagar ambos auriculares Pulsa el auricular izquierdo/ derecho durante 4 segundos para entrar en modo de emparejamiento. Selecciona "ENACFIRE A9" de la lista de dispositivos Bluetooth.</p> <p>IT: Spegni entrambe le cuffie Premi l'auricolare sinistro / destro per 4 secondi per accedere alla modalità di associazione. Seleziona "ENACFIRE A9" dall'elenco dei dispositivi Bluetooth.</p>

Charging

Earphones:

US: Earphones white LED Light blinking/off: Charging/Fully Charged

DE: Weiße LED des Kopfhörers blinkt/ Licht aus: Aufladen/ Voll aufgeladen

ES: Luz LED blanca de los auriculares parpadeando/ apagada: Cargando/ Carga completa

IT: Auricolari LED bianchi luce lampeggiante / spenta: in carica / carica completa

Note: It takes about 1.5 hours to fully charge the earphones

Charging Case:

US: Charging Case white LED Light on/blinking: Fully Charged/Charging

DE: LED des Aufladebox Licht an / blinkt: Voll aufgeladen/ Aufladen

ES: Luz LED blanca de la caja de carga encendida/ parpadeando: Carga completa/ Cargando

IT: Custodia di ricarica LED bianco luce accesa / lampeggiante: carica completa / in carica

Note: It takes about 1.5-2 hours to fully charge the charging case



Safety Instruction

Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.

Do not use while driving, cycling, operating machinery or performing other activities that require hearing surrounding sounds.

Do not use earphones in thunderstorm weather, the earphones may not work properly in the bad weather condition, and may increase the risk of being hit by lightning.

Earphones may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphones. If the earphones come in contact with liquids, quickly wipe away. If submersed in the water, do not turn the earphones on until it is completely dried.

Tips: Man-made damage and lost are not covered under warranty. Keep the earphones and the packaging out of reach of children.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.