

FRONT PAGE

SAFETY AND CARE INSTRUCTIONS

Read all the instructions before using the product and then store them for future reference. Failure to follow these safety instructions could lead to fire, electrical shock, personal injury, property damage, or damage to the product.

- This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines.
- Do not expose to rain, moisture, or other liquid. Do use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source. Do not handle the unit, USB cord or wall charger with wet hands.
- Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product.
- Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire.
- Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 65°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 120°F could cause serious damage and explosion.
- Do not disassemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage, or other abnormality. Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not place anywhere where the product would become crushed or punctured.
- Charge using the correct wall charger, and make sure that the charger is inserted all the way into the electrical outlet. Disconnect the charger once the product is fully charged.
- This product is not a toy. Keep out of reach of children or those that require supervision.
- Do not use abrasive cleaning solvents to clean the unit.

Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.

5

SAFETY AND CARE INSTRUCTIONS / FCC STATEMENT

FCC STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

FCC ID: 2ABAS-XBES-0137

ONE YEAR LIMITED WARRANTY

Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com

XTREME[®] SOUND

**TRUE WIRELESS STEREO
ANC EARBUDS**

With LED display charging case



Scan to Extend Your Warranty

XBES-0137
User Manual V1.0 0824

6

7

BACK PAGE

INTRODUCTION

Thank you for purchasing our ANC Earbuds. These earbuds offer superior sound quality, active noise cancellation, and a comfortable fit for extended use. Please read this manual carefully to get the best performance from your earbuds.

PRODUCT DESCRIPTION

Active noise cancellation technology silences distractions, while listening to your favorite tunes or watching shows. The versatile TWS design allows you to use both earbuds for immersive stereo or switch to a single bud to stay aware of your surroundings. Charge your earbuds wirelessly with the included charging case with LED display that lets you know exactly how much juice remains.

- Supports HSP, HFP, A2DP, and AVECP profiles
- Active Noise Cancellation (ANC) and transparency mode
- Up to 4 hours of playtime on a single charge
- Charging case with LED battery percentage display
- Easy-to-use touch controls

WHAT'S INSIDE

- ANC Bluetooth[®] Earbuds
- Charging Case
- USB-C Charging Cable
- User Manual

GETTING TO KNOW YOUR PRODUCT



SPECIFICATIONS

- Supports: HSP, HFP, A2DP, AVECP
- Wireless Distance: 33 feet
- Playtime (at 100% volume): ANC/Transparency Mode: 4 hours
- Normal Mode: 4.5 hours
- Standby Time: 15 hours
- Battery Capacity: Earbuds 30mAH each | Charging Case 200mAH
- Charging Specification: Earbuds 5V/30mA | Charging Case 5V/200mA
- Charging Time: 1.5 hours for both Earbuds and Charging Case
- ANC Specification: Left Earbud: -38dB | Right Earbud: -38dB
- Sensitivity: Left Earbud: 106dB | Right Earbud: 108dB
- Impedance: 32Ω
- Frequency Response: 20Hz - 10kHz
- Material: ABS + PC
- Dimension: Earbuds (0.41 x 0.77 x 0.34 inches) | Charging Case (2.44 x 1.78 x 1.07 inches)
- Net Weight: Earbuds (0.14 ounces each) | Charging Case (1.09 ounces)
- Cable Specification: 5V/1A

OPERATION

NOTE: Before first use, charge the earbuds in the case for at least 1 hour.

Charging

Connect the included charging cable to the charging case and plug it into an appropriate power source.

Operation

To power on, remove the earbuds from the charging case. They will automatically turn on and pair with each other or hold either/both Touch Control Point for 3 seconds from power off state.

To power off, place the earbuds back in the charging case or hold either/both Touch Control Point for more than 8 seconds.

Bluetooth Pairing

Ensure the earbuds are powered on.

The LEDs will flash red and blue to indicate it is in pairing mode, as well as a voice prompt.

Open the Bluetooth settings on your device and search for new devices. Select "Xtreme XBES-0137" from the list of available devices. Once paired, a confirmation tone will sound.

Touch Controls

Play/Pause: Tap either earbud once.

Next Track: Double-tap the right earbud.

Previous Track: Double-tap the left earbud.

Answer/End Call: Tap either earbud once.

Reject Call: Long-press both earbuds for 2 seconds.

Redial (Callback): Triple-tap left earbud.

Activate Voice Assistant: Triple-tap right earbud.

OPERATION

Transparency and ANC (Active Noise Cancellation) Mode:

To activate Transparency and ANC mode, tap and hold the Touch Control Point on either earbud for 2 seconds.

The earbuds will cycle through Transparency mode -> ANC mode -> Normal mode.

Low Battery Indicator:

When the ANC earbuds have low battery, play a low battery warning sound and the LED indicator will flash red.

TROUBLESHOOTING

If you are unable to connect your earbuds to your Bluetooth device, please try the following steps:

- Ensure your earbuds are turned on and fully charged.
- Make sure your phone or playback device's Bluetooth setting is on.
- Please charge the earbuds and Bluetooth device.
- Restart your Bluetooth device.

Tips

- Performance can be affected by the environment or when the earphones become discharged.
- Interruption can be caused by obstacles between the earphones and the Bluetooth device, by wi-fi or other high frequency signals, or if the earphones are brought out of range of the Bluetooth device (approx. 33 ft).
- To maintain healthy battery performance, charge the charging case (and earphones) periodically, if not in use.