

Toshiba Pocket PC e800/e805

User's Guide

Introduction

Thank you very much for your purchase of this Toshiba Pocket PC. Please be sure to read this user's guide before using the Toshiba Pocket PC, and ensure that you are aware of correct the handling procedures. Please be sure to read the "Safety precautions" section in this document to learn about important safety issues.

After reading this document, keep it in a convenient place for future reference.

First Edition September 2003

©2000-2003 IA Style, Inc.

All rights reserved.

Copyright Information

©2003 by Toshiba Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written

permission of Toshiba. No patent liability is assumed, with respect to

the use of the information contained herein.

ATI and IMAGEON are registered trademarks of ATI Technologies, Inc. Microsoft MS-Windows and PowerPoint are registered trademarks, and Windows CE is a trademark, of Microsoft Corporation in the United States and other countries.

IA Album, IA Presenter and IA Screen Mirror are registered trademarks of IA Style, Inc., and Information In Action is a trademark of IA Style, Inc.

The names of other actual companies, products, and brand names mentioned herein may be trade names, service marks, trademarks, or registered trademarks of their respective owners.

This user's manual and the programs in the ATI Presentation Pack are copyrighted. All rights are reserved. Reproduction, adaptation, or translation

of these programs and documents without prior written permission of IA Style, Inc. is also prohibited.

<http://www.iastyle.com>

supportE@iastyle.com

Web sites:

Product support:

Toshiba Pocket PC e800/e805 User's Guide

First edition June 2003

2

Safety precautions

Please carefully read "Safety precautions" before using the Toshiba Pocket PC e800/e805 and ensure that you are aware of correct handling procedures.

The precautions provide essential information for the protection of the

user and others from possible injury and property damage. They also provide information on the safe handling of this product.

Please check that you fully understand the definition of the following messages (signs and graphical symbols) before reading the text, and always follow the instructions provided.

NOTE

Safety instructions

All safety instructions must be read carefully and must be fully understood,

before attempting to use your Toshiba Pocket PC. This manual contains the safety instructions that must be observed in order to avoid potential hazards that could result in personal injuries or could damage your computer. The safety instructions have been classified according to

the seriousness of the Risk, as follows:

Meaning Signal Word

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Provides important information.

Always request and obtain prior consent and approval of an authorized airline representative before using your Pocket PC aboard an aircraft.

Always follow the instructions of the airline representative whenever

using

your Pocket PC aboard an aircraft, to prevent any possible interference with airborne electronic equipment. Your Pocket PC produces low levels

3

of RF energy due to the generation of digital timing pulses by its clock oscillator circuits. Your Pocket PC has been equipped with internal shielding

to minimize any stray emissions of RF energy. Airlines may nevertheless prohibit the on-board use of all portable PCs (and all other portable electronic devices that could potentially emit stray RF energy), particularly

during take-offs and landings, to prevent any possible interference with

the reception of signals by airborne electronic navigational devices. Certain locations, such as hospitals, may restrict the use of Pocket PCs

and other devices that emit low-level RF energy.

Always comply with posted prohibitions of the use of RF-emitting devices, such as in hospitals. Failure to follow such directives could result in the

interference with medical equipment and/or devices.

Never come closer than 16 cm (6 inches) to a person with a heart pacemaker implant when using this Pocket PC in combination with a mobile cellular telephone. Failure to do so could result in interference with the

function of the pacemaker.

Never use a Pocket PC while driving an automobile or any other moving vehicle. Always pull out of traffic and come to a stop in a legally permissible

and safe location before using your Pocket PC. Failure to do so could result in serious bodily injury in a traffic accident.

Never use your Pocket PC while walking. Usage while walking could result in bodily injury caused by inattention to automobile traffic or other

pedestrian hazards.

Never allow metallic objects, such as staples and paper clips, to enter inside your Pocket PC. Metallic objects, such as staples and paper clips, if

allowed to enter your Pocket PC, could cause the generation of excess heat or fire.

Never connect terminals (metal parts) to metallic objects (such as wires).

Connecting terminals to metal objects could cause excessive heat or fire.

Always immediately turn the battery switch to the "off" position and disconnect

the AC Adaptor from the power outlet in the event the Pocket PC emits an unusual odor or sound or generates smoke.

4

Never use or store your Pocket PC in the following locations:

Anywhere it may be exposed to water, such as a bathroom or sauna;

In conditions of high humidity, such as in the rain or fog; Where your Pocket PC will be exposed to high temperatures, such as near a fire or

equipment that emits high temperatures; In direct sunlight; or In a sealed

automobile left in the sun and subject to high temperatures.

Never drop your Pocket PC or subject it to severe shock. Dropping your Pocket PC or subjecting it to severe shock could cause the removable battery to leak, ignite and/or rupture.

Always immediately remove your Pocket PC and its battery from the vicinity

of any open flame in the event the removable battery leaks liquid or emits an unusual odor. Continued use of your Pocket PC under either of

these conditions could cause ignition (i.e., fire) of the leaked battery liquid,

or rupture.

Never touch any fluid that might leak from the removable battery. Such liquid when in contact with the eyes or skin, could cause injury to the skin

or eyes. Should the liquid come into contact with the eyes, irrigate the

eyes thoroughly with clean water and immediately seek medical attention.

In the event the liquid comes into contact with the skin or clothing,

wash it

away immediately with clean water.

Never attempt to disassemble, repair or make any modification to your Pocket PC. Disassembly, modification or any attempt at repair could cause bodily injury or property damage, as well as damage to the Pocket PC itself.

Failure to follow the above directions concerning use and storage could result in damage to your Pocket PC or bodily injury and property damage due to battery liquid leakage, fire or rupture.

Never raise the sound volume level to high when using your Pocket PC with earphones. An excessive sound volume level could cause damage to your hearing.

Never touch the liquid that might leak from a broken liquid crystal display.

Contact with this liquid could cause a skin rash. If the crystal display liquid

should come into contact with the skin or clothing, wash it immediately with clean water.

Never allow infants or small children within reach of your Pocket PC. Infants or small children could injure themselves if allowed access to your Pocket PC.

5

Never attempt to disassemble or repair an AC Adaptor, and never alter their Power Supply Cables or plugs as exposure to electric shock hazards could result.

Always contact an authorized service provider, if repair or replacement is required.

Always use the AC Adaptor that has been provided with your Pocket PC. Bodily injury or property damage could occur as a result of the use of an

unauthorized and incompatible AC Adaptor in violation of this Warning.

Never connect or disconnect the AC Adaptor with wet hands. Connecting or disconnecting the AC Adaptor to a power source with wet hands could cause electric shock.

Never place an AC Adaptor on a wooden surface (or any other surface that could be marred by exposure to heat) while it is in use, since

its surface

temperature increases during normal use. Always rest it on a suitable heat-insulating material.

Never cover the AC Adaptor with any object while it is in use, and never place it adjacent to a heat source. An excessive temperature increase could detrimentally affect its performance.

Never place a Power Supply Cable near a heat source, as damage to the cord or to its insulation could result.

Always use a surge protector when utilizing the AC Adaptor during an electrical storm. Otherwise, a power surge could result in the loss of stored data.

Insert the power plug to a household electric outlet.

When travelling abroad, never plug the AC Adaptor into a power source that does not correspond to both the voltage and the frequency specified on the rating plate of the unit, as equipment damage will result.

Never attempt to connect or disconnect the power plug with damp or wet hands. Connecting or disconnecting the power plug with damp or wet hands could result in an electric shock.

Never leave an open container, such as a cup or glass, containing a liquid

near the AC Adaptor. Spilled liquid coming in contact with the AC Adaptor could cause a fire or electric shock.

6

Always ensure the power plug pins are clean and free of dust or other foreign

material by wiping the pins with a clean dry cloth. Dust or other foreign material accumulation on the power plug pins could cause fire.

Always unplug the power plug from an outlet by grasping the power plug itself. Never pull on the Power Supply Cable to disconnect the Power Supply Cable from an outlet. Pulling on the Power Supply Cable could cause a fire or electric shock as a result of damage to the Power Supply Cable.

Never use a worn or damaged AC Adaptor Power Supply Cable or plug, or a worn or damaged extension cord or plug. The use of a worn or damaged Power Supply Cable or plug could result in electric shock or fire.

Always contact an authorized service provider immediately to obtain a

suitable Power Supply Cable replacement.

Never bend or twist a Power Supply Cable, and never pull on a Power Supply Cable in an attempt to remove a plug from an outlet. Always grasp the plug directly when unplugging a Power Supply Cable to avoid causing any damage to the cord.

Never plug the AC Adaptor into an overloaded multiple outlet, power strip

or surge protector to prevent blowing a fuse or tripping a circuit breaker.

Never place heavy objects on a Power Supply Cable, as that could result in damage to the cord.

Always confirm that the AC Adaptor plug (and the extension cord and plug, if any) have been fully inserted into the receptacle, to assure a secure electrical connection.

NOTE

Under certain conditions, data may be lost, including:

Misuse of your Pocket PC; Subjecting the main unit of your Pocket PC to

static electricity and/or noise; Total loss of electric charge in the removable

battery; and Servicing of your Pocket PC.

Avoid connecting your Pocket PC to an external device such as a computer in an environment likely to be affected by static electricity. For example

during low-humidity weather, shuffling your shoes upon a rag can produce static electricity. Before you handle your computer, you should touch a grounded object to discharge any static electricity from your body.

Avoid using your Pocket PC in environments that are likely to be affected by static electricity or are prone to high electrical noise. If you connect

your Pocket PC to a computer via the docking cradle for data transfer or

data restoration purposes, Toshiba will not be responsible for any Pocket

PC or computer malfunction, problems with data transfer or data modifications/

loss that may occur in these environments.

Use your Pocket PC only in locations with the following ambient environmental conditions:

Under normal operational use with temperatures between 0°C and 40°C (32°F and 104°F); With humidity of 30% to 80%; and When charging the battery with temperatures between 5°C and 40°C (41°F and 104°F).

Do not store or use your Pocket PC in the following locations:

Those subject to extremely high or low temperatures; Dusty locations; and Locations or sites subject to strong vibration.

Use or storage in these location, sites or areas can result in product failure,

malfunction or loss of data.

Do not subject your Pocket PC to sudden and severe temperature changes. This could result in moisture condensation in the Pocket PC that

could cause damage to your Pocket PC, computer function loss, and/or the loss of data. In the event of moisture condensation, allow your Pocket

PC to dry out completely.

It is normal for the AC Adaptor to become warm when charging.

Disconnect the power plug from the outlet when not in use.

Take care not to sit on your Pocket PC when it is located in the back pocket of trousers, etc. This could cause damage to your Pocket PC or malfunction of the Pocket PC functions.

Do not place objects on top of your Pocket PC or drop them on top of your

Pocket PC. This could cause damage to your Pocket PC and/or malfunction.

Clean terminals (metallic parts) on a regular basis with a cotton swab.

Dirty terminals could affect battery charging.

Never use organic solvents such as benzene or paint thinner to clean your Pocket PC. Use of these solvents can cause deformation or discoloration.

Do not wipe the display with a damp or wet cloth or touch the display with

damp or wet hands. Wiping or touching the display under this condition can cause product failure or malfunction. Always use a soft dry cloth to

wipe the display.

When using the "SD memory card?and/or ?CF) compact flash card,?be sure to read the relevant instruction manual and ensure that you know the proper procedures for their use.

Never subject the card to any severe shock while connected to your Pocket PC. Such a shock can cause damage to the card and a malfunction.

8

Do not carry your Pocket PC with the card connected to it. This can result

in the damage or loss of the card.

Never connect cradle terminals with metallic objects, such as wires. Connecting

these terminals with metallic objects may cause the production of excess heat, burns and damage to the charger and/or your Pocket PC. Lithium-Ion batteries are recyclable. Never dispose of the battery with ordinary waste.

Never bend or twist your Pocket PC. This could cause damage to your Pocket PC or malfunction of the Pocket PC functions.

Supplementary Information:

Weitere Informationen:

Informations complémentaires:

Información complementaria:

Ulteriori informazioni:

Ytterligere informasjon:

"The product complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC.?"

"Das Produkt entspricht den Anforderungen der Niederspannungs Richtlinie 73 23/EG und der EMC-Richtlinie 89/336/EG.?"

"Ce produit est conforme aux exigences de la directive sur les basses tensions 73/23/CEE et de la directive EMC 89/336/CEE.?"

"El Producto cumple los requisitos de baja tensión de la Directiva 73/

23/CEE y la Directiva EMC 89/336/
CEE.?

"Il prodotto ?conforme ai requisiti
della direttiva sulla bassa tensione
73/23/EG e la direttiva EMC 89/
336/EG.?

"Produkten uppfyller kraven enligt
lågspänningsdirektiver 73/23/EEC
och EMC-direktiv 89/336/EEC.?

9

Working environment

This product was designed to fulfill the EMC (electromagnetic
compatibility)

requirements for "residential, commercial and light industry
environments?

Toshiba does not approve the use of this product in working environments
other than "residential, commercial and light industry environments?

For example, the following environments are not approved:

?Industrial Environments (environments with a main voltage >230V~)

?Medical Environments

?Automotive Environments

?Aircraft Environments

Any consequences resulting from the use of this product in working
environments

that are not approved are not the responsibility of Toshiba Corporation.
The consequences of the use of this product in non-approved working
environments may be:

?Interference with other devices or machines in the nearby surrounding
area

?Malfunction of, or data loss from, this product caused by disturbances
generated by other devices or machines in the nearby surrounding
area

Therefore Toshiba strongly recommends that the electromagnetic
compatibility

of this product be suitably tested in all non-approved working
environments before use. In the case of automobiles or aircraft, the
manufacturer

or airline respectively should be asked for permission before use

of this product.

Furthermore, for general safety reasons, the use of this product in environments

with explosive atmospheres is not permitted.

CE compliance

This product and the original options are designed to observe the related EMC (Electromagnetic compatibility) and safety standards. However, Toshiba cannot guarantee that this product still observes these EMC standards

if options or cables not produced by Toshiba are connected or implemented. In this case the persons who have connected/implemented those options/cables have to make sure that the system (PC plus options/cables) still fulfils the required standards. To avoid general EMC problems,

the following advice should be observed:

?Only CE marked options should be connected/implemented

?Only best shielded cables should be connected

10

FCC Notice

"Declaration of Conformity?

This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance

with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

?Reorient or relocate the receiving antenna.

?Increase the separation between the equipment and receiver.
?Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
?Consult the dealer or an experienced radio/TV technician for help.
Only peripherals complying with the FCC class B limits may be attached to this equipment. Operation with noncompliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV reception. Shielded cables must be used between the external devices and the computer's USB ports, external monitor port, PS/2 keyboard port and PS/2 mouse port. Changes or modifications made to this equipment, not expressly approved by Toshiba or parties authorized by Toshiba could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

11

BSMI Notice (Taiwan Only)

Canadian Regulatory Information
(Canada Only)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulation of the Canadian Department of Communications.

Note that Canadian Department of Communications (DOC) regulations provide, that changes or modifications not expressly approved by TOSHIBA Corporation could void your authority to operate this equipment.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la class B respecte toutes les exigences du

Règlement sur le matériel brouilleur du Canada.

VCCI Notice

(Japan Only) Class BITE

12

FCC Class B Digital Devices & Peripheral

Devices (Declaration of Conformity or

Certification Authorization)

Declaration of Conformity Label & Marking

Requirements

?User Manual must provide user information in accordance with

?5.19(a)(3), 15.21, 15.27 and 15.105(b):

Instruction Manual Federal

Communication Commission

Interference Statement

This equipment has been tested and found to comply with the limits for
a

Class B digital device, pursuant to Part 15 of the FCC Rules. These
limits

are designed to provide reasonable protection against harmful
interference

in a residential installation. This equipment generates, uses and can
radiate radio frequency energy and, if not installed and used in
accordance

with the instructions, may cause harmful interference to radio
communications.

However, there is no guarantee that interference will not occur in a
particular

installation. If this equipment does cause harmful interference to
radio

or television reception, which can be determined by turning the
equipment

off and on, the user is encouraged to try to correct the interference
by one

of the following measures:

?Reorient or relocate the receiving antenna.

?Increase the separation between the equipment and receiver.

?Connect the equipment into an outlet on a circuit different from that
to

which the receiver is connected.

?Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Assure continued compliance (for example, use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the manufacturer of this device could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Toshiba America Information Systems, Inc.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

9740 Irvine Blvd.

Irvine, CA 92618-1697

1-800-Toshiba

Responsible Party:

Telephone No:

13

Table of Contents

CHAPTER 1: Getting Started	15
CHAPTER 2: Basic Skills	17
CHAPTER 3: Microsoft ActiveSync	98
CHAPTER 4: Microsoft Pocket Outlook	100
CHAPTER 5: Companion Programs	109
CHAPTER 6: Pocket Internet Explorer	131
CHAPTER 7: Getting Connected	137
CHAPTER 8: Wi-Fi (IEEE 802.11b)	

Wireless LAN	145
CHAPTER 9: Optional Functions	169
CHAPTER 11: Additional Information	207

14

Chapter 1: Getting Started

Chapter 1:

Getting Started

Welcome

Congratulations on purchasing your Toshiba Pocket PC. Due to the size and capabilities of this device, you can keep your most important business

and personal information up-to-date and close at hand. Microsoft? ActiveSync?increases the power of your device by allowing you to synchronize

the information on your desktop or laptop computer with your device.

15

Toshiba Pocket PC e800/e805 User's Guide

Where to Find Information

This book describes your Pocket PC hardware, provides an overview of the programs on your Pocket PC, and explains how to connect your Pocket PC to a desktop computer, a network, or the Internet. For instructions

on setting up your Pocket PC and installing ActiveSync, see information to help you use your Pocket PC.

For information on:

Programs on your Pocket PC

Additional programs that can be installed on the Pocket PC

Connecting to and synchronizing with a computer

Last-minute updates and detailed technical information

Up-to-date information on your Toshiba Pocket PC

16

See this source:

This User's Guide and device Help To

view Help, tap

The Pocket PC Companion CD.

The Quick Start Card or Active Sync

Help on your computer. To view Help,
open the Microsoft Active Sync application,
and then click Help.

The Read Me files, located in the
Microsoft Active Sync folder on the
desktop computer and on the Pocket
PC Companion CD.

<http://www.pda.toshiba.com>

and then Help.

Chapter 2:

Basic Skills

Your Toshiba Pocket PC e800/e805 is easy to learn how to use. This
chapter describes the use and customization of your Toshiba Pocket PC
e800/e805.

Parts Names and Function

Main unit (front view)

Power Button/Screen Light

Stereo headphone or
microphone input

Wireless communication LED

Recording Button

(Program Button 5)

Cursor Button/

Navigation Button

Program Button 1, 2, 3 & 4

(from the LEFT)

Cradle connection port

Optional Expansion Pack

Program Button Initial Settings

Program button 1 = Calendar

Program button 2 = Tasks

Program button 3 = Home

Program button 4 = Contacts

Program button 5 = Voice recorder

Cradle Connection Port

Chapter 2: Basic Skills

Stylus

Battery/

Alarm LED

Touch Screen

Speaker

Guide Pin

Lock

Release Button

17

Toshiba Pocket PC e800/e805 User's Guide

Cradle Connection Port

Main unit (end view)

DC-IN socket

Cradle Connection Port

Optional Expansion Pack

USB Port

Cradle

18

Hold Switch

Battery Switch

Wireless Communication

Switch

(Wireless lan model only)

RGB (Monitor) Port

Main unit (back view)

SD CARD SLOT

STYLUS

CFII CARD SLOT

BATTERY PACK LOCK

Power Button

The power button performs the functions described in the table below.

Power button

Press and hold.

Press it quickly.

When the power is off

The power turns on.

The power turns on.

Chapter 2: Basic Skills

CF RELEASE BUTTON (USE
STYLUS TO EJECT)

MIC

STEREO HEADPHONE OR

MICROPHONE INPUT

TOSHIBA SCROLLER

INFRARED PORT

RESET BUTTON

OPTIONAL EXPANSION PACK

DC-IN SOCKET

When the power is on

The screen light alternately
turns on/off.

The power turns off.

19

Toshiba Pocket PC e800/e805 User's Guide

Battery Switch

The battery switch supplies/cuts off the battery power to the Toshiba
Pocket PC e800/e805.

The setting of this switch at shipment is "stop." When using the Toshiba
Pocket PC e800/e805 for the first time, slide this switch to the left
(the
"supply" side) with the stylus.

Battery/Alarm LED

The Battery/Alarm LED indicates the machine condition.

Flashing orange

Orange

Yellow

Green

20

Switching the battery switch to the "stop" position at any
time will lead to loss of data.

BATTERY SWITCH

STOP SUPPLY

When the preset alarm time, which was set through Calendar
or Tasks, goes off, the lamp starts flashing.

Indicates charging of the battery.

The battery charging process is stopped due to the ambient temperature being too high or low. Charge the battery in an ambient temperature of approximately 41°F to 104°F (5°C to 40°C).

Indicates full charge of the battery.

Chapter 2: Basic Skills

Wireless Communication Switch

(Wireless LAN model only)

1. To enable Wireless module, make sure the Wireless Communication Switch is turned on. (The default setting is Power Off. Slide the switch to the left to turn the power on.)

2. If this is your first time turning on the switch, the IP Address Page

will pop up for you to set the IP address, Subnet mask and Default gateway.

ON OFF

WIRELESS COMMUNICATION

SWITCH

Wireless LED Descriptions

LED indicates the different status:

Status LED

Wireless Communication Switch is turned OFF Off

Wireless Communication Switch is turned ON Orange

Hold Switch

When in use, the Hold switch icon will be displayed on command bar and AP Keys 1 through 5, the Rocker Key, and Scroll Key will be disabled. When not in use, these keys will be enabled again.

21

Toshiba Pocket PC e800/e805 User's Guide

How to Use the Stylus

The stylus is used for menu selection or data input on the touch-screen of

the Toshiba Pocket PC e800/e805.

Tap: Touch the screen once with the stylus to open items and select options.

Drag: Hold the stylus on the screen and drag it across to select text and images. Drag in a list to select multiple items.

Tap and hold: Tap and hold the stylus on an item to see a list of

actions available for that item. On the pop-up menu that appears, tap the action you want to perform.

NOTE When you operate the touch screen of the Toshiba Pocket PC e800/e805, use the supplied stylus.

If the tip of the stylus is damaged, do not use it. If you operate the touch screen with a damaged stylus or a ballpoint pen, the touch screen may be damaged.

When the stylus is damaged, please purchase a new one.

About the Cursor Button

You can move a cursor (selection display) on the screen by pressing the

upper, lower, right or left part of the cursor button.

You can select a program to launch by pressing the center part of the cursor button.

NOTE The cursor movement is different depending on the screen. When the cursor is at the right or the left side of the screen, it may not move.

About the Scroller

You can also move the cursor on the screen by moving the scroller up and down.

You can select a program to launch by pressing the scroller.

Method 2: Connect the supplied AC adapter and the Toshiba Pocket PC e800/e805

22

Battery Charging

When using the Toshiba Pocket PC e800/e805 for the first time, set the battery switch to the supply side, and then charge the removable battery with the supplied AC adapter.

How to Charge the Battery

You can use two charging methods.

NOTE Turn the unit off before connecting the AC Adapter and your Toshiba Pocket PC e800/e805.

Method1: Connect the supplied AC adapter and the cradle as shown in the figure below, and then insert the Toshiba Pocket PC e800/e805 into the cradle.

Chapter 2: Basic Skills

23

Toshiba Pocket PC e800/e805 User's Guide

Method 2: Connect the supplied AC adapter and the Toshiba Pocket e800/e805 as shown in the figure below.

NOTE For charging the battery, maintain an ambient temperature from approximately 41°F to 104°F (5°C to 40°C).

When the lamp is lit in orange during the battery charging, you can use the Toshiba Pocket PC e800/e805.

When the battery is completely charged, the LED alarm lamp color will change to green.

24

Chapter 2: Basic Skills

How to Attach/Detach the Main Battery Pack

1. Turn off the power.
2. Switch the Battery Pack Lock to release the battery pack.
3. Attach/Detach the battery from the Pocket PC.

Battery Pack Lock

Switch to release battery pack Lock

Release

Attach

Detach

NOTE You cannot turn on the power if the Battery Pack Lock is in the Release Position.

You can change the main battery without data loss because the Toshiba Pocket PC e800/e805 has a rechargeable backup battery. However, the capacity of the backup battery is limited, therefore when you change the main battery, attach the new main battery and switch the Battery Pack Lock to the lock side as soon as possible.

25

Toshiba Pocket PC e800/e805 User's Guide

How to Use the Optional High Capacity

Battery Pack

1. Detach the Main Battery.
2. Attach the High Capacity Battery pack to the Pocket PC.
3. Switch the Battery pack Lock to lock the High Capacity Battery pack.

NOTE

Switch to Lock the High Capacity Battery Pack.

You cannot turn on the power if Battery Pack Lock is at the Release side.

You can replace the main battery with the High Capacity Battery without data loss because Toshiba Pocket PC e800/e805 has a rechargeable backup battery. However, the capacity of the backup battery is limited, therefore when you change the main battery, attach the new main battery and switch the Battery Pack Lock to the lock side as soon as possible. Chapter 2: Basic Skills

How to Prolong Battery Life

Use the Toshiba Pocket PC e800/e805 with the AC adapter. Under the following conditions where the power consumption will be high, please use the AC adapter when:

- Operating while connected to your computer.

- Operating with a storage card or with any other optional equipment.

In addition,

- Select the short power-off time in the setting menu to shorten the time the unit will remain on if not used (see "Customize Your Toshiba Pocket PC" on page 58).

- Turn off the screen light.

- Set the screen brightness to power saving mode and shortening the light turn-off time (see "Customize Your Toshiba Pocket PC" on page 58).

Use your unit with an ambient temperature between 59°F and 77°F (15°C and 25°C). This temperature range is the most effective for the battery.

When you use the Toshiba Pocket PC e800/e805 in high or low temperature environments, the operable time is shortened due to the decrease of the battery capacity.

You can save power if the wireless communication module is off.

Battery Life

The removable battery has a limited life. Repeated charging/discharging of the battery gradually decreases operable time. When the operable time

has been diminished, it is time to replace the removable battery with

a

new one.

Do not leave the Toshiba Pocket PC e800/e805 in a place of high or low temperature. It may shorten battery life.

If you have not used the Toshiba Pocket PC e800/e805 for several days, its battery charge level reading may be inaccurate. Fully recharge the battery before using.

27

Toshiba Pocket PC e800/e805 User's Guide

Battery Charge Level and Stored Data Protection

If the battery charge level becomes extremely low, or the battery becomes completely discharged, the memory data stored in the Toshiba Pocket PC

e800/e805 could be lost.

When the low battery status icon or the alarm message appears, immediately

connect the AC adapter to the Toshiba Pocket PC e800/e805 and charge the battery.

The removable battery gradually discharges even if the device is not being used. When the Toshiba Pocket PC e800/e805 is left for a long time, the removable battery of the Toshiba Pocket PC e800/e805 may completely discharge.

It is recommended to save the Toshiba Pocket PC e800/e805's memory data to your computer or to a storage card.

The manufacturer is not responsible for data change or clearance due to battery discharge.

28

How to Use the Optional Expansion Pack

You can use the Optional Toshiba Expansion Pack (as shown on page 17) together with the Toshiba Pocket PC e800/e805 to connect to additional peripherals.

DC-IN SOCKET

BATTERY SWITCH

WIRELESS

CRADLE CONNECTION PORT

OPTIONAL EXPANSION PACK

NOTE

NOTE

Parts and Functions of the Expansion Pack

The Cradle Connection Port allows you to connect the Expansion Pack to the Cradle.

The RGB (Monitor) Port is a standard 15-pin RGB port for connecting an

external display device such as a monitor or projector (640 x 480 64K colors

@ 60Hz and 800 x 600 64K colors @ 60Hz).

The USB Port allows you to connect USB keyboard to the Pocket PC.

Release Button: When pressed, the Release Button releases the Expansion Pack from the Toshiba Pocket PC e800/e805.

CRADLE CONNECTION

PORT

Only IA-Presenter and IA Screen Mirror (see page 193)

can output the image to the external monitor. Other applications cannot output the image to the external monitor.

Use only a Microsoft® Pocket PC compatible keyboard.

Chapter 2: Basic Skills

COMMUNICATION SWITCH

(WIRELESS LAN)

RELEASE BUTTON

USB PORT

RGB (MONITOR) PORT

29

Toshiba Pocket PC e800/e805 User's Guide

Connecting the Expansion Pack to the Pocket PC

1. Plug the Guide Pins into the corresponding jacks on the Toshiba Pocket PC e800/e805. A light click is heard when the Expansion Pack is locked in place.

NOTE

Releasing the Expansion Pack from the Pocket PC

Press the Release Button on the Expansion Pack and gently remove the Pack from the Toshiba Pocket PC e800/e805.

How to use the Optional USB Host Cable

The optional USB Host Cable allows you to connect a USB keyboard to the Pocket PC.

To connect a USB keyboard to the Pocket PC:

1. Turn off the power.

2. Plug the optional USB Host Cable to the Pocket PC.
3. Connect a USB keyboard to the USB Port of the optional USB Host Cable.

NOTE

NOTE

30

The locks are based on foolproof design to help you connect the Expansion Pack to the Pocket PC with the right face-up, i.e. the face with the Release Button.

Charging the battery or connect AC adapter if the battery power is low. You cannot use a USB keyboard if the battery power is less than 15%.

Use only a Microsoft Pocket PC compatible keyboard.

Chapter 2: Basic Skills

Initial Setup

When using the Toshiba Pocket PC e800/e805 for the first time, follow the initial setup procedures below, after the battery has been charged.

1. Move the battery switch to the "i\$supply;" position. The Toshiba Pocket PC e800/e805 powers on automatically and the Welcome screen appears. Tap the screen to start the following setup.

2. Execute touch screen correction.

When the align screen appears, tap the center of the cross target with the stylus. The next target position changes upon tapping the target. Five taps completes the positioning correction. The screen then changes to the Stylus screen.

If a finger or any other object touches the screen during correction, the correction will be cancelled. Repeat the correction procedure.

3. Read how to use the stylus.

Read and understand the stylus operation, and then tap NEXT.

NOTE For more information on stylus operation, See "How to Use the Stylus" on page 22.

4. Learn the pop-up menu operation.

Read the on-screen explanation and then follow the instructions. Display the pop-up menu, and cut and paste the data according to the screen instructions.

After you finish the paste operation, this stage is completed. Tap NEXT.

5. Set the TIME ZONE.

When tapping the right mark, the city and the time zone lists appear. Tap the desired city and time zone.

When the setup is completed, tap NEXT.

6. To complete the initial setup.

When the Complete screen appears, the initial setup is completed.

After tapping the screen, you can use the Toshiba Pocket PC e800/e805.

NOTE When you tap the Complete screen, the Today screen appears. For more information on the Today screen, see "Today Screen" on page 36.

31

Toshiba Pocket PC e800/e805 User's Guide

Inserting a CF II Card

1. Turn off the power.
2. Remove the dummy card.
3. Insert the CF II Card.

To remove a card:

1. Turn off the power.
2. Lightly press down the release button with the stylus. The button will pop out. Press down on the release button again. The card will withdraw slightly from the slot.
3. Pull the card straight up to remove.

RELEASE BUTTON

NOTE Use stylus to release the CF card.

32

Chapter 2: Basic Skills

Inserting an SD Card

1. Turn off the power.
2. Remove the dummy card.
3. Insert the card with its contact surface (metal contact surface) facing

the back of the Toshiba Pocket PC e800/e805.

4. Press down on the card until it clicks into place.

To remove a card:

1. Turn off the power.
2. Lightly press down the card until a clicking sound is heard. The card

will pop out slightly from the slot.

3. Pull the card straight up to remove.

33

Toshiba Pocket PC e800/e805 User's Guide

Connecting to a Computer

Before connecting your Toshiba Pocket PC e800/e805 to a computer, check the following.

ActiveSync has been installed on your computer. (See Chapter 3.)

The position of connecting port on the computer may differ according to the computer type.

To Connect Using the Supplied Cradle:

1. Connect the USB cradle to your computer as shown in the illustration below.

2. Insert the Pocket PC into the cradle.

34

Chapter 2: Basic Skills

To connect directly using a connection cable:

Connect the Toshiba Pocket PC e800/e805 directly to your computer using an optional USB Sync Cable.

When the Toshiba Pocket PC e800/e805 is connected to another device via a USB Sync Cable do not plug the AC adapter directly into the Pocket PC as this may lead to interference. Instead, plug the AC adapter into the port on the USB Client cable connector.

35

Toshiba Pocket PC e800/e805 User's Guide

Tap to create a new item.

Today Screen

When you turn on your device for the first time each day (or after 4 hours

of inactivity), you'll see the Today screen. You can also display it by tapping

and then Today. On the Today screen, you can see at a glance important information for the day.

Tap to view network status and options.

Tap to change volume or mute all sounds.

Tap and hold to change time format. Tap to go to a program.

Tap to change date and time.

Tap to change owner information.

Your day at a glance. Tap to open the associated program.

Tap to disconnect from ActiveSync.

Following are some of the status icons you may see.

36

Chapter 2: Basic Skills

Meaning Status Icon

Turns all sounds on and off

Main battery is charging

Main battery is low

Main battery is very low

Main battery is full

Connection is active

Connection is inactive

Synchronization is occurring

Notification that one or more instant messages were received

Notification that one or more email messages were received

Traffic Monitoring Utility (W-LAN model only)

NOTE If more notification icons need to be displayed than there is room to display them, the Notification icon, , will display.

Tap the icon to view all notification icons.

Program

You can switch from one program to another by selecting it from the menu. (You can customize which programs you see on this menu. For information,

see "Adjusting Settings," later in this chapter.) To access some programs,

you'll need to tap , Programs, and then the program name.

You can also switch to some programs by pressing a program button. Your device has one or more program buttons located on the front or side of the

device. The icons on the buttons identify the programs they switch to.

NOTE Some programs have abbreviated labels for check boxes

and drop-down menus. To see the full spelling of an abbreviated label, tap and hold the stylus on the label. Drag the stylus off the label so that the command is not carried out.

37

Toshiba Pocket PC e800/e805 User's Guide

The following table contains a partial list of programs that are on your

device. Look on the Toshiba Pocket PC Companion CD for additional programs

that you can install onto your device.

Description	Program	Icon
-------------	---------	------

ActiveSync	Synchronize information between your device and computer.	
------------	---	--

Calendar	Keep track of your appointments and create meeting requests.	
----------	--	--

	Keep track of your friends and colleagues.	Contacts
--	--	----------

	Send and receive email messages.	Inbox
--	----------------------------------	-------

Pocket Internet Explorer	Browse Web and WAP sites, and download new programs and files from the Internet.	
--------------------------	--	--

Notes	Create handwritten or typed notes, drawings, and recordings.	
-------	--	--

	Keep track of your tasks.	Tasks
--	---------------------------	-------

Pocket Excel	Create new workbooks or view and edit Excel workbooks created on your computer.	
--------------	---	--

MSN Messenger	Send and receive instant messages with your	
---------------	---	--

MSN Messenger	contacts.	
---------------	-----------	--

Pocket Word	Create new documents or view and edit Word documents created on your computer.	
-------------	--	--

38

Chapter 2: Basic Skills

Navigation Bar and Command Bar

The navigation bar is located at the top of the screen. It displays the active

program and current time, and allows you to switch to programs and close screens.

Use the command bar at the bottom of the screen to perform tasks in

programs.

The command bar includes menu names, buttons, and the Input Panel button. To create a new item in the current program, tap New.

To

see the name of a button, tap and hold the stylus on the button. Drag the

stylus off the button so that the command is not carried out.

39

Toshiba Pocket PC e800/e805 User's Guide

Tap and hold to display the pop-up menu.

Lift the stylus and tap the action you want

Tap outside the menu to close it without performing an action.

Pop-up Menus

With pop-up menus, you can quickly choose an action for an item. For example, you can use the pop-up menu in the contact list to quickly delete

a contact, make a copy of a contact, or send an email message to a contact.

The actions in the pop-up menus vary from program to program. To access a pop-up menu, tap and hold the stylus on the item name that you

want to perform the action on. When the menu appears, lift the stylus, and

tap the action you want to perform. Additionally, you can tap anywhere outside the menu to close the menu without performing an action.

40

Chapter 2: Basic Skills

Notifications

Your device reminds you in a variety of ways when you have something to

do. You can be notified in any of the following ways:

- A message box appears on the screen.

- A sound, which you can specify, is played.

- A light flashes on your device.

To choose reminder types and sounds for your device, tap and then Settings. In the Personal tab, tap Sounds & Notifications. The

options you choose here apply throughout the device.

Enter Information on Your Toshiba Pocket

PC

You have several options for entering new information:

Use the input panel to enter typed text, either by using the soft keyboard

or other input method.

Write directly on the screen.

Draw pictures on the screen.

Speak into your device microphone to record a message.

Use Microsoft® ActiveSync® to synchronize or copy information from your computer to your device. For more information on ActiveSync, see ActiveSync Help on your computer.

Entering Text Using the Input Panel in the VGA Mode

Use the input panel to enter information in any program on your device.

You can either type using the soft keyboard or write using Letter Recognizer,

Block Recognizer, or Transcriber in VGA mode. In either case, the characters appear as typed text on the screen.

To show or hide the input panel, tap Input Panel. Tap the arrow next to

the Input Panel button to see your choices.

41

Toshiba Pocket PC e800/e805 User's Guide

Tapping the CAP key while using the soft keyboard, the lowercase soft keyboard appears

When you use the input panel, your device anticipates the word you are typing or writing and displays it above the input panel. When you tap the

displayed word, it is inserted into your text at the insertion point.

The more

you use your device, the more words it learns to anticipate.

42

Chapter 2: Basic Skills

To change word suggestion options, such as the number of words suggested at one time, tap , Settings, Personal tab, Input, and then the Word Completion tab.

To type with the soft keyboard:

1. Tap the arrow and then Keyboard.

NOTE

2. On the soft keyboard that is displayed, tap the keys with your stylus:

NOTE To use larger keys, tap the arrow, Options, select Keyboard in Input method, and then select Large Keys.

To use Letter Recognizer:

With Letter Recognizer you can write letters using the stylus just as you

would on paper.

1. Tap the arrow and then Letter Recognizer.

2. Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the

screen. For specific instructions on using Letter Recognizer, with Letter

Recognizer open, tap the question mark next to the writing area.

To use Block Recognizer:

With Block Recognizer you can input character strokes using the stylus that are similar to those used on other devices.

1. Tap the arrow and then Block Recognizer.

43

Toshiba Pocket PC e800/e805 User's Guide

2. Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the

screen. For specific instructions on using Block Recognizer, with Block Recognizer open, tap the question mark next to the writing area.

To use Transcriber:

With Transcriber you can write anywhere on the screen using the stylus just as you would on paper. Unlike Letter Recognizer and Block Recognizer,

you can write a sentence or more of information. After you finish writing, pause and let Transcriber change the written characters to typed characters.

1. Tap the arrow and then Transcriber.

2. Write anywhere on the screen.

For specific instructions on using Transcriber, with Transcriber open,

tap

the? in the lower, right-hand corner of the screen.

To select typed text:

If you want to edit or format typed text, you must select it first.

?Drag the stylus across the text you want to select.

You can cut, copy, and paste text by tapping and holding the selected words and then tapping an editing command on the pop-up menu, or by tapping the command on the Edit menu.

Writing on the Screen

In any program that accepts writing, such as the Notes program, and in

the Notes tab in Calendar, Contacts, and Tasks, you can use your stylus to write directly on the screen. Write the way you do on paper. You can

edit and format what you've written and convert the information to text at a

later time.

44

Chapter 2: Basic Skills

To write on the screen:

?Tap Pen to switch to writing mode. This action displays lines on the screen to help you write.

Tap the Pen button and use your stylus like a pen.

NOTE Some programs that accept writing may not have the Pen button. See the documentation for that program to find out how to switch to writing mode.

To select writing:

If you want to edit or format writing, you must select it first.

1. Tap and hold the stylus next to the text you want to select until the

insertion point appears.

2. Without lifting, drag the stylus across the text you want to select.

If you accidentally write on the screen, tap Tools, then Undo and try again. You can also select text by tapping Pen to deselect it and then dragging the stylus across the screen.

You can cut, copy, and paste written text in the same way you work with

typed text: tap and hold the selected words and then tap an editing command

on the pop-up menu, or tap the command on the Edit menu.

To convert writing to text:

Tap Tools and then Recognize.

45

Toshiba Pocket PC e800/e805 User's Guide

If you want to convert only certain words, select them before tapping Recognize on the Tools menu (or tap and hold the selected words and then tap Recognize on the pop-up menu). If a word is not recognized, it is

left as writing.

The writing is turned into text.

Select the text you want to convert and tap Recognize on the pop-up menu.

If the conversion is incorrect, you can select different words from a list of

alternates or return to the original writing. To do so, tap and hold the incorrect

word (tap one word at a time). On the pop-up menu, tap Alternates. A menu with a list of alternate words appears. Tap the word you want to

46

Chapter 2: Basic Skills

use, or tap the writing at the top of the menu to return to the original writing.

Tap to return to your original writing.

Or, tap the word you want to use.

Tips for getting good recognition:

Write neatly.

Write on the lines and draw descenders below the line. Write the cross of the "t" and apostrophes below the top line so that they are not confused with the word above. Write periods and commas above the line.

For better recognition, try increasing the zoom level to 300% using the

Tools menu.

?Write the letters of a word closely and leave big gaps between words so that the device can easily tell where words begin and end.

?Hyphenated words, foreign words that use special characters such as accents, and some punctuation cannot be converted.

?If you add writing to a word to change it (such as changing a ??to an

?? after you attempt to recognize the word, the writing you add will not be included if you attempt to recognize the writing again.

Drawing on the Screen

You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you
47

Toshiba Pocket PC e800/e805 User's Guide

select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

To create a drawing:

?Cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in or touching the drawing box become part of the drawing. Drawings that do not cross three ruled lines will be treated as
writing.

NOTE

48

The drawing box indicates
the boundaries of the
drawing.

You may want to change the zoom level so that you can
more easily work on or view your drawing. Tap Tools and
then a zoom level.

Chapter 2: Basic Skills

To select a drawing:

If you want to edit or format a drawing, you must select it first.
?Tap and hold the stylus on the drawing until the selection handle
appears. To select multiple drawings, deselect the Pen button and
then drag to select the drawings you want.

You can cut, copy, and paste selected drawings by tapping and holding
the selected drawing and then tapping an editing command on the pop-up

menu, or by tapping the command on the Edit menu. To resize a drawing, make sure the Pen button is not selected, and drag a selection handle.

Recording a Message

In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a

message. In Calendar, Tasks, and Contacts, you can include a recording in the Notes tab. In the Notes program, you can either create a standalone recording or add a recording to an existing note. If you want to add a recording in a note, open the note first. In the Inbox program, you can

add a recording to an email message.

To create a recording:

1. If you do not see the Record/Playback toolbar, tap .
2. Hold your mobile device's microphone near your mouth or other source of sound.
3. Tap and make your recording.
4. Tap when finished. If you are recording in an open note, an icon will appear in the note. If you are creating a stand-alone recording, it

will appear in the note list.

NOTE You can quickly create a recording by holding down the Record hardware button. When you hear the beep, begin your recording. Release the button when you are finished.

The new recording is stored in the open note or as a stand-alone recording if no note is open.

49

Toshiba Pocket PC e800/e805 User's Guide

To play a recording, tap the recording icon in the open note or tap the

recording in the note list.

Indicates an embedded

recording.

Tap to begin

recording.

Tap to show or hide the Recording toolbar.

Using Text to Speech

Text to Speech synthesizes voice, and reads out emails, text files and text

data on the clipboard. Text to Speech consists of three applications, Mail

Speech, Text Speech and Speech Settings. Mail Speech displays unread emails and reads them out.

Text Speech picks up text files in Toshiba Pocket PC e800/e805 and reads them out. It also reads out text data on clipboard. Speech Settings arranges the settings of Mail Speech and Text Speech. You can use one application of Text to Speech at a time. Please exit the current one to start

another application.

To setup Text to Speech from Companion CD:

1. Make sure your Pocket PC is connected to your computer and that an ActiveSync connection has been established.
2. Start the Text to Speech installation by running the Setup program.
3. Check your Toshiba Pocket PC e800/e805 screen for any additional steps required to complete the installation.

50

Chapter 2: Basic Skills

Mail Speech

To start Mail Speech:

1. Open the Inbox, and set the mail account you want to read out
2. Tap Start, Programs, then Mail Speech.

Mail Speech starts reading the message from the header information of unread email list. As the reading continues, the currently read phrase is

highlighted.

Account name displays here.

the text.

?Stop: Stops reading the text.

?Exit: Exits Mail Speech.

Selected e-mail text displays here.

3. Tap and hold the selected words to display the pop-up Copy menu. Select any of the following:

?Play: Starts reading out the text of the selected email.

?Pause: Stops reading. If you tap Play again, continues reading

4. Tap Tools. Select any of the following:

?Refresh: Refreshes the status of the email database.

?Settings: Starts the Speech Settings.

?Exit: Exits the program.

?About: Displays the version information screen.

51

Toshiba Pocket PC e800/e805 User's Guide

NOTE

Test Speech

Text Speech reads a text file and the data stuck on the clip board.

To read out a text file:

1. Tap Start, Programs, then Text Speech.

52

If the next mail header is chosen during reading of an email, it stops the voice synthesis and the reading, then it starts reading the newly selected mail.

Mail information displayed in the mail header information area is descending order, that is the older mails are on the top and the newer mails are shown in the lower area, by every service.

After all mail is read, the voice service announces, "There is no more unread file.?"

When there is an attached file, the voice service announces "with attachment". It does not announce the "TO" or "CC" of a mail header.

While reading an email, DO NOT synchronize your Toshiba Pocket PC e800/e805 with the PC.

The text may not be displayed correctly depending on the mailer of the sender. US ASCII (us-ascii) and 8-bit Western Europe (iso-8859-x) character code are supported. In case of other codes than the above is used, it may not be displayed correctly. The text used 8-bit Western Europe sometimes may not be displayed correctly and the voice synthesis works incorrectly.

A difference may be between the text displayed by the mailer of Pocket PC and the text currently displayed by Mail Speech. To read out the text displayed in mailer of Pocket PC, copy and paste it into Text Speech to use the

voice synthesis.

This application supports base 64 and quoted-printable non-encoded. If the text is encoded, it cannot to be displayed.

UUENCODE is not supported. When the text is longer than 2k bytes, the part over 2k bytes is not read.

2. From the Tools of the command bar, tap Open. The list of the text files stored in your Pocket PC e800/e805 is displayed.

3. Select any of the following:

Chapter 2: Basic Skills

File list.

?Folder: Select the folder from the pull-down menu.

?Cancel: Close the file selection screen and return to the Text Speech screen.

?Type: Only text file (*.txt) is available.

?File list: Display Name, Folder, Date, Size, Type and Location.

The width for each item can be adjustable. The file to read should be under \My Documents.

53

Toshiba Pocket PC e800/e805 User's Guide

4. Tap the file you want read. The text is displayed.

5. Select any of the following:

To read the text copied on clipboard:

Copied data on clipboard can be read by Text Speech, including data from

Pocket Internet Explorer or Pocket Internet Explorer.

1. Within Pocket Internet Explorer, copy the text data to the clipboard.

2. Tap Start, Programs, then Text Speech. If the Text Speech applica-

3. Tap and hold the Text Area, then select Paste from the pop-up menu. The data on the clipboard is displayed on Text Area. You can input text directly on Text Area, using the Input Panel.

54

T e x t area.

F i l e status.

?Play: Starts reading the text.

?Pause: Stops reading. If you tap Play after Pause, voice synthesis will start from the position where it was paused.

?Stop: Stops reading. If you tap Play after Stop, it will start from the beginning of the text.

?Exit: Exits the program.

tion is already opened and a text data is displayed on Text Area, tap and hold the Text Area, then Clear All from the pop-up menu.

Chapter 2: Basic Skills

4. Tap Play.

NOTE You can input text directly in the Text Area, using the Input Panel The maximum size of a text file or clipboard data to be read is 32KB. Text Speech begins reading at the cursor on the text.

Speech Settings

To start Speech Setting, tap Start, Programs, then Speech Settings. You

can also start Speech Settings by tapping Tools, then Settings on the Mail Speech or the Text Speech screen.

Reading Tab

Select any of the following:

?Tone: Changes the tone of the voice (default value: 0).

?Speed: Changes the reading out speed (default value: 0).

?Default Value: Reset all values to the default.

?Not read more than 2/3 marks: If selected, the continuous marks on the text are skipped when reading out. You can define the skipping case (continuous 2 or 3 marks) from the pull-down list.

55

Toshiba Pocket PC e800/e805 User's Guide

Reading Tab

Select a time interval:
reading the following mail.

Check at least one of the following:

¡E The reading mail turns into a read: Sets the interval time for
¡E Read the name of the sender, Read the subject, Read the date of receipt, Read the message.

¡E After reading wait for: Sets the time interval for reading the following

mail. To read the message while this setting is available, tap the message area within the interval time. Only available when the check box ¡\$Read the message.¡" is cleared.

Default Value: Resets all the values to the default.

Once selected,
the status of the
reading changes
from read to unread.
At least one item
must be selected.
Set the reading
interval time here.

Using My Text

When using Inbox or MSN Messenger, use My Text to quickly insert preset or frequently used messages into the text entry area. To insert a message,

tap My Text and tap a message. Select the message you wish to edit and make desired change.

NOTE You can add text after inserting a My Text message before sending it.

To edit a My Text message, tap Tools and then Edit My Text Messages.

56

Chapter 2: Basic Skills

Tap to select a prewritten message.

Find and Organize Information

The Find feature on your device helps you quickly locate information. On the menu, tap Find. Enter the text you want to find, select a data type, and then tap Go to start the search.

NOTE To quickly find information that is taking up storage space on your device, select Larger than 64 KB in Type.

You can also use the File Explorer to find files on your device and to organize these files into folders.

1. On the menu, tap Programs, and then select File Explorer.
2. Tap My Device, and then tap to open any folder.
3. To change folders, tap My Device, point to your folder, and then tap to open. Tapping Name allows you to sort the folders by ascending or descending order.
4. To create a new folder, tap and hold on the screen, and then select New Folder from the pop-up window.

Toshiba Pocket PC e800/e805 User's Guide

Customize Your Toshiba Pocket PC

NOTE A next to a file name indicates the file is saved on a storage card.

You can move files in File Explorer by tapping and holding the item you want to move, and then tapping Cut or Copy and Paste on the pop-up menu.

You can customize your device by adjusting device settings and installing additional software.

Adjusting Settings

You can adjust device settings to suit the way you work. To see available options, tap , Settings, then the Personal or System tab located at the bottom of the screen.

You might want to adjust the following:

- ?Clock, to change the time or to set alarms

- ?Menus, to customize what appears on the menu, and to enable a pop-up menu from New

- ?Owner Information, to enter your contact information

- ?Password, to limit access to your device

- ?Power, to maximize battery life

- ?Today, to customize the look and the information that is displayed on

the Today screen

Adding or Removing Programs

Programs added to your device at the factory are stored in ROM (readonly memory). You cannot remove this software, and you'll never accidentally lose ROM contents. ROM programs can be updated using special installation programs with a *.xip extension. All other programs and data files added to your device after factory installation are stored in RAM

(random access memory).

You can install any program created for your device, as long as your device has enough memory. The most popular place to find software for your device is on the Pocket PC Web site (<http://www.microsoft.com/mobile/pocketpc>).

Chapter 2: Basic Skills

To add programs using ActiveSync

You'll need to install the appropriate software for your device on your desktop computer before installing it on your device.

1. Determine your device and processor type so that you know which version of the software to install.

Tap and then Settings. On the System tab, tap About. In the Version tab, make a note of the information in Processor.

2. Download the program to your computer (or insert the CD or disk that contains the program into your computer). You may see a single *.xip, *.exe, or *.zip file, a Setup.exe file, or several versions of files

for different device types and processors. Be sure to select the program designed for the Toshiba Pocket PC e800/e805 and your device processor type.

3. Read any installation instructions, Read Me files, or documentation that comes with the program.

Many programs provide special installation instructions.

4. Connect your device and computer.

5. Double-click the *.exe file.

If the file is an installer, the installation wizard will begin. Follow the directions on the screen.

Once the software has been installed on your computer, the installer will automatically transfer the software to your device.

If the file is not an installer, you will see an error message stating that the program is valid but it is designed for a different type of computer. You will need to move this file to your device. If you cannot find any installation instructions for the program in the Read Me file or documentation, use ActiveSync Explore to copy the program file to the Program Files folder on your device. For more information on copying files using ActiveSync, see ActiveSync Help.

Once installation is complete, tap , Programs, and then the program icon to switch to it.

1. Determine your device and processor type so that you know which version of the software to install.

Tap and then Settings. On the System tab, tap About. In the Version tab, make a note of the information in Processor.

2. Download the program to your device straight from the Internet using Pocket Internet Explorer. You may see a single *.xip, *.exe or *.zip file, a Setup.exe file, or several versions of files for different device types and processors. Be sure to select the program designed for the Toshiba Pocket PC e800/e805 and your device processor type.

3. Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions.

4. Tap the file, such as a *.xip or *.exe file. The installation wizard will

begin. Follow the directions on the screen.

To add a program to the Start menu

Tap , Settings, Menus, the Start Menu tab, and then the check box for the program. If you do not see the program listed, you can either use File

Explorer on the device to move the program to the Start Menu folder, or

use ActiveSync on the computer to create a shortcut to the program and place the shortcut in the Start Menu folder.

?Using File Explorer on the device: Tap , Programs, File

Explorer, and locate the program (tap the folder list, labeled My Documents

by default, and then Local Device to see a list of all folders on the device). Tap and hold the program and tap Cut on the pop-up menu. Open the Start Menu folder located in the Windows folder, tap and hold a blank area of the window, and tap Paste on the pop-up menu. The program will now appear on the menu. For more information on using File Explorer, see "Find and Organize Information," earlier in this chapter.

?Using ActiveSync on the computer: Use the Explorer in ActiveSync to explore your device files and locate the program. Right-click the program, and then click Create Shortcut. Move the shortcut to the Start Menu folder in the Windows folder. The shortcut now appears on the menu. For more information, see ActiveSync Help.

To remove programs

Tap and then Settings. On the System tab, tap Remove Programs.

If the program does not appear in the list of installed programs, use File

Explorer on your device to locate the program, tap and hold the program, and then tap Delete on the pop-up menu.

60

Chapter 2: Basic Skills

Setting Password

You can protect data or settings from a third person by setting a password which is requested when turning power on.

1. Tap and then Settings. On the Personal tab, tap Password.
2. Select the type of password you would like to use.
3. Enter a password and tap OK.
4. Tap YES on the confirmation screen. The password is saved and the screen returns to the Personal tab screen

If you tap YES on the confirmation screen to return to the Personal tab

screen, it becomes necessary to enter the password even for displaying the Password setting screen.

In case you forget the password, it is necessary to initialize the Pocket PC. Please note that when initialization is executed, data or settings stored in the Pocket PC are all deleted.

61

Toshiba Pocket PC e800/e805 User's Guide

To Set Screen Light

You can set the screen brightness for better sight according to a place of

use. You can also set the time that elapses until the screen light turns off

automatically after the last operation.

1. Tap and then Settings. On the System tab, tap Screen Light.
2. Set the Screen Light on battery power.
-or set the screen light on External power.

62

3. Set the Brightness level.

4. When finished, tap OK to return to the System tab screen.

Setting Power

1. Tap and then Settings. On the System tab, tap Power.

Options are 1, 2,3,4, and 5

minutes until device will turn off

in battery-powered mode if not

used. Check box to left to

engage this feature.

Options are 1, 2, 5,10, 15, and

30 minutes until device will turn

off in external-powered mode if

not used. Check box to left to

engage this feature.

2. Set the Power.

You can set to confirm the battery remaining power and the time that elapses until the power turns off after the last operation.

63

Chapter 2: Basic Skills

Tap and set the screen light g

brightness level by move the cursor g y

up or down. If Power Save is

activated, the screen light turns

o f f .

Toshiba Pocket PC e800/e805 User's Guide

3. Select the Option tab to adjust when battery alarm will come on, and

to enable/disable Record and Program buttons wake up.

64

Chapter 2: Basic Skills

4. Select CPU speed tab to set the CPU performance. To conserve battery power, but decrease performance, select 200 MHz.

Tap Apply to change the setting, then the confirmation screen is displayed.

If you tap Yes, your LCD screen will become black and come back in a few seconds, and then the setting has changed. If you tap No, the setting has not changed.

5. When finished, tap OK to return to the System tab screen.

65

Toshiba Pocket PC e800/e805 User's Guide

Setting Memory

You can adjust the data storing memory and the program running memory. You can also confirm the free space of a storage card and so on. Memory for the Pocket PC is managed automatically.

To change Memory allocation:

1. Tap and then Settings. On the System tab, tap Memory to display the Memory setting screen.
2. Drag the knob left to right to adjust the memory allocation between Storage and Program.
3. When finished, tap OK to return to the System tab screen.

To confirm usage status of a storage card:

1. Tap Storage card tab on the Memory setting screen.
2. When finished, tap OK to return to the System tab screen.

To release memory:

If memory is running short of its capacity, i.e., you will receive an error

message display, the following methods are available to release the memory:

Transfer data to a storage card and the like and delete them from the Pocket PC, delete unnecessary files, quit a program in execution, and/or delete a program not in use.

For more information on detailed operation method or the memory release method other than the above, see online help.

66

Chapter 2: Basic Skills

NOTE

Flash ROM Disk (NAND Flash Memory)

The Flash ROM Disk (NAND Flash Memory) contains the built-in storage for the Pocket PC.

Data, files or programs can be stored on the Flash ROM Disk from the following

sources: File Explorer, Pocket Word, Pocket Excel, Notes of Pocket Outlook, and DataBackup.

Data can be accessed on the Flash ROM Disk by using File Explorer.

1. On the Start menu, tap Programs, and then File Explorer.
2. Open Local Device folder, and then tap Flash ROM Disk.

To confirm the memory available on the Flash ROM Disk, do the following:

1. On the Start menu, tap Settings, System tab, and then Memory.
2. Tap the Storage Card tab, and then select Flash ROM Disk.

To store data from Pocket Word, Pocket Excel or Notes of Pocket Outlook, open the application and do the following:

1. Select a location for storage by tapping Tools, Options, and then select either CF card, SD Card or Flash ROM Disk.
2. Tap OK.

When accessing the data on the Flash ROM Disk, DO NOT turn off the power or reset the Pocket PC.

To store attachments in Inbox of Pocket Outlook, open the application and then Tools, Options, Storage Tab. Select Store attachments on storage card. This will store the attachments on the Flash ROM Disk.

Data stored on the Flash ROM Disk are not backed up. See "Making a Backup" on page 185 for information on how to make a backup of data on the Flash ROM Disk. Periodic backups of data stored on the Flash ROM Disk is recommended.

67

Toshiba Pocket PC e800/e805 User's Guide

Setting Advanced Sounds

This program allows you to adjust the volume of the built-in speaker and

headphone speaker on your Pocket PC. To adjust the system volume, tap Start, Settings, Personal tab, Sounds and Notifications.

1. Tap Start and then Settings. On the System tab, tap Advanced Sounds.
2. Select the Built-in tab and adjust the Volume of the built-in speaker.
3. If using headphones, select the Headphone tab and make adjustments.

Setting Microphone

This program sets the Automatic Gain Control (AGC) for the built-in microphone.

1. Tap and then Settings. On the System tab, tap Microphone.
2. Select the box below for automatic gain control or leave the box clear for manual control.

68

Chapter 2: Basic Skills

daytime

Tap to select the city.

Setting the World Clock

World Clock displays the time and date of multiple cities in a screen.

You

can select the cities easily, by tapping the map or pull-down list.

Home

nighttime

Visit1

Visit2

DST (Daylight Saving Time) is applied automatically.

1. Tap Tools.

2. Select any of the following:

?Select: A zoomed map is displayed on the screen. You can select a city and assign to Home or others, by tapping on the map. (For detail, refer to the next page.)

?Alarm: Alarm setting is displayed. You can set alarm, or arrange the detail settings.

?About: The version information is displayed.

NOTE

To select the city from a zoomed map:

1. Tap Select from Tools menu.

69

Toshiba Pocket PC e800/e805 User's Guide

2. Select the city by tapping on the zoomed map.

3. Select Home, Visit1 or Visit2 from the pull-down list.

4. Tap OK.

Toshiba Voice Recorder (TVR)

The Toshiba Voice Recorder (TVR) is a media player for both desktop and

Pocket PCs. TVR offers a flexible way to record your voice as a .wav file.

To set the TVR options:

1. Tap File, and then Options.

- - - T O S H I B A V o i c e R e c o r d e r

2. Select Assign to Record button.

3. Confirm that the document path is /My Documents.

70

The information of
the selected city is

displayed.

Chapter 2: Basic Skills

To use TVR to record:

1. Tap the record button, PDA starts and immediately records a clip.
2. Tap on record again and stop recording. File names are listed as "TVRMMDDYYYYHHMMSS.wav". These are in the date (DD/MM/YEAR HH:MM:SS), length (HH:MM:SS) and quality (LP/HQ) format.
3. You can toggle between time recorded and time available to record given storage in current media at the current record quality level.

To play a file from the TVR:

1. Tap on the clip name.
2. Tap Stop button to stop.
3. Scroll with jog-dial and click in the action button to play the file.

Tap

Stop button to stop.

4. You can tap on the time being displayed and toggle between time played and time left to play to display left time.

NOTE Clips recorded on the TVR can be played through Microsoft Windows Media Player on computers with either Windows 2000 and Windows XP operating systems.

Need actual screen shot

The TVR offers several convenient features:

AGC: If the Automatic Gain Control (AGC) is enabled, the slider is disabled.

71

Toshiba Pocket PC e800/e805 User's Guide

Assign Record button: This assigns the TVR to the record button

Select clips location: Open a small window with the top directory tree of the PDA (including storage cards).

Single tap to play.

Combo slider/progress bar control:

• Playback: The slider advances to the end of clip at the same time as progress bar. You can move the slider to advance/rewind playback.

NOTE Playback can only be done at certain time increments, 1-2 seconds, (e.g., until the end of the file).

• Recording: The slider is fixed at the end position (right). The progress bar shows the time left in the current storage device (PDA, SD, etc.) at the current quality level.

Microphone gain slider and combo box are available to choose pre-set gain settings and one check box to enable/disable the AGC.

The Record button, when it is mapped to the TVR, will start the TVR and immediately start recording. To stop recording, press the same button again (no need to keep the button pressed).

Using Voice Command

With Voice Command, you can operate Pocket PC "hands free" without tapping or pressing buttons on your Toshiba Pocket PC e800/e805.

The Voice Command application has 3 components:

- Global Command: the command always available

- User Command: the command that users can assign freely, always available.

- Command for each application: Command available only for the foreground windows.

Installing the Voice Command

1. Make sure your Toshiba Pocket PC e800/e805 is connected to your computer and that an ActiveSync connection has been established.
2. Start the Voice Command installation by running the Setup program.
3. After the program is installed successfully, a message displays to inform you that the application has been allocated to the program button 5 (recording button) automatically.

72

Chapter 2: Basic Skills

4. After installation, the system requires resetting.

NOTE The Voice Command cannot "read" without the Toshiba Speech System installed. Installation of the Toshiba Speech System is highly recommended.

Once Voice Command is installed on your Toshiba Pocket PC e800/e805, the program button 5 (recording button at initial setting) is "assigned" and recording with program button 5 is no longer available. If you want to use program button 5 for recording while the Voice Command is assigned, change the button assignment by tapping Start, Settings, and then Buttons.

Setting Up Voice Command

Once installed on your Toshiba Pocket PC e800/e805, the Voice Command Settings icon is displayed on Today screen. Tap this icon to launch

the Voice Command Settings application.

Tap to launch

Voice Command

Settings.

Global Command

1. Press the recording button and release immediately. The Voice Command starts. Wait for a notification sound to start speaking.

2. Say one of the available voice commands. For example, to launch Inbox, say "run Inbox." When the command is successfully recog-

73

Toshiba Pocket PC e800/e805 User's Guide

nized, a confirmation tone sounds, and the Inbox screen appears. If the command is not recognized, a rejection tone sounds and the screen does not change.

User Command

You can define voice commands on Command Settings.

There are two kinds of commands:

?Commands to insert texts

?Commands to launch applications.

To use the commands to insert texts:

1. On the User Commands tab in the Voice Command Settings, define a phrase you like to a command. For example, define "Thank you for your email about "for the command insert text one.

2. Open the Inbox, then tap New from the command bar. At the creating the message screen, say "insert text one.?The "Thank you for your email about "is displayed on the screen.

To use the commands to launch applications:

1. On the User Commands tab in the Voice Command Settings, assign an application you like to a command. For example, assign Solitaire to the command run program one.

2. Say "run program one." The Solitaire screen is displayed.

NOTE When you say an undefined command, nothing happens even if the command is recognized.

Using Voice Command for Each Application

For example, you can use voice commands in the Calendar application.

1. With the Calendar open, say "Very next appointment." The listing mode screen appears, and it starts reading out very next appointment. You can display the screen also by saying, "Move to listing

mode." For detail of the command list, refer to the Commands tab on the Voice Command Settings.

74

Chapter 2: Basic Skills

Tap to stop reading.

NOTE

Voice Command Settings

2. In listing mode, voice command for Calendar is active to current focused appointment. For example, saying "read subject" reads the subject of current focused appointment.

The target term of appointment is one month before to one month after, based on current time.

For other commands, you can check the command from the Commands tab of the Voice Command Settings.

You can check the voice command list or arrange the settings of voice command. To start the Voice Command Settings, tap Start, Programs, and then Voice Command Settings.

75

Toshiba Pocket PC e800/e805 User's Guide

Checking the Command List

On the Commands tab, you can select the all commands installed.

Displays the information for the selected command.

Tap Tools, and then About to display the version information of the Voice Command Settings.

Arrange the Recognition Level of Voice Command

1. Tap Settings on the Voice Command Settings screen.

2. Set the recognition level as required. The higher level of recognition that is set, the more sensitive the program is to the nuances of your voice, and it makes it easier for your Toshiba Pocket PC e800/e805 to recognize the command. On the other hand, setting a higher level of recognition may decrease voice recognition within noisy environments.

It is recommended to set lower level within noisy environments.

76

Chapter 2: Basic Skills

Tap and select the

recognition level

(0 to 5).

To define the action for a User Command:

1. Tap User Command tab on the Voice Command Settings screen.

77

Toshiba Pocket PC e800/e805 User's Guide

To define text for the command:

1. Tap and hold the command insert text xxx, then select Edit.

Tap to clear the action
that you defined for the
command.

NOTE

You can only clear the action for the command. The command
is not deleted.

2. Input the text you want to define at the text area. For example,
input

"Thank you for your email about. "Tap OK.

To assign a program to the command:

1. Tap and hold the command run program xxx, then select Edit.
2. Select the application you want to assign by tapping the Browse.

78

3. Tap OK.

Using ConfigFree?

ConfigFree?is a set of utilities used for configuring networks that
use

both wired and wireless network devices. These utilities include the
following:

?ConfigFree Launcher?The ConfigFree Launcher utility is used as a
shortcut to open ConfigFree utilities.

?Search for Wireless Devices?This utility displays the available
Access Point and 802.11 ad hoc networks.

?Connectivity Doctor ?The Connectivity Doctor utility is used to help
fix networking problems with your Pocket PC.

?Profile Settings ?The Profiles utility is used to enable a faster and
more efficient network configuration. Multiple profiles can be created

Starting ConfigFree

To start ConfigFree:

for various network configurations.

1. Tap Start, Program, then ConfigFree.
2. Tap the ConfigFree utility you want.

Chapter 2: Basic Skills

Enter the parameter specific to the program.

79

Toshiba Pocket PC e800/e805 User's Guide

ConfigFree Launcher

ConfigFree Launcher registers as an icon on the command bar at the bottom of Today screen. You can switch to any ConfigFree utility by using ConfigFree Launcher. A shortcut to the network configuration of your operating system is also provided. Tap the icon to display a list of profiles.

Profile Settings

Profile Settings enable a faster and more efficient network configuration.

The network configuration that you create by this feature is managed as a

profile. When you select a profile created using this feature, the network

configuration of the PDA switches to the network configuration of that profile.

Search for Wireless Devices

Search for Wireless Devices displays the available Access Point and 802.11 ad hoc networks visually. You can confirm these devices around you easily.

Connectivity Doctor

Connectivity Doctor can help to fix networking problems that occur with your pocket PC. Use this feature when you encounter a networking problem.

VQ-Select Utility

Using the VQ-Select utility, you can change the screen display mode from

Video Graphics Array (VGA), which uses 320 x 240 pixels, to Quarter Video Graphics Array (QVGA), which uses 240 x 320 pixels. The default mode is VGA.

NOTE

80

Be sure to close all open programs and save your data

before changing the screen display mode.

Chapter 2: Basic Skills

To change screen display modes

1. Tap Start, then VQ-Select.

A reset dialog warning box displays.

2. Tap OK.

3. Set the screen display mode you want (VGA or QVGA) and then restart the device. When the Toshiba Pocket PC e800/e805 restarts, your selected mode appears.

81

Toshiba Pocket PC e800/e805 User's Guide

Viewing menus in VGA mode

You can view system menus in VGA mode by tapping the VQ-Select setting, as shown in the following screen.

Toshiba IP Phone for Pocket PC

Toshiba IP Phone for Pocket PC is an IP Phone utility that lets you:

- ?Call an IP Phone (VLI Gphone, Toshiba IP Phone)

- ?Call a phone

- ?Use answering machine functions on your Toshiba Pocket PC e800/e805

- ?Check your buddies' current status or notify your buddies of your current

- status (offline, online, busy or away)

- ?Send and receive instant messages while you're talking

82

Chapter 2: Basic Skills

Sign-up

If you sign up VLI Gphone Buddy Service, you can use all the functions of

Toshiba IP Phone for Pocket PC shown here. You can find the Gphone Buddy Service sign-up page at <http://www.gphoneonline.com>.

Without the VLI Gphone Buddy Service, all you can do is to call an IP Phone by IP address answer a phone call or hang up a phone call.

Launching an application

1. Tap Start, Program, then Toshiba IP Phone.

2. When you launch it for the first time, enter your G-Number, password, and name. If you select "Automatic sign-in," Toshiba IP Phone for Pocket PC signs in automatically next time you launch it.

3. Tap Sign in. Toshiba IP Phone for Pocket PC displays the following information:

Date, Time

Phone call state (talk times, if connected)

Your party 's name

Wireless link quality (the number of bars by the antenna icon)

Good: Three

Not bad: Two

Poor: One

No wireless link: Zero

The number of new voice mail stored in your Toshiba IP Phone for Pocket PC.

Your status (Online, Offline, Busy or Away)

Calling an IP phone

To call an IP phone:

1. Tap Call.

Chapter 2: Basic Skills

2. Tap the List tab if you use your buddy list. You can also tap the Icon

tab if you use your buddy icons.

3. Tap a buddy.

4. Tap Connect.

Icon view List view

There are four buddy statuses shown below:

List view/Icon view Status

Online

Off line

Busy

Away

Calling a phone

To call a phone:

1. Tap Phone, and enter the phone number.

2. Tap Connect.

NOTE When call is not idle, your current status becomes Busy.

Calling a phone using telephone directory

To call a phone using telephone directory:

1. Tap Phone.
2. Tap Telephone Directory.
3. Tap a contact on your telephone directory.
4. Tap Connect.

86

Chapter 2: Basic Skills

Answering a call

To answer a call while hearing a phone ring, tap Call.

NOTE When call is not idle, your current status becomes Busy.

Answering a call automatically

Toshiba IP Phone can answer a call automatically after answering timer has expired. You can configure whether you activate this function or not.

When you activate this function, you can also customize the value of answering timer. The default value of answering timer is 10 (seconds). The length of answering message is less than or equal to 20 seconds. You can configure answering message on the condition shown in "Answering message audio file" on page 96.

Your calling party can record their voice message after hearing answering

message. The length of recorded message is less than or equal to 20 seconds.

87

Toshiba Pocket PC e800/e805 User's Guide

Holding a call

To hold a call, tap Hold. Once the call is on hold, the Hold button turns

into a Talk button. While holding a call shown below, if you tap Talk, you can talk again.

Hanging up

To hang up, tap Hang up.

Redialing using outgoing call history

You can redial using outgoing call history. You can configure the number

of outgoing call history stored at the same time. The default value is 20. If

it exceeds the limit, the oldest outgoing call history is deleted.

To redial using outgoing call history:

88

1. Tap Call history.
2. Tap the Outgoing tab.
3. Select an outgoing call history.
4. Tap Connect.

Calling back using incoming call history

You can call back using incoming call history. You can configure the number

of incoming call history stored at the same time. The default value is

20. If it exceeds the limit, the oldest incoming call history is deleted whether it has voicemail message or not.

To call back using incoming call history:

1. Tap Call history
2. Tap the Incoming tab.
3. Select an incoming call history.

Chapter 2: Basic Skills

89

Toshiba Pocket PC e800/e805 User's Guide

4. Tap Connect.

Muting microphone

To mute the microphone, tap Mute. To restore the microphone, tap Mute again.

Reducing acoustic echo

If you get an echo while speaking, use headphones. Acoustic echoes are caused by the microphone's close location your speaker. If you activate the voice switch function, you can reduce this acoustic echo as well.

90

Chapter 2: Basic Skills

To activate voice switch function while you're talking, tap VSW. To cancel

this function, tap VSW again.

Adding a contact to your buddy list

To add a contact: to your buddy list:

1. Tap Call to open your buddy list.
2. Tap the List tab if you use your buddy list. You can tap Icon tab if you use your buddy icons.
3. Tap Edit, then tap Add.
4. Enter the name and G-Number (these are required fields). Other fields, such as Email and whether it is Toshiba IP Phone or not, are optional.
5. Tap Save.

91

Toshiba Pocket PC e800/e805 User's Guide

Modifying a contact in your buddy list

To modify a contact: information in your buddy list:

1. Tap Call to open your buddy list.
2. Tap the List tab if you use your buddy list. You can tap Icon tab if you use your buddy icons.
3. Tap Edit.
4. Choose a contact.
5. Tap Modify
6. Enter the name and G-Number (these are required fields). Other fields, such as Email and whether it is Toshiba IP Phone or not, are optional.
7. Tap Save.

Removing a contact from your buddy list

To remove a contact from your buddy list:

1. Tap Call to open your buddy list.
2. Tap the List tab if you use your buddy list. You can tap the Icon tab if you use your buddy icons.
3. Tap Edit
4. Choose a contact.

92

5. Tap Delete.

Playing back a voicemail

To play back a voicemail:

1. Tap Call history.
2. Tap the Incoming tab.

3. Select an incoming call history with voicemail button.
4. Tap Play back.
5. Start playing back a voicemail by using Voice Recorder which has been executed automatically.

The green voicemail button means you've already listened to the voice message, and the red voicemail button means you've not listened to the voice message yet.

Chapter 2: Basic Skills

93

Toshiba Pocket PC e800/e805 User's Guide

Instant messaging (IM)

While you connect to another Toshiba IP Phone user by making an IP phone call, you can send and receive instant message each other.

To start instant messaging:

1. Call another Toshiba IP phone user and wait to have the call answered.
2. Tap IM after the call is connected.
3. Type your message in the second text box directly above the Send, Clear and Exit buttons.
4. Tap Send.

All the messages including yours are displayed in the first message box from the top.

Type your messages here.

Presence Service (PS)

You can notify your buddies of your current status

1. Tap PS.
 2. Select your new status.
 3. Tap Notify if you notify your buddies of your new status.
- Tap one of these status conditions.

94

Chapter 2: Basic Skills

Calling an IP phone by its IP address

If you tap IP Connect at the first dialog after launching Toshiba IP Phone

for Pocket PC, you can call an IP phone by its IP address.

1. Tap IP Connect at the first dialog after launching Toshiba IP Phone

for Pocket PC

2. Tap Call, and enter the IP address.

3. Tap Connect.

If you sign up VLI Gphone Buddy Service, you can use all the functions of

Toshiba IP phone for Pocket PC shown here. Without the VLI Gphone Buddy Service, you are limited to calling an IP phone by its IP address, answering and hanging up on a call.

Configuring Toshiba IP Phone for Pocket PC

You can configure the following by tapping Configure:

Ringer audio file

You can configure ringer audio file. You can choose one of ringer audio files that Toshiba IP phone for Pocket PC has. The default ringer audio file

is defringer.wav. You can also select a ringer audio file of your own creation.

NOTE When creating your own ringer audio files, make sure that it is a 16-bit, 8 KHz, PCM recorded monophonic file (not stereophonic), and no more than 30 seconds in length.

Automatic answer

You can configure your Toshiba Pocket PC e800/e805 to automatically answer.

95

Toshiba Pocket PC e800/e805 User's Guide

Answering timer

When you activate Automatic answer function, you can also customize the value of answering timer. The answering default value is 20 (seconds);

the range must be from 10 (seconds) to 30 (seconds).

Answering message audio file

You can configure answering message file (wav file) to a calling party in

the case of automatic answer. You can also select an audio file of your own creation.

NOTE When creating your own answering message audio files, make sure that it is a 16-bit, 8 KHz, PCM recorded monophonic file (not stereophonic), and no more than 20 seconds in length.

Audio file while holding a call

You can configure an audio file to play for your party while the call is holding.

You can choose one of the many available audio files that came standard with Toshiba IP Phone for Pocket PC. The default audio file is defrhold.wav. You can also select an audio file of your own creation. NOTE When creating your own answering message audio files, make sure that it is a 16-bit, 8 KHz, PCM recorded monophonic file (not stereophonic), and no more than 30 seconds in length.

The maximum number of outgoing call history

You can configure the maximum number of outgoing call history stored at

the same time. The maximum number default value is 10; the value must be 10 or 20.

The maximum number of incoming call history

You can configure the maximum number of incoming call history stored at

the same time. The maximum number default value is 10; the value must be 10 or 20.

96

Chapter 2: Basic Skills

97

Toshiba Pocket PC e800/e805 User's Guide

Chapter 3:

Microsoft ActiveSync

Using ActiveSync, you can synchronize information between your device and PC or server. Synchronization compares the data on your device with your PC and updates both computers with the most recent information. For example:

?Keep Pocket Outlook data up-to-date by synchronizing your device with Microsoft Outlook data on your PC.

?Synchronize Microsoft Word and Microsoft Excel files between your device and desktop computer.

Your files are automatically converted to the correct format.

By default, ActiveSync does not automatically synchronize all types of information. Use ActiveSync options to turn synchronization on and off for specific information

types.

With ActiveSync, you can also:

- ?Change synchronization settings and synchronization schedule.

- ?Copy files between your device and PC.

- ?Back up and restore device information.

- ?Add and remove programs on your device.

Before you begin synchronization, install ActiveSync on your PC from the

Toshiba Pocket PC Companion CD. For more information on installing ActiveSync, see your Quick Start card. ActiveSync is already installed on

your device.

After installation is complete, the ActiveSync Setup Wizard helps you connect

your Pocket PC to your PC, set up a partnership so you can synchronize information between your device and your desktop computer, and customize your synchronization settings. Your first synchronization process

will automatically begin when you finish using the wizard.

After your first synchronization, take a look at Calendar, Contacts, and

Tasks on your device. You'll notice that information you've stored in Microsoft Outlook on your PC has been copied to your device, and you didn't have to type a word. Disconnect your device from your PC and you're ready to go!

98

Chapter 3: Microsoft ActiveSync

Once you have set up ActiveSync and completed the first synchronization process, you can initiate synchronization from your device. To switch to

ActiveSync on your device, tap , and then tap ActiveSync.

For information about using ActiveSync on your PC, start ActiveSync on

your PC, and then see ActiveSync Help.

For more information about ActiveSync on your device, switch to Active-Sync, tap , and then tap Help.

View connection
status.

Tap to connect and
synchronize.

Tap to stop synchronization.

Tap to synchronize via IR or
change synchronization
settings.

Change the synchronization schedule

Using ActiveSync, you can schedule synchronization of your device on
two separate

schedules. Use the peak times schedule to synchronize during working
hours or other times you experience higher mail volumes. Use the off-peak
schedule to synchronize during times when you experience lower mail
volumes.

In ActiveSync on the device, tap Tools, Options, then select the Mobile
Schedule tab.

1. To synchronize periodically during peak times, select the frequency
of synchronization in the During peak times, sync list.

2. To synchronize periodically during off-peak times, select the
frequency

of synchronization in the During off-peak times, sync list.

3. To set the days and hours for peak times, tap Peak Times.

99

Toshiba Pocket PC e800/e805 User's Guide

Chapter 4:

Microsoft Pocket Outlook

Microsoft® Pocket Outlook includes Calendar, Contacts, Tasks, Inbox,
and

Notes. You can use these programs individually or together. For example,
email addresses stored in Contacts can be used to address email messages
in Inbox.

Using ActiveSync?you can synchronize information in Microsoft Outlook
or Microsoft Exchange on your desktop computer with your device. You
can also synchronize this information directly with a Microsoft
Exchange

server. Each time you synchronize, ActiveSync compares the changes
you made on your device and desktop computer or server and updates
both computers with the latest information. For information on using
ActiveSync, see ActiveSync Help on the desktop computer.

menu. You can switch to any of these programs by tapping them on the Calendar: Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month and Year) and set Calendar to remind you of appointments with a sound or other method.

NOTE You can customize the Calendar display, such as changing the first day of the week, by tapping Options on the Tools menu.

To create an appointment:

1. If you are in Day or Week view, tap the desired date and time for the appointment.
2. Tap New.
3. Using the input panel, enter a description and a location. Tap first to select the field. You can also tap and select available, predefined text or locations.
4. If needed, tap the date and time to change them.
5. Enter other desired information. You will need to hide the input panel to see all available fields.

100

Chapter 4: Microsoft Pocket Outlook

6. To add notes, tap the Notes tab. You can enter text, draw maps, or create directions or recordings. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas" on page 103.

7. When finished, tap OK to return to the calendar (the appointment is automatically saved).

NOTE If you select Remind me in an appointment, your device will remind you according to the options you have set.

Using the Summary Screen

When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap Edit on the command bar.

Creating Meeting Requests

You can use Calendar to set up meetings with users of Outlook or Pocket Outlook. The meeting request will be created automatically and sent either when you synchronize Inbox or when you connect to your email server. Indicate how you want meeting requests sent by tapping Tools and then Options. If you send and receive email messages through ActiveSync, select ActiveSync.

To schedule a meeting:

1. Create an appointment by tapping New.
2. In the appointment details, hide the input panel, and then tap Attendees.
3. From the list of email addresses you've entered in Contacts, select the meeting attendees.

The meeting notice is created automatically and placed in the Outbox folder. For more information on sending and receiving meeting requests, see Calendar Help and Inbox Help on the device.

Contacts: Tracking Friends and Colleagues

Contacts gives you quick and easy access to a list of your friends and colleagues.

Using the device infrared (IR) port, you can quickly share Contacts information with other device users.

NOTE To change the way information is displayed in the list, tap Tools and then Options.

101

Toshiba Pocket PC e800/e805 User's Guide

To find a contact:

1. Tap All Contacts to select the category of contacts you want displayed in the list.
2. Tap Find a name and enter of a name to quickly find it in the list.
3. Tap the screen to see additional phone numbers and email address for the contact.
4. Tap on the contact to display or edit the contact details.
5. Tap and hold on the contact to display a pop-up menu of actions.

To create a contact:

1. Tap New.
2. Using the input panel, enter a name and other contact information. You will need to scroll down to see all available fields (use the scroll

box or scroll arrows).

3. To assign the contact to a category, scroll to and tap Categories and

select a category from the list. In the contact list, you can display contacts by category.

4. To add notes, tap the Notes tab. You can enter text, draw maps, or create directions or recordings. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas" on page 103.

5. When finished, tap OK to return to the contact list.

Finding a contact

There are four ways to find a contact:

?Tap , then Find, enter the contact name (first, last, or middle), phone number, or address, select Contacts for the type, and then tap Go.

?From Contacts, start typing a contact name until you see it displayed on the screen. To show all contacts again, tap the text box at the top of

the screen and clear the text, or tap the arrow icon to the right of the

text box.

?In the contact list, tap the category list (labeled All Contacts by default) and tap the category to which you've assigned a contact. To show all contacts again, select All Contacts.

?To view the names of companies your contacts work for, in the contact list, tap View, then By Company. The number of contacts that work for that company will be displayed to the right of the company name.

102

Chapter 4: Microsoft Pocket Outlook

Using the Summary Screen

When you tap a contact in the contact list, a summary screen is displayed. To change the contact information, tap Edit and make the changes.

Tasks: Keeping a To Do List

Use Tasks to keep track of things you need to do.

1. Tap All Tasks to select the category of tasks you want displayed.

2. Tap the task to display or edit. Tapping Priority allows you to sort the

folders by ascending or descending order.

NOTE To change the way information is displayed in the list, tap

Tools and then Options.

To create a task:

1. Tap New.
2. Using the input panel, enter a description.
3. You can enter a start date and due date or enter other information by first tapping the field. If the input panel is open, you will need to hide it to see all available fields.
4. To assign the task to a category, tap Categories and select a category from the list. In the task list, you can display tasks by category.
5. To add notes, tap the Notes tab. You can enter text, draw maps, or create directions or recordings. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas" on page 103.
6. When finished, tap OK to return to the task list.

NOTE To quickly create a task with only a subject, tap Entry Bar on the Tools menu. Then, tap Tap here to add a new task and enter your task information.

Using the Summary Screen

When you tap a task in the task list, a summary screen is displayed. To

change the task, tap Edit and make the changes.

Notes: Capturing Thoughts and Ideas

Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. You can also include a recording in a note. If a note is open when you create the

103

Toshiba Pocket PC e800/e805 User's Guide

recording, it will be included in the note as an icon. If the note list is displayed,

it will be created as a stand-alone recording.

Tap to change the sort order p

of the list.

Tap to open a note or play a recording.

Tap and hold to display a pop-up p

menu of actions.

Tap to record.

Tap to show or hide the
Recording toolbar.

Tap to create a new item.

To create a note:

1. Tap New.

2. Create your note by writing, drawing, typing, and recording. For more

information about using the input panel, writing and drawing on the screen, and creating recordings, see "Notes: Capturing Thoughts and Ideas" on page 103.

104

Chapter 4: Microsoft Pocket Outlook

Tap to return to the note list

(the note is saved automatically).

Tap to show or hide the input panel.

Tap to write on the screen.

Tap to add a recording to the note.

Inbox: Sending and Receiving Email Messages

Use Inbox to send and receive email messages in either of these ways:
?Synchronize email messages with Microsoft Exchange or Microsoft Outlook on your PC.

?Send and receive email messages by connecting directly to an email server through an Internet Service Provider (ISP) or a network.

Synchronizing Email Messages

Email messages can be synchronized through a general synchronization process. You will need to enable Inbox synchronization in ActiveSync. For

information on enabling Inbox synchronization, see ActiveSync Help on the PC.

105

Toshiba Pocket PC e800/e805 User's Guide

During synchronization:

?Messages are copied from the Inbox folder on your PC or Exchange server to the Inbox folder on your device. By default, you'll receive messages from the last three days only, the first 100 lines of each new

message, and file attachments of less than 100 KB in size.

?Messages in the Outbox folder on your device are transferred to Exchange or Outlook and then sent from those programs.

?The messages on the two computers are linked. When you delete a message on your device, it's deleted from your PC the next time you synchronize.

?Messages in subfolders or other email folders in Outlook are synchronized

only if they have been selected for synchronization in Active-Sync.

Using the Message List

Messages you receive are displayed in the message list. By default, the

most recently received messages are displayed first in the list.

To read your messages:

1. Tap Inbox to select the service and folder you want to display.
2. Tap the message to open. Tap and hold on the message to display a
3. Tapping Received Date allows you to sort the messages by ascend-
4. To connect, send and receive email, tap the Send/Receive icon on
5. To connect to a selected account, tap the Account icon on the compop-up menu of actions.

ing or descending order

the command bar.

mand bar.

NOTE Unread messages are displayed in bold. When multiple messages appear, use the scroll arrows on the command bar to view the previous or next message.

To respond to a received message:

1. To reply to or forward the selected email, tap the Reply icon on the command bar.

2. Tap the OK to return to the message list.

NOTE To delete a message, tap the Delete E-mail icon on the command bar.

106

Chapter 4: Microsoft Pocket Outlook

Tap to show or hide the co header.

Composing Messages

To compose a new message:

1. In the message list, tap New.
2. In the To field, enter the email address of one or more recipients, separating them with a semicolon, or select a name from the contact list by tapping Address Book. All email addresses entered in the email fields in Contacts appear in the Address Book.

Tap to send the message.

.

Tap to show/hide the recording toolbar.

Tap to display the Address Book.

Tap to insert common messages.

3. Compose your message. To enter preset or frequently used messages, tap My Text and select a message.
4. Tap Send when you've finished the message. If you are working offline, the message is moved to the Outbox folder and will be sent the next time you connect. If you are working online, it is sent immediately.

Managing Email Messages and Folders

Each email account has its own folder hierarchy with five default folders:

Inbox, Outbox, Deleted Items, Drafts, and Sent Items. The messages you receive and send through the mail account are stored in these folders. You can also create additional folders within each hierarchy. The Deleted

Items folder contains messages that have been deleted on the device. The behavior of the Deleted Items and Sent Items folders depends on the

107

Toshiba Pocket PC e800/e805 User's Guide

Inbox options you have chosen. In the message list, tap Tools and then Options. On the Message tab, select your options.

If you want to organize messages into additional folders, tap Tools, and

then Manage Folders to create new folders. To move a message to another folder, in the message list, tap and hold the message and then tap

Move on the pop-up menu.

Folder behavior with a direct connection to an email server

The behavior of the folders you create depends on whether you are using ActiveSync, POP3, or IMAP4.

?If you use ActiveSync, email messages in the Inbox folder in Outlook will automatically be synchronized with your device. You can select to

synchronize additional folders by designating them for ActiveSync. The folders you create and the messages you move will then be mirrored on the server. For example, if you move two messages from the Inbox folder to a folder named Family, and you have designated Family for synchronization, the server creates a copy of the Family folder and copies the messages into that folder. You can then read the messages while away from your PC.

?If you use POP3 and you move email messages to a folder you created, the link is broken between the messages on the device and their copies on the mail server. The next time you connect, the mail server will see that the messages are missing from the device Inbox and delete them from the server. This prevents you from having duplicate copies of a message, but it also means that you will no longer have access to messages that you move to folders created from anywhere except the device.

?If you use IMAP4, the folders you create and the email messages you move are mirrored on the server. Therefore, messages are available to you anytime you connect to your mail server, whether it is from your device or PC. This synchronization of folders occurs whenever you connect to your mail server, create new folders, or rename/delete folders

when connected.

108

Chapter 5: Companion Programs

Chapter 5:

Companion Programs

The companion programs consist of Microsoft?Pocket Word, Microsoft?Pocket Excel, MSN Messenger, Windows Media?Player for Pocket PC, Microsoft?Reader and Pictures.

To switch to a companion program on your device, tap Programs on the menu, and then tap the program name.

Pocket Word

Pocket Word works with Microsoft Word on your computer to give you easy access to copies of your documents. You can create new documents on your device, or you can copy documents from your computer to your device. Synchronize documents between your computer and your device so that you have the most up-to-date content in both locations.

Use Pocket Word to create documents, such as letters, meeting minutes, and trip reports. To create a new file, tap , Programs, Pocket Word, and then New. A blank document appears. Or, if you've selected a template for new documents in the Options dialog box, that template appears with appropriate text and formatting already provided. You can open only

one document at a time; when you open a second document, you'll be asked to save the first. You can save a document you create or edit in a

variety of formats, including Word (.doc), Pocket Word (.psw), Rich Text

Format (.rtf), and Plain Text (.txt).

Pocket Word contains a list of the files stored on your device. Tap a file in

the list to open it. To delete, make copies of, and send files, tap and hold a

file in the list. Then, select the appropriate action on the pop-up menu.

109

Toshiba Pocket PC e800/e805 User's Guide

Tap to create a new document.

You can enter information by working in different modes, which you select from the View menu. For each mode, display the toolbar for that mode by

tapping Show/Hide on the command bar.

NOTE

110

Select the type of folder you want displayed in the list.

Tap to change the sort order of the list.

Tap to open a document.

Tap and hold an item to see a pop-up menu of actions.

You can change the zoom magnification by tapping View and then Zoom. Then select the percentage you want. Select a higher percentage to enter text and a lower one to see more of your document. If you're opening a Word document created on a computer, select Wrap to Window on the View menu so that you can see the entire document.

Chapter 5: Companion Programs

Typing Mode

Using the input panel, enter typed text into the document. For more information

on entering typed text, see Chapter 2.

To format existing text and to edit text, first select the text. You can select

text as you do in a Word document, using your stylus instead of the mouse to drag through the text you want to select. You can search a document

to find text by tapping Edit and then Find/Replace.

Tap and hold to see a pop-up menu of actions.

Tap to show or hide the toolbar.

Tap to return to the document p

list (changes are saved (g
automatically).

Tap to change formatting
options.

Tap to format text.

111

Toshiba Pocket PC e800/e805 User's Guide

Writing Mode

In writing mode, use your stylus to write directly on the screen. Ruled lines

are displayed as a guide, and the zoom magnification is greater than in

typing mode to allow you to write more easily. For more information on

writing and selecting writing, see Chapter 2.

With Space button selected
drag to insert space.

An arrow appears showing the space direction and size.
Tap to highlight selected text.
Tap to select formatting options, such as pen weight and line color.
Space button.
Pen button.

NOTE If you cross three ruled lines in a single stylus stroke, the writing becomes a drawing, and can be edited and manipulated as described in the following section. Written words are converted to graphics (metafiles) when a Pocket Word document is converted to a Word document on your computer.

112

Chapter 5: Companion Programs

Drawing Mode

In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke,

you'll see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the

drawing. For more information on drawing and selecting drawings, see Chapter 2.

Select Shape on the pop-up menu to convert objects to proper shapes.

Resize an object by dragging the selection handles.

Tap to select formatting options, such as pen weight, line/font color, and fill color.

Tap an arrow to see your choices.

Pen button.

Recording Mode

In recording mode, embed a recording into your document. Recordings are saved as .wav files. For more information on recording, see Chapter

2.

For more information on using Pocket Word, tap and then Help.

113

Toshiba Pocket PC e800/e805 User's Guide

Pocket Excel

Pocket Excel works with Microsoft Excel on your computer to give you easy access to copies of your workbooks. You can create new workbooks on your device, or you can copy workbooks from your computer to your device. Synchronize workbooks between your computer and your device so that you have the most up-to-date content in both locations.

Use Pocket Excel to create workbooks, such as expense reports and mileage logs. To create a new file, tap , Programs, Pocket Excel, and then New. A blank workbook appears. Or, if you've selected a template for

new workbooks in the Options dialog box, that template appears with appropriate text and formatting already provided. You can open only one

workbook at a time; when you open a second workbook, you'll be asked to save the first. You can save a workbook you create or edit in a variety of

formats, including Pocket Excel (.pxl) and Excel (.xls).

Pocket Excel contains a list of the files stored on your device. Tap a file in

the list to open it. To delete, make copies of, and send files, tap and hold a

file in the list. Then select the appropriate action from the pop-up menu.

Pocket Excel provides fundamental spreadsheet tools, such as formulas, functions, sorting, and filtering. To display the toolbar, tap View and then

Toolbar.

114

Chapter 5: Companion Programs

Cell contents appear here as you enter them.

Format button.

Auto Sum button.

Zoom button.

NOTE If your workbook contains sensitive information, you can protect it with a password. To do so, open the workbook, tap Edit, and then Password. Every time you open the workbook, you will need to enter the password, so choose one that is easy for you to remember but hard for others to guess.

115

Toshiba Pocket PC e800/e805 User's Guide

Tips for Working in Pocket Excel

Note the following when working in large worksheets in Pocket Excel:

- ?View in full-screen mode to see as much of your worksheet as possible. Tap View and then Full Screen. To exit full-screen mode, tap Restore.

- ?Show and hide window elements. Tap View and then tap the elements you want to show or hide.

- ?Freeze panes on a worksheet. First select the cell where you want to freeze panes. Tap View and then Freeze Panes. You might want to freeze the top and leftmost panes in a worksheet to keep row and column labels visible as you scroll through a sheet.

- ?Split panes to view different areas of a large worksheet. Tap View and then Split. Then drag the split bar to where you want it. To remove the split, tap View and then Remove Split.

- ?Show and hide rows and columns. To hide a hidden row or column, select a cell in the row or column you want to hide. Then tap Format, then Row or Column, and then Hide. To show a hidden row or column, tap Tools, then Go To, and then type a reference that is in the hidden row or column. Then tap Format, then Row or Column, and then Unhide.

For more information on using Pocket Excel, tap and then Help.

116

Chapter 5: Companion Programs

MSN Messenger

MSN Messenger on your mobile device provides the same chat environment as MSN Messenger on your PC. These features include:

- ?Seeing who is online.

- ?Sending and receiving instant messages.

- ?Having an instant message conversation with a group of contacts.

- ?Telling contacts that you are unavailable.

?Blocking contacts from seeing your status or sending you messages. To use MSN Messenger, you must have a Microsoft Passport?account or a Microsoft Exchange email account. You must have a Passport to use MSN Messenger Service. If you have a Hotmail?or MSN account, you already have a Passport. Once you have obtained either a Microsoft Passport or a Microsoft Exchange account, you are ready to set up your account.

NOTE Sign up for a Microsoft Passport account at <http://www.passport.com>. Get a free Microsoft Hotmail email address at <http://www.hotmail.com>.

To switch to MSN Messenger, tap , Programs, and then tap MSN Messenger. Setting Up

Before you can use MSN Messenger, you must set up the instant messaging account(s) to use. For MSN Messenger Service, you must have a Microsoft Passport or Hotmail account. For Exchange Instant Messaging, you must have an Exchange account.

To set up an account and sign in:

1. In the Tools menu, tap Options and then Accounts tab.
2. Select Enable MSN Messenger Service and/or Enable Exchange Instant Messaging.
3. Enter your sign-in name and password for the selected account(s).
4. If you selected both accounts, under Sign in using this account first, select which account to sign in to first.

117

Toshiba Pocket PC e800/e805 User's Guide

5. To sign in, tap the sign-in screen and then Sign in.

NOTE If you already use MSN Messenger on your computer, your contacts will show up on your device without being added again.

118

Chapter 5: Companion Programs

Working with Contacts

The MSN Messenger window shows all of your messenger contacts at a glance, divided into Online and Not Online categories. From this view, while connected, you can chat, send an email, block the contact from chatting with you, or delete contacts from your list using the pop-up menu.

Tap a contact to start a chat.

Tap and hold to display a pop-up menu of actions.

NOTE To see others online without being seen, in the Tools menu, tap My Status and select Appear Offline.

If you block a contact, you will appear offline but will remain on the blocked contact's list. To unblock a contact, tap and hold the contact, then tap Unblock on the pop-up menu.

119

Toshiba Pocket PC e800/e805 User's Guide

Chatting with Contacts

Tap a contact name to open a chat window. Enter your message in the text entry area at the bottom of the screen or tap My Text to enter a preset

message, and tap Send. To invite another contact to a multi-user chat, in

the Tools menu, tap Invite and tap the contact you want to invite.

NOTE To switch back to the main window without closing a chat, tap Contacts. To revert back to your chat window, tap Chats and select the person with whom you were chatting.

120

Enter message.

Tap to send message.

Chapter 5: Companion Programs

To know if the contact you are chatting with is responding, look for the

message under the text entry area.

View full chat.

View status of the chat.

For more information on using MSN Messenger, tap and then Help.

121

Toshiba Pocket PC e800/e805 User's Guide

Indicates the progress of the current track.

Tap to adjust volume.

Tap to skip to the next song.

Windows Media Player

Use Microsoft Windows Media Player to play digital audio and video files

that are stored on your device or on a network. To switch to Windows Media Player for Toshiba Pocket PC e800/e805, tap and then tap Windows Media.

Tap to play a previous song.

Tap to stop.

Tap to play or pause.

Use Microsoft Windows Media Player on your computer to copy digital audio and video files to your Toshiba Pocket PC e800/e805. You can play Windows Media and MP3 files on your Toshiba Pocket PC e800/e805.

For more information about using Windows Media Player for Toshiba Pocket PC e800/e805, tap , and then tap Help.

122

Chapter 5: Companion Programs

Microsoft Reader

Use Microsoft Reader to read eBooks on your device. Download books to your computer from your favorite eBook Web site. Then, use ActiveSync to copy the book files to your activated device. The books appear in

the Reader Library, where you can tap them in the list to open them. Each book consists of a cover page, an optional table of contents, and the

pages of the book. You can:

- ?Page through the book by using the Up/Down control on your device or by tapping the page number on each page.

- ?Annotate the book with highlighting, bookmarks, notes, and drawings.

- ?Search for text and look up definitions for words.

The Guidebook contains all the information you'll need to use the software.

To open the Guidebook, tap Help on the Reader command bar. Or, on a book page, tap and hold on the book title, and then tap Help on the pop-up menu.

To switch to Microsoft Reader, tap , Programs, and then Microsoft Reader.

Getting Books on Your Device

You can download book files from the Web. Just visit your favorite eBook retailer and follow the instructions to download the book files.

Sample books and a dictionary are also included in the MSReader folder

in the Extras folder on the Toshiba Pocket PC e800/e805 Companion CD. Use ActiveSync to download the files from your computer to your activated device as described in the Read Me file in the Microsoft® Reader folder.

123

Toshiba Pocket PC e800/e805 User's Guide

Using the Library

The Library is your Reader home page; it displays a list of all books stored

on your device or storage card.

To open the Library:

• On the Reader command bar, tap Library.

• On a book page, tap the book title, and then tap Library on the pop-up menu.

To open a book, tap its title in the Library list.

Tap to scroll through the Library list.

Tap to select a sort order.

Tap here to navigate to other parts of the Reader.

Tap to specify the books you want to display in the list.

124

Chapter 5: Companion Programs

Reading a Book

Each book consists of a cover page, an optional table of contents, and the

pages of the book. Navigation options are listed in the bottom portion of

the cover page.

The first time you open a book, you'll probably want to go to the first page

or to the table of contents, if there is one. Subsequently, whenever you

open the book, you'll be automatically taken to the last page read.

In addition to the text, each book page includes a page number and book title.

Tap to select a navigation option.

Drag to select text and then tap

an option.

Tap arrows to turn the page, p p g

or tap and hold page # to bring up page riffle.

You can also page through a book by using the Up/Down control on your device.

125

Toshiba Pocket PC e800/e805 User's Guide

Using Reader Features

Reading a book electronically gives you several options not available with

paper books. These options are available from any book page.

Select text by dragging across the text on the page. Then, tap an option on the pop-up menu, as described here:

?Search for Text. Find text in a book by tapping Find on the pop-up menu. Enter the word you want to search for, and tap the desired Find option. Reader highlights found text on the page. To close Find, tap outside the box. To return to your original page, tap the title and then

tap Return on the pop-up menu.

?Copy Text. You can copy text from books that support this feature into any program that accepts text. On a book page, select the text you want to copy, then, tap Copy Text on the pop-up menu. The text can be pasted into the program of your choice.

?Bookmarks. When you add a bookmark to a book, a color-coded bookmark icon appears in the right margin. You can add multiple bookmarks to a book. Then, from anywhere in the book, tap the bookmark icon to go to the bookmarked page.

?Highlights. When you highlight text, it appears with a colored background.

?Notes. When you attach a note to text, you enter the text in a note pad

that appears on top of the book page. A Note icon will display in the left margin. To show or hide the note, tap the icon.

?Drawings. When you add a drawing, a Drawing icon appears in the bottom-left corner of the page, and drawing tools appear across the bottom of the page. Draw by dragging your stylus.

?To see a list of a book's annotations, including bookmarks, highlights, text notes, and drawings, tap Annotations Index on the book's cover

page. You can tap an entry in the list to go to the annotated page.
126

Chapter 5: Companion Programs

Removing a Book

When you finish reading a book, you can delete it to conserve space on your device. If a copy of the book is stored on your computer, you can download it again at any time.

To remove a book from your device, tap and hold the title in the Library list, and then tap Delete on the pop-up menu.

127

Toshiba Pocket PC e800/e805 User's Guide

Tap to set the picture as the background on the Today Scree

Zoom button

Tap to crop a picture

Pictures

You can use Pictures to view .jpg pictures stored on your device or on a storage card, send pictures to others, view a slideshow of your pictures, or set a picture as the background on the Today screen.

Edit Pictures

You can rotate, crop, zoom, and adjust the brightness and color contrast of your .jpg pictures.

?Tap to rotate a picture 90 degrees counter-clockwise.

?Tap to crop a picture by dragging and selecting the crop area.

Tap outside of the box to stop cropping.

?Tap to display the Zoom panel, from which you can zoom in or out of a picture, or return a picture to full-screen size.

?Tap Edit and then Brightness and Contrast to adjust the brightness and contrast levels of a picture.

Tap to rotate a picture

128

Chapter 5: Companion Programs

Send Pictures

You can send a .jpg picture to others as an email attachment. Tap Tools and then Send via Email to create an email message with the picture attached.

Set Picture as Background

You can use one of your own .jpg pictures as the background on the Today screen, and specify how you want it displayed on the screen, such as adjusting the transparency level.

1. In Pictures, tap the picture you want to set as the background.
2. Tap Tools and then Set as Today Wallpaper.

View Slideshow of Pictures

You can view your .jpg pictures as a slideshow on your device. Pictures will display slides of the pictures shown in thumbnail view with 5-second intervals between slides. In Pictures, tap to view pictures as a slideshow.

129

Toshiba Pocket PC e800/e805 User's Guide

130

Chapter 6: Pocket Internet Explorer

Chapter 6:

Pocket Internet Explorer

Use Microsoft® Pocket Internet Explorer to view Web or WAP pages in either of these ways:

• During synchronization with your desktop computer, download your favorite links and mobile favorites that are stored in the Mobile Favorites

subfolder in Internet Explorer on the desktop computer.

• Connect to an Internet service provider (ISP) or network and browse the Web. To do this, you'll need to create the connection first, as described in Chapter 7.

When connected to an ISP or network, you can also download files and programs from the Internet or intranet.

To switch to Pocket Internet Explorer, tap and then Internet Explorer.

The Mobile Favorites Folder

Favorites are stored in the Mobile Favorites subfolder of Favorites in Internet

Explorer on your PC. This folder was created when you selected the Favorites information type for synchronization in ActiveSync on your PC.

Favorites must be stored in this folder to be synchronized.

Favorite Links

During synchronization, the list of favorite links in the Mobile

Favorites

folder on your PC is synchronized with Pocket Internet Explorer on your device. Both computers are updated with changes made to either list each time you synchronize. Unless you mark the favorite link as a mobile favorite, only the link will be downloaded to your device, and you will need

to connect to your ISP or network to view the content. For more information

on synchronization, see ActiveSync Help on the PC.

131

Toshiba Pocket PC e800/e805 User's Guide

Mobile Favorites

If you are using Microsoft Internet Explorer 5.0 or later on your desktop computer, you can download mobile favorites to your device.

Synchronizing

mobile favorites downloads Web content to your device so that you can view pages while you are disconnected from your ISP and desktop computer.

Use the Internet Explorer plug-in installed with ActiveSync to create mobile favorites quickly.

To create a mobile favorite:

1. In Internet Explorer 5 or greater on your PC, browse to the page you

want to view offline.

2. Click Tools and then Create Mobile Favorite.

3. To change the link name, enter a new name in the Name box.

4. In the Update box, select a desired update schedule to keep the page in the Mobile Favorites folder up to date.

5. To save the link in a subfolder of Mobile Favorites, click Create In

and select the desired subfolder.

6. Click OK. Internet Explorer will download the latest version of the page.

7. To download the pages that are linked to the mobile favorite you just

created, in Internet Explorer on the PC, right-click the mobile favorite and then click Properties. On the Download tab, specify the number of links deep you want to download. To conserve device memory,

only go one level deep.

NOTE

132

If you did not specify an update schedule in step 4, you will need to manually download content to keep the information updated on your desktop computer and device. Before synchronizing with your device, in Internet Explorer on your desktop computer, click Tools and then Synchronize. You will see the last time content was downloaded to the desktop computer, and you can manually download content if needed.

You can add a button to the Internet Explorer toolbar for creating mobile favorites. In Internet Explorer on your desktop computer, click View, Toolbars, and then Customize.

Chapter 6: Pocket Internet Explorer

To save device memory

Mobile favorites take up storage memory on your device. To minimize the

amount of memory used:

?In the settings for the Favorites information type in ActiveSync options,

turn off pictures and sounds, or stop some mobile favorites from being downloaded to the device. For more information, see ActiveSync Help.

?Limit the number of downloaded linked pages. In Internet Explorer on the desktop computer, right-click the mobile favorite you want to change and then Properties. In the Download tab, specify 0 or 1 for the number of linked pages you want to download.

Using AvantGo Channels

AvantGo is a free interactive service that gives you access to personalized

content and thousands of popular Web sites. You subscribe to AvantGo channels directly from your device. Then, you synchronize your device and desktop computer, or connect to the Internet to download the

content. For more information, visit the AvantGo Web site.

Synchronize an AvantGo channel:

1. In Pocket Internet Explorer on your device, tap to display your list

of favorites.

2. Tap the AvantGo Channels link.

3. Tap Activate.

4. Follow the directions on the screen. You will need to synchronize your device with your PC and then tap My Channels to complete the AvantGo setup.

When synchronization is complete, tap the AvantGo Channels link in your list of favorites to see a few of the most popular channels. To add or

remove channels, tap the Add or Remove link.

133

Toshiba Pocket PC e800/e805 User's Guide

Using Pocket Internet Explorer

You can use Pocket Internet Explorer to browse mobile favorites and channels that have been downloaded to your device without connecting to

the Internet. You can also connect to the Internet through an ISP or a network

connection and browse the Web.

Hide pictures button.

Favorites button.

Home button.

Refresh button.

134

Chapter 6: Pocket Internet Explorer

To view mobile favorites and channels:

1. Tap Favorites to display your list of favorites.

Tap the favorite you want to view.

Tap to add or delete a folder or favorite link.

2. Tap the page you want to view.

You'll see the page that was downloaded the last time you synchronized with your PC. If the page is not on your device, the favorite will be dimmed. You will need to synchronize with your PC again to download the

page to your device, or connect to the Internet to view the page.

135

Toshiba Pocket PC e800/e805 User's Guide

To browse the Internet:

1. Set up a connection to your ISP or corporate network using Connections, as described in "Connect to the Internet" page 138.
2. To connect and start browsing, do one of the following:
 - ?Tap Favorites, and then tap the favorite you want to view.
 - ?Tap View and then Address Bar. In the address bar that appears at the top of the screen, enter the Web address you want to visit and then tap . Tap the arrow to choose from previously entered addresses.

NOTE To add a favorite link while using the device, go to the page you want to add, tap and hold on the page, and tap Add to Favorites.

136

Chapter 7: Getting Connected

Chapter 7:

Getting Connected

You can use your device to exchange information with other mobile devices as well as your computer, a network, or the Internet. You have the

following connection options:

?Use the infrared (IR) port on your device to send and receive files between two devices. If this is the method you want to use, see the following

section "Transfer Items Using Infrared."

?Connect to your Internet account provider (ISP). Once connected, you can send and receive email messages by using Inbox and view Web or WAP pages by using Microsoft?Pocket Internet Explorer. The communication

software for creating an ISP connection is already installed on your device. Your account provider will provide software needed to install other accounts, such as paging and fax accounts. If this is the

method you want to use, see "Connect to an Internet Account Provider?" later in this chapter.

?Connect to the network at your company or organization where you work. Once connected, you can send and receive email messages by using Inbox, view Web or WAP pages by using Pocket Internet

Explorer, and synchronize with your computer. If this is the method you want to use, see "Connect to Work" on page 140.

• Connect to your computer to synchronize remotely. Once connected, you can synchronize information such as your Pocket Outlook information.

If this is the method you want to use, see ActiveSync Help on your computer or Connections Help on the device.

Transfer Items Using Infrared

Using infrared (IR), you can send and receive information, such as contacts

and appointments, between two devices.

To send information:

1. Switch to the program where you created the item you want to send and locate the item in the list.
2. Align the IR ports so that they are unobstructed and within a close range.

137

Toshiba Pocket PC e800/e805 User's Guide

3. Tap and hold the item, and tap Beam Item on the pop-up menu.

NOTE You can also send items, but not folders, from File Explorer. Tap and hold the item you want to send, and then tap Beam File on the pop-up menu.

To receive information:

1. Align the IR ports so that they are unobstructed and within a close range.
2. Have the owner of the other device send the information to you. Your device will automatically receive it.

Connect to the Internet

You can connect to your ISP, and use the connection to send and receive email messages and view Web or WAP pages.

You can connect to work in one of two ways:

• Create a modem connection. If this is the method you want to use, see "To create a modem connection to an ISP."

• Use an Ethernet card and a net tap to connect to the network. If this is

the method you want to use, see "To create an Ethernet connection to an ISP."

To create a modem connection to an ISP:

1. Obtain the following information from your ISP: ISP dial-up access telephone number, user name, password, and TCP/IP settings. Some ISPs require information in front of the user name, such as MSN/username.

2. If your device does not have a built-in modem, install a modem card, or use or use a NULL modem cable and appropriate adapters to connect an external modem to your device through the serial port.

3. Tap , Settings, Connections tab, Connections.

4. In My ISP, tap Add a new modem connection, and follow the instructions in the New Connection wizard.

NOTE To change modem connection settings, in either My ISP or My Work Network, tap Manage existing connections.

Select the desired modem connection, tap Edit, and follow the instructions on the screen.

5. Enter a name for the connection, such as your ISP's name.

138

Chapter 7: Getting Connected

6. In the Select a modem list, tap your modem type. If you are using any type of external modem, in the Select a modem list, select the modem by name. If a listing does not exist for your external modem, tap Hayes Compatible on COM1.

7. Enter the phone number exactly as you want it dialed. If you know part of the phone number will change frequently as you travel, use dialing rules to avoid creating numerous modem connections for the same phone number.

8. Enter your user name, password, and domain name as provided by your ISP. If a domain name was not provided, try the connection without entering a domain name.

9. You should not need to change any advanced settings. Instances where you will want to change advanced settings include:

?You want to change baud rate settings, dialing string commands, or credit card options.

?You need to change port settings.

?The server you are connecting to does not use dynamicallyassigned addresses, and you need to enter your TCP/IP settings.

To change advanced settings, tap Advanced. Otherwise, tap Finish.

To start the connection, simply start using one of the following programs.

Your device will automatically begin connecting. Once connected, you can:

?Send and receive email messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the email server. For specific instructions, see "Connect Directly to an Email Server" on page 143.

?Visit Web and WAP pages by using Pocket Internet Explorer, see Chapter 6 "Mobile Favorites" on page 132.

?Send and receive instant messages with MSN Messenger. For more information, see?"MSN Messenger" on page 117.

To create an Ethernet connection to an ISP:

1. You do not need to create a new connection on your device. Instead, you must purchase and configure an Ethernet card that is compatible with your device.

2. Obtain the following information from your ISP: user name, password, and domain name.

3. Insert the Ethernet card into your device. For instructions on inserting

and using the Ethernet card, see the owner's manual for the card.

139

Toshiba Pocket PC e800/e805 User's Guide

4. The first time you insert the card, Network Settings will appear automatically so that you can configure the network card. If it does not appear, or to change settings later, tap , Settings, Connections tab, Connections, Advanced tab, Network Card.

5. If you need to enter specific server information, tap the appropriate adapter. Most networks use DHCP, so you should not have to change these settings unless your network administrator instructs you to do so.

6. If necessary, connect the network card to the network by using a network

cable. For information, see the documentation that came with your network card.

To start a connection, insert the network card, and begin using a desired program. For example, switch to Pocket Internet Explorer and browse to a

Web page. Your device will automatically begin connecting.

Connect to Work

If you have access to a network at work, you can send email messages, view intranet pages, synchronize your device, and possibly access the Internet. You can connect to work in one of two ways:

?Create a modem connection by using a RAS account. Before you can create this modem connection, your network administrator will need to set up a RAS account for you. If this is the method you want to use, see "To create a modem connection to a network.?Your network administrator may also give you VPN settings.

?Use an Ethernet card and a net tap to connect to the network. If this is

the method you want to use, see "To create an Ethernet connection to a network.?

To create a modem connection to a network:

1. Get the following information from your network administrator:
dialup

access telephone number, user name, password, domain name, and TCP/IP settings.

2. If your device does not have a built-in modem, install a modem card.

3. Tap , Settings, Connections and then tab Connections.

4. In My Work Network, tap Add a new modem connection, and follow the instructions in the New Connection wizard.

5. Enter a name for the connection, such as your company's name.

6. In the Select a modem list, tap your modem type. If you are using any type of external modem, in the Select a modem list, select the 140

Chapter 7: Getting Connected

modem by name. If a listing does not exist for your external modem, tap Hayes Compatible on COM1.

7. Enter the phone number exactly as you want it dialed. If you know part of the phone number will change frequently as you travel, use dialing rules to avoid creating numerous modem connections for the same phone number.

8. Enter your user name, password, and domain name as provided by your network administrator. If a domain name was not provided, try the connection without entering a domain name.

9. You should not need to change any advanced settings. Instances

where you will want to change advanced settings include:

?You want to change baud rate settings, dialing string commands, or credit card options.

?You need to change port settings.

?The server you are connecting to does not use dynamically assigned addresses, and you need to enter your TCP/IP settings.

To change advanced settings, tap Advanced. Otherwise, tap Finish.

To start the connection, simply start using one of the following programs.

Your device will automatically begin connecting. Once connected, you can:

?Send and receive email messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the email server. For specific instructions, see "Connect Directly to an Email Server" on page 143.

?Visit Internet or intranet Web or WAP pages by using Pocket Internet Explorer.

?Send and receive instant messages with MSN Messenger. For more information, see "MSN Messenger" in Chapter 5.

?Synchronize. For more information, see ActiveSync Help on the computer.

To create an Ethernet connection to a network:

1. You do not need to create a new connection on your device. Instead, you must purchase and configure an Ethernet card that is compatible with your device.

2. Get the following information from your network administrator: user name, password, and domain name.

3. Insert the Ethernet card into your device. For instructions on inserting

and using the Ethernet card, see the owner's manual for the card.

4. The first time you insert the card, Network Settings will appear automatically so that you can configure the network card. If it does

141

Toshiba Pocket PC e800/e805 User's Guide

not appear, or to change settings later, tap , Settings, Connections tab, Connections, Advanced tab, Network Card.

5. If you need to enter specific server information, tap the appropriate adapter. Most networks use DHCP, so you should not have to

change these settings unless your network administrator instructs you to do so.

6. If necessary, connect the network card to the network by using a network

cable. For information, see the documentation that came with your network card.

To start a connection, insert the network card, and begin using a desired program. For example, switch to Pocket Internet Explorer and browse to a

Web page. Your device will automatically begin connecting.

To set up a VPN server connection:

1. A VPN connection enables you to securely connect to servers, such as a corporate network, via the Internet. Ask your network administrator for your user name, password, domain name, TCP/IP settings, and host name or IP address of the VPN server.

2. Tap , Settings, Connections and then tab Connections.

3. To create a new VPN server connection, in My Work Network, tap Add a new VPN server connection and follow the instructions in the New Connection wizard.

NOTE To change existing settings, in My Work Network, tap Manage existing connections, VPN tab. Select the desired VPN connection, tap Edit, and follow the instructions on the screen.

4. In Name, enter a name for the connection, such as your company's name. In Host name/IP, enter the VPN server name or IP address. Next to VPN type, select the type of authentication to use with your device: IPsec/L2TP or PPTP. If you aren't sure which option to choose, ask your network administrator.

5. Select the type of authentication. If you select A pre-shared key, enter the key provided by your network administrator.

6. Enter your user name, password, and domain name as provided by your ISP or network administrator. If a domain name was not provided, try the connection without entering a domain name.

7. You should not need to change any advanced settings. Instances where you must change advanced settings include:

142

Chapter 7: Getting Connected

?The server to which you are connecting does not use dynamically-

assigned addresses, and you need to enter your TCP/IP settings.

?You need to change server DNS or WINS settings.

To change advanced settings, tap Advanced. Otherwise, tap Finish.

To edit proxy settings:

1. Tap , Settings, Connections tab.
2. To change proxy server settings, in My Work Network, tap Edit my proxy server.
3. Select This network connects to the Internet and This network uses a proxy server to connect to the Internet.
4. In the Proxy server box, enter the proxy server name.
5. To change such settings as port number or proxy server type, tap Advanced and change desired settings.

End a Connection

To disconnect, do one of the following:

?When connected via dial-up or VPN, tap the Connection icon, , on your navigation bar, and then tap End.

?When connected via cable or cradle, detach your device from the cable or cradle.

?When connected via Infrared, move the device away from the PC or device.

?When connected via a network (Ethernet) card, remove the card from your device.

?When connected via a wireless network, switch off the connection.

Connect Directly to an Email Server

You can set up a connection to an email server so that you can send and

receive email messages by using a modem or network connection and Inbox on your device.

NOTE The ISP or network must use a POP3 or IMAP4 email server and an SMTP gateway.

You can use multiple email accounts to receive your messages. For each email account you intend to use, first set up and name the email account.

143

Toshiba Pocket PC e800/e805 User's Guide

If you use the same account to connect to different mailboxes, set up and

name each mailbox connection.

To set up an email account:

?In Inbox on your device, tap Accounts, and then New Account. Follow the directions in the New Account wizard.

For an explanation of a screen, tap and then Help. When finished, to connect to your email server, tap Accounts and then Connect. For more information on using the Inbox program, see "Inbox: Sending and Receiving

Email Messages" on page 105.

Get Help on Connecting

More information on the procedures described here, as well as information

on additional procedures, can be found in the following locations:

? "Inbox: Sending and Receiving Email Messages" on page 105.

? Online Help on the device. Tap and then Help. Tap View, All Installed Help, and then Inbox or Connections.

? ActiveSync Help on the computer. In ActiveSync, Tap and then Help.

? For troubleshooting information, see the Pocket PC Web site at: <http://www.microsoft.com/mobile/pocketpc>

144

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Chapter 8:

Wi-Fi (IEEE 802.11b)

Wireless LAN

This chapter is valid for Wireless LAN model only.

Overview

NOTE

The IEEE 802.11b WLAN Adapter can connect your wireless Toshiba Pocket PC e800/e805 to an existing IEEE 802.11b wireless network or from its own Wireless Network. Using the adapter in the Toshiba Pocket PC e800/e805, you can enjoy the complete mobile and high-speed wireless Internet connectivity while in range of a Wi-Fi compatible access point.

145

Toshiba Pocket PC e800/e805 User's Guide

Join to Existing Network

Configure Wireless LAN Network

Pocket PC 2003 has a interface that enables you to join to a existing

network.

If Pocket PC 2003 detects a wireless network, it will show the above menu. Also, if you join to encrypted network(s), Pocket PC 2003 will require entering a Network (WEP) key.

146

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Launch Wireless LAN Configuration

In order to Configure Wireless LAN Settings, use the Configure Wireless Networks Screen. To launch Configure Wireless Networks Screen, tap the TMU (Traffic Monitoring Utility) Wireless LAN Indicator icon on the navigation

bar, and then tap the "Config WLAN?Link. You can also launch by tapping Start, Settings, System, then Wireless Networks.

Turn Off/On Wireless LAN connection

If you want to turn off/on the wireless LAN, tap the arrows icon on the navigation

bar and launch the Connectivity window. If you tap the "Turn Wireless off/on"" link on the window you can turn off/on the wireless LAN module

147

Toshiba Pocket PC e800/e805 User's Guide

Power Off/On Wireless LAN modules

Traffic Monitor Utility (TMU) supplies Wireless power off/on function. If

you want to turn off/on the wireless LAN tap the TMU icon and launch the

Wireless LAN window. If you tap the "Power Wireless off/on?link on the window you can turn off/on the wireless LAN module. Please refer to page

134 for detailed information.

Select Preferred Network

TMU shows a Preferred network list where you can change wireless network connections from this preferred list. If you want to connect to wireless LAN network, you have to make a network setting and store to preferred network list. See the "Wireless LAN Configuration" to set up wireless network.

148

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

IP Address:

IP Address

IP Address Page

Use the IP Address Page to view and edit the IP address, subnet mask and default gateway. Click Connectivity (Arrows) icon, Settings, Advanced, Network Card, Network Adapters, "IEEE 802.11b WLAN Adapter." You can also launch by tapping Start, Settings, Connections, Connections, Advanced, Network Card, Network Adapters, "IEEE 802.11b WLAN Adapter.?

IP Address is Internet Protocol Address; a numeric address such as 10.37.238.100 that the domain name server translates into a domain name. Each node on the IP network should have a unique IP address.

Subnet mask:

A number used to identify a sub-network when multiple networks share an

IP address. For example 255.255.255.0

Default gateway:

This is a device used to forward IP packets to and from a remote destination.

NOTE Please check with your network administrator for these connection settings.

149

Toshiba Pocket PC e800/e805 User's Guide

DNS:

Name Servers Page

Use Name Servers Page to view and edit DNS, Alt DNS, WINS and Alt WINDS. Click Connectivity (Arrows) icon, Settings, Advanced, Network Card, Network Adapters, "IEEE 802.11b WLAN Adapter? then Name Servers. You can also launch by tapping Start, Settings, Connections, Connections, Advanced, Network Card, Network Adapters, "IEEE 802.11b WLAN Adapter? Name Servers.

Domain Name System is a database system that translates addressed and domain names. For example the numeric address like 232.245.21.54 can become something such as cba.com. DNS can also be used to control Internet email delivery.

Without setting the host computer's IP address in the WINS, you cannot wirelessly synchronize your Pocket PC

with your host computer.

WINS:

In Windows Internet Naming Service has two functions; one is a Microsoft NetBIOS name server that eliminates the broadcast needed to resolve computer names to IP addresses by providing a cache or database of translations. The other one is to set the IP address of the host computer that you already construct the partnership for Network adapter Active sync purpose.

NOTE

150

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Alt DNS:

Alt DNS stands for Alternative Domain Name System, Used to substitute main DNS when necessary.

Alt WINS:

Alt WINS stands for Alternative Windows Internet Naming Service. Used to substitute main WINS when necessary.

Wireless LAN Configuration

Set up a wireless network

Networks that you have already configured are preferred networks and are listed in Wireless networks. You can select to connect to only preferred

networks or have your device search for and connect to any available network whether it is preferred or not.

Tap Start, Settings, Connections, Connections, Advanced, Network Card, Wireless tab. You can also launch this by tapping Start, Settings, System, Wireless Networks.

To change network settings, in Wireless networks, tap a network. If you

do not see a desired network, tap Add new Settings... and follow the instructions on the screen.

From Networks to access, select All available, Only access points or Only computer-to-computer depending on the type of connected net-

151

Toshiba Pocket PC e800/e805 User's Guide

work(s). To connect only to networks you have already configured, clear Automatically connect to non-preferred networks.

To change the network to connect listed in preferred network, tap and

hold

a network that you want to connect and select "Connect" from menu. To delete network listed in preferred network, Tap and hold a network that

you want to delete and select "Remove Settings" from menu.

NOTICE:

If you select to automatically connect to non-preferred networks, your device will detect any new networks, your device will detect any new networks

and provide you the opportunity to configure them.

Configure Wireless Network

A wireless network can be added either when the network is detected, or

manually by entering settings information.

?Network name: It is also know as "SSID" and "ESSID". Enter a network name, network name is a name given to the groups that form the wireless LAN network, and up to 32 single-byte English characters and symbols may be used. If the network was detected, the network name is automatically entered and can't be changed.

?Connect to: Select what your network connects to, Work or Internet.

?This is a device-to-computer (ad hoc) connection: To connect to an ad hoc connection, select this.

152

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Configure Network Authentication Screen

A wireless network can be added either when the network is detected, or

manually by entering settings information. To determine if authentication

Information is needed see your network administrator.

Check here to set WEP (Wired Equivalent Privacy).Default is "Disable?"

Check here to enable shared authentication (Shared mode). Default is "Disable?"

Check here if you can obtain WEP key automatically from Access Point.

Almost case Default is "Enable?"

In "Key?you enter the ASCII characters and

symbols corresponding to the selected WEP.

Select Key as transmit 1 - 4.

Check here to enable 802.1x authentication

Default is "Enable.

Select EAP type Default is "TLS(EAP-TLS)?

Show the Properties when you can connect to

Access Point with 802.1x authentication

?Data encryption (WEP Enabled)

Click here to enable data encryption.

?The Key is provided for me automatically:

Check here if you can obtain WEP key automatically from AP. Almost case this function is used with 802.1X function. Default is "Enable".

?Network Key (WEP key):

Enter the ASCII characters and symbols that correspond to the mode selected.

64 bits (ASCII)

5-digit ASCII characters or symbols can be entered in "Network Key".

128 bits (ASCII)

13-digit ASCII characters or symbols can be entered in "Network Key".

64 bits (HEX)

Hexadecimal 10-digit English letters and numerals can be entered in "Network Key". Letters and numerals that can be entered are 0-9 and A(a) - F(f).

128 bits (HEX)

Hexadecimal 26-digit English letters and numerals can be entered in "Network Key". Letters and numerals that can be entered are 0-9 and A(a) - F(f).

?Key Index:

This becomes enabled when WEP is selected. Select 1 - 4.

153

Toshiba Pocket PC e800/e805 User's Guide

?Enable network access using IEEE 802.1X:

Check here to enable 802.1x validation function.

?EAP type:

Select protocol for using 802.1x validation function.

TLS (EAP-TLS)

Transport Layer Security (TLS) protocol used by Windows 2000

Server, etc.

PEAP

Protected EAP Protocol (PEAP) used by Windows.NET Server

2003, etc.

Please ask your network administrator for further details of the 802.1x validation procedure.

TMU Traffic Monitoring Utility

TMU Keeps users updated of current WLAN Module's activity status.

Icon Specification

Wireless Communication switch off:

Wireless Communication Switch, on the bottom of the PDA, is turned off.

Clicking on the icon gives you a warning message, "Please turn on Wireless communication switch!" Click "OK" to close the Message Box. Turn on the switch and you will see the icon turns to or , depends on the original setting for the WLAN Module Power.

Wireless Communication power off:

The WLAN Modules is at Power Off Status. Clicking on the icon displays you a link "Power Wireless on". Click the link to turn on the Wireless LAN module power and then the icon to .

Wireless Power on:

The WLAN Modules is at Power On Status. Clicking on the icon displays you a link "Power Wireless off". Click the link to turn off the Wireless LAN module power and then the icon to . Number of wave indicates signal strength.

154

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Wireless LAN Manager

Wireless LAN Manager enables you to control some power management settings and also enable to see some information of your Wireless LAN adapter.

Wireless LAN Indicator icon on the navigation bar, and then tap the "Info"

Link.

And you can also launch this by tapping Start, Settings, System, Wireless LAN Manager

Manager Screen

?Enable Wireless LAN Indicator: If you check this, the wireless LAN indicator is displayed in the navigation bar.

?Transmission Rate: Select transmission rate to be used from the pulldown

menu. If you select "Fully Auto", the adapter is automatically set to the most suitable transmission rate.

?Channel: If you make a ad-hoc network, you can select a channel that used in that ad-hoc network from this list.

?Enable Power Saving Mode: Check this to use power saving mode.

On Battery Power

Check this to run in power saving mode when on battery power.

Power is turned off if there is no transmission for the time specified.

Select the length of time for power saving mode from the pulldown menu.

155

Toshiba Pocket PC e800/e805 User's Guide

On External Power

Check this to run in power saving mode when on external power.

Power is turned off if there is no transmission for the time specified.

Select the length of time for power saving mode from the pulldown menu.

Link Screen

?Link Quality

Link Quality shows quality of wireless LAN signal.

?Link Information

Link Information shows some information about your wireless LAN adapter.

SSID: Displays the SSID currently connected to the access point or 802.11 ad hoc network.

Channel: The number of the channel being used by the access point or 802.11 ad hoc network.

Tx Rate: Displays the transmission rate used.

BSSID: Displays the BSSID set on the access point or 802.11 ad hoc network.

IP Address: Displays the IP address set.

Subnet Mask: Displays the subnet mask set.

Gateway: Displays the gateway IP address set.

IP Renew: This is for attempting to renew an IP address, but can

only be used if DHCP is being used.

156

Info Screen

?MAC (Media Access Control) Address:

Display Wireless LAN MAC Address. MAC Address is a hardware address that uniquely identifies each device of network.

Display FW version that included Wireless LAN hardware.

Display Wireless LAN Driver version.

?Version Information:

Firmware

Driver

Utility

Display Wireless LAN Configuration Utility version.

Toshiba Enroller

Configure "Toshiba Enroller", the tool for obtaining and administering certificates

used for 802.1x validation. Please ask your network administrator for configuration details.

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

157

Toshiba Pocket PC e800/e805 User's Guide

Certificate for TLS

Enter here the user name of the person obtaining the certificate.

Enter here the password of the user obtaining the certificate. Passwords of more than 14 letters will be blocked.

Enter the URL or IP address of the certifying server (CA server) here.

Click there to request a certificate from the certifying server(CA server).

Launch Certificate Import Wizard.

?User: Enter the user name of the person obtaining the client certificate.

?Password: Enter the password of the user obtaining the client certificate.

The password may be up to 14 single-byte characters in length. If this length is exceeded, the password will be blocked.

?CA Server: Enter the URL or IP address of the certifying server issuing the client certificate. Any URLs of more than 255 characters will be blocked.

?Submit: After you have entered user name, password and CA server, click this button to request a certificate from the certifying server.

Certificate Import Wizard

?Config Wireless: Launch Certificate Import Wizard.

158

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Root Cert Page

?Open Certificate:

Opens the root certificate. When the root certificate is opened normally,

the person it has been issued to, the person it was issued by and the period of validity will be displayed. The root certificate is provided

by the .cer file.

?Install Certificate:

Registers the open root certificate in the system. This button is enabled when the root certificate is opened normally.

NOTICE:

Pocket PC 2003 supports *.cer DER encoded root certificate file as default. You can install root certificate if you double-click root certificate file.

159

Toshiba Pocket PC e800/e805 User's Guide

Manage Page

?Property:

Displays information on certificates obtained.

?Delete:

Deletes certificates.

Please use the greatest possible care when deleting certificates.

When using EAP-TLS, one client certificate and one root certificate are

required as a minimum. When using PEAP, one root certificate is required as a minimum.

Please ask your network administrator for details of operational

procedures.

160

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Advanced Page

?Request Page:

Part of the URL to be accessed when obtaining client certificates.

?Cert Template:

Template used when obtaining client certificates.

?Cert Attribute:

Attribute used when obtaining client certificates.

?Certificate for TLS:

If you check here, Obtain ClientCert and RootCert simultaneously.

Under normal circumstances, configuration is not needed unless requested by your network administrator.

161

Toshiba Pocket PC e800/e805 User's Guide

Toshiba Certificate Import Wizard

Toshiba Certificate Import Wizard helps you obtain certificates from network

or disk to certificate store more easily. The Toshiba Certificate Import Wizard requires ActiveSync environment to obtain certificate from server.

Please prepare the Cradle and PC that can connect to Certification Authority (CA) Server.

The Toshiba Certificate Import Wizard obtains Certification Authority via

ActiveSync path through a network connection.

You can exit this wizard when you tap OK. All operations on this wizard will be cancelled.

Start Screen

Select 802.1x type from above menu and tap Next >.

For more information on authentication procedures, refer to "Configure Network Authentication Screen" on page 153.

162

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Example: Obtain TLS Certificate from server (1)

Obtaining a certificate for TLS always requires an ActiveSync connection.

Place your Toshiba Pocket PC 3750/e805 into the cradle and tap Next >.

After tapping, if there are any problems about active syncing. Wizard will

pop-up the problem.

163

Toshiba Pocket PC e800/e805 User's Guide

Example: Obtain TLS Certificate from server (2)

You have to enter your user name, password, and CA server name (or IP) to

obtain certificates from server. After filling parameters, tap Next >, If there is

something wrong with the parameters, Wizard will display the problem.

Example: Obtain TLS Certificate from server (3)

If you succeed in obtaining a Certificate from the server, the Certificate

that you received.

164

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Example: Obtain PEAP Certificate from a file (1)

If your network supports PEAP authentication, you can obtain a certificate

from file. Similar to the steps taken while obtaining a TLS certificate, select From file (recommended), and tap Next >.

165

Toshiba Pocket PC e800/e805 User's Guide

Example: Obtain PEAP Certificate from a file (2)

Select Certificate from file. Certificate file should be provided from your

network administrator. If you don't have that, please contact to your network

administrator.

Toshiba Certificate Import Wizard supports only DER encoded root certificate.

If you try to import other format certificate file, Wizard will pop-up the

error.

166

Chapter 8: Wi-Fi (IEEE 802.11b) Wireless LAN

Example: Obtain PEAP Certificate from a file (3)

If you succeeded in obtaining the certificate from the server, the certificate

will display on the screen like the figure above. Since PEAP authentication

doesn't require client certification, the wizard will not show information

about client certification. If you tap Finish, certificates are stored to the

system.

167

Toshiba Pocket PC e800/e805 User's Guide

168

Chapter 9: Optional Functions

Chapter 9:

Optional Functions

You can also launch Home by tapping Home .

Home

You can launch built-in or installed applications (programs) by tapping an

icon displayed on the Home screen. It can display a list of running programs,

and easily activate or stop a specific program. The Home screen displays the remaining battery power, Today information and frequently used setting icons, and can be personalized by changing the background or by adding icons and tabs.

Launching an Application From the Home Screen

1. Tap Start, Programs, and then Home to display the Home screen.

NOTE

2. Tap the desired tab (Running, Main, Programs, or Games) and then tap the application icon you want to launch. The selected application starts up.

169

Toshiba Pocket PC e800/e805 User's Guide

3. Tap New on the command bar for commands such as Paste or Add.

Information on applications (About, Tab Setting, etc.) are available by

tapping Accounts.

4. To verify that the application is open, tap the Running tab.

NOTE

About the Home Screen

The default Home screen is the parallel display style with information window display.

170

Information window.

The information can be displayed/hidden.

The display style can be switched between parallel and tab.

Launching applications: you can launch an application by moving the cursor button or scroller to select and pressing the center of the cursor button to confirm.

Adding tabs: you can add tabs up to a maximum of 10 kinds and icons up to 18 in a tab.

1st window.

Tab selection box.

Tap this to switch between tabs.

2nd window.

About the Information Window

The information window displays the remaining battery power, hardware information and Today information such as today's tasks and appointments.

Need applicable Mt.Shasta/Yellowstone screen here.

Displays the date and time. Tap to display the Clock setting screen

Displays the number of current tasks as of today and the number of tasks finished

or soon to be finished as of today. Tap to launch Tasks.

Displays the number of unread mail and the sender of the latest unread mail. Tap

to launch Inbox.

Displays today's next appointment. Tap to launch Calendar.

Chapter 9: Optional Functions

171

Toshiba Pocket PC e800/e805 User's Guide

Display item

<not ready>

Name

Power

Memory

Screen light

System Information

VQ-select

Volume ON/OFF

Description

Tap to display the Power setting screen.

Tap to display the Memory setting screen.

Tap to display the Screen light setting screen.

Tap to display the system information.

Tap to display the VGA-QVGA setting screen.

Tap to toggle volume ON/OFF.

This icon is interlocked with the display of volume ON/OFF that has been switched using the icon on the navigation bar. Note, however, that the navigation bar display is not changed even if volume is toggled ON/OFF using this button.

About Running

The Running tab displays the active application names. The icons do not appear.

Application Activate/Stop:

Tap the application name you want to activate, or tap and hold the application

name and select Activate in the pop-up menu.

1. Tap to activate/tap to quit the desired application.

2. Tap on the screen within the Running tab to quit all applications.
3. You can select the View or Tools menu on the Running tab to get more information about an application (About), view the application in a certain color (Text color), or look at the Tab Setting.

172

Chapter 9: Optional Functions

Need applicable Mt.Shasta/Yellowstone screen here.

NOTE To display the Running tab pop-up menu, tap and hold any portion of the screen other than the application name.

In this case, only the Stop All is selectable.

173

Toshiba Pocket PC e800/e805 User's Guide

Tabs

Programs

<Not
ready>

Display Icon List

The following list shows the tabs and icons for the initial setup.

Icons Tabs

Running -

Main

174

Applications

-

Pocket

Internet

Explorer

Windows

Media Player

Notes

Tasks

Inbox

Calendar

Contacts

VQ-select

Applications Icons

File Explorer

DataBackup

MSN

Messenger

Pocket Word

Pocket Excel

Calculator

Solitaire

Jawbreaker

need Pictures

Chapter 9: Optional Functions

Moving Application Icons

You can move icons in tabs or between tabs. To create a new tab, see "Tab Settings" on page 178.

To move icons in tabs:

1. Drag and drop the desired icon to the desired position with the icon in a tapped state. When the icon is moved, the icon near where the icon is to be moved is highlighted. When the icon is dropped, the icon is moved to the position of the highlighted icon. If there is no highlighted icon when the icon is dropped, the icon is moved to the end of the icons.

NOTE When "Icons are sorted as launched order (Effective for all tabs)" is selected in the Tab Settings screen, icons in tabs are sorted in the order that they are launched. Icons cannot be moved in tabs when this is set.

To move icons to another tab using the pop-up menu:

1. Tap and hold the icon you want to move to display the pop-up menu.
2. Tap Cut on the pop-up menu.
3. Tap the destination tab, then tap and hold any portion other than the

icon, and then tap Paste on the pop-up menu. The selected icon is

pasted next to the last icon on the tab screen.

NOTE The moved icon is placed next to the last icon on the tab screen. When "Icons are sorted as launched order (Effective for all tabs)" is selected in the "Tab Settings" screen, icons in tabs are sorted in the order that they are launched. An icon cannot be moved into a tab that already includes 18 icons.

To move icons to another tab using drag and drop:

1. Tap the icon you want to move.
2. Drag the icon to the destination tab, and then drop it. The name of the destination tab is displayed inverted, the icon is moved, and that icon in the original tab screen is deleted.

175

Toshiba Pocket PC e800/e805 User's Guide

NOTE

Deleting an Icon

1. Tap and hold the icon you want to delete to display the pop-up menu.
2. Tap Drop on the pop-up menu. The icon is deleted and the next icon automatically shifts to fill the deleted icon position.

Adding an Icon

You can add the application and your file icons to the Home screen.

1. Tap Edit and then Add to display the Add Application screen.

You can also select Add from the pop-up menu displayed by tapping and holding any portion other than the icon.

2. Tap of Application file box to show the file list. If you cannot locate

the file, find it by tapping Browse. To refer to all folders and files, tap

Browse to show the Browse screen. When the file is selected, its name is displayed in the Application file box.

176

Icons that can be moved are displayed inverted when they are tapped. The moved icon is placed next to the last icon on the tab screen. When "Icons are sorted as launched order (Effective for all tabs)" is selected in the "Tab Settings" screen, icons in tabs are sorted in the order that they are launched. An icon cannot be moved into a tab that already includes 18 icons.

Tap to designate a folder you want to browse. When a storage card is inserted, files or folders contained in the storage card are displayed from the top directory. Tap to move to one upper directory folder above the currently displayed one.

Tap to select kinds of application or file to be browsed.

If a file is selected from the list, the screen returns to the Add Application screen. Chapter 9: Optional Functions

3. Enter the icon name (up to a maximum of 32 characters) in the Application

name box that is to be displayed on the Home screen.

4. When finished, tap OK to close the Add Application screen, and the new icon is added to the Home screen.

NOTE If the Application file is not designated, or if the Application name is not entered, you cannot add a new icon.

You cannot launch the icon added from the storage card, if the same card is not inserted in the Toshiba Pocket PC e800/e805.

Renaming Icons

You can rename icons (applications).

1. Tap and hold the icon to rename. The pop-up menu is displayed.

2. Tap Rename from the pop-up menu. The icon can be renamed.

3. Change the name using the input panel, and tap the screen.

NOTE Tapping anywhere on the screen other than the navigation bar or the command bar also fixes the name.

In addition to the above method, the name is fixed when the screen contents have changed.

Switching Icon Display

When icons are displayed in tab display style, their display can be switched from the View menu. Select Large Icon or Small Icon to suit your preference.

177

Toshiba Pocket PC e800/e805 User's Guide

(Example) Small Icon

Tab Settings

On the Tab Settings screen you can add, delete or rename a tab as well as select a bitmap image to display on the screen background.

To add a tab:

1. Tap Tools, and then Tab Settings.

2. Tap New to display a box to enter the new tab name.

3. Enter a new tab name (up to a maximum of 10 characters). When

finished, tap OK to return to the Tab Settings screen.

4. Tap OK on the Tab Settings screen to return to the Home screen. A new tab is added to the right of the existing tab.

NOTE The number of tabs can be increased to 10. The tab order cannot be re-arranged.

To delete a tab:

1. Tap Tools, and then Tab Settings.

2. Select the tab name to delete, and then tap Delete. The Confirmation Delete tab appears, followed by the Delete tab confirmation dialog box appears. Please note that all the icons contained in the same tab will also be deleted.

178

(Example) Large Icon Chapter 9: Optional Functions

3. Tap Yes on the Delete tab dialog to delete the tab. When finished, the screen returns to Tab Settings screen.

4. Tap OK on the Tab Settings screen to return to the Home screen. You cannot delete the Running tab. NOTE

To change the name of a tab:

1. Tap Tools and then Tab Settings.

2. Select the tab name you want to change, and then tap Modify.

3. Enter a new tab name (up to a maximum of 10 characters). When finished, tap OK to return to the Tab Settings screen.

4. Tap OK on the Tab Settings screen to return to the Home screen. You cannot rename the Running tab. NOTE

To sort icons:

Icons in tabs can be sorted in the order that they were last launched.

1. Tap Tools and then Tab Settings.

2. Select the "Icons are sorted as launched order (Effective for all tabs)?

check box.

3. Tap OK on the Tab Settings screen to return to the Home screen.

To move icons in a tab, clear the check box. NOTE

To change a background:

1. Tap Tools and then Tab Settings.

2. Select the tab name you want to change, and then tap Modify.

3. Tap Browse. The Browse screen is displayed. Even if a storage card is inserted, the files in the storage card will not be displayed.

4. To return to the previous screen, tap the desired bitmap file from

the
list.

5. To return to the Tab Settings screen, tap OK.

6. Tap OK on the Tab Settings screen to return to the Home screen.

NOTE If the selected file is not a designated file type, you cannot set it on your screen background. The Home screen image display range is 240 pixels (W) x 268 pixels (H).

179

Toshiba Pocket PC e800/e805 User's Guide

Background Color and Text Color Setting

You can use Background Color to select a color for the background for each tab. Additionally, Text Color is available to apply a color for the application

name for each tab.

To apply Background Color and Text Color:

1. Tap Tools and then Tab Settings.

2. Select the tab name you want to change, and then tap Modify.

3. Tap Background color or Text color to display the color list.

4. Select the color, and tap OK to return to the previous screen.

5. To return to the Tab Settings screen, tap OK.

6. Tap OK on the Tab Settings screen to return to the Home screen.

NOTE When a background image is set, the background image will stay intact and not change even if a background color is set. Note, however, that if the image does not completely

fill the background, the background color will form a border around the image. Background color and text color can also be set from the View menu.

Home Help

Tapping an icon displayed at Home launches that application. In addition to applications, it is also possible to register icons for associated files

here. The Home screen is divided into tabs. There are 4 tab types as default, and up to 10 types of tab can be registered. As for the icons on

the tab, up to 18 icons per one tab can be registered.

An image can be used as the background for the tab screen.

Running Tab

The names of currently running applications are displayed at the Running tab.

Applications can be switched or quit here.

Text Color can be selected from the View menu, and Tab Settings and About can be selected from the Tools menu.

?To activate applications, tap and hold the name of the application you want to activate to, then tap Activate from the pop-up menu.

?To stop an application, tap and hold the name of the application you want to stop, then choose Stop from the pop-up menu. If Stop all is selected from the pop-up menu, all currently running applications are stopped.

180

Chapter 9: Optional Functions

?Stop all can also be selected by tapping and holding on the Running tab screen without selecting an application name.

Launching applications

When an icon on the tab screen is tapped, the application or associated file registered at the icon is launched.

?Applications can also be launched by selecting them with the cursor button then pressing on the center of the cursor button.

Switching the icon display

Tap on the View menu to display the current display settings. Current display

settings are indicated by check mark at the left. To switch the display, select Large Icon or Small Icon.

Icon settings

1. Moving icons (using the pop-up menu)

1. Tap and hold the icon you want to move on the tab screen.

2. When the pop-up menu appears, select Cut from the menu.

3. Tap on the tab to which you want to move the icon, then tap Paste from the Edit menu to move the icon and display it on the tab screen.

?It is not possible to move icons to tabs already containing 18 icons. When an icon is moved, it is positioned at the very end of the tab's icons.

2. Deleting icons

1. Tap and hold the icon you want to delete. A pop-up menu appears.

2. Tap Drop from the pop-up menu to delete the selected icon from the tab screen.

?When an icon is deleted, subsequent icons are all moved up one place.

3. Adding icons

1. Tap the tab to which you want to add an icon to select that tab.

2. Tap Add from the Edit menu to display the Add Application screen.

3. Tap the Application file box.

4. From the list, tap the application you want to add. To select a file not on the list, tap Browse, then select the file from the Browse Dialog.

181

Toshiba Pocket PC e800/e805 User's Guide

5. Input the name of the icon you want to add (up to 32 characters) in the Application name box.

6. Tap OK. The new icon is added.

182

Chapter 9: Optional Functions

?Associated files can be specified for added icons.

?If either one of Application file or Application name is not filled in, an icon can not be added.

4. Browse Dialog

1. Tap the Folder box to select the folder to be browsed.

2. Tap the Type box to select the type of file to be browsed.

3. The list of the files of the specified type and in the specified folder

appears on the screen. Select the desired application or file or the image to be used as the background and tap it. The original screen reappears.

?If a storage card is inserted into the main unit when adding icons, icons of applications and files on the storage card are also displayed on the browse screen. The folders and files on the storage card can be displayed in the Folder box, beginning at the topmost level.

?If an icon on a storage card is added, that storage card must be inserted when the icon is tapped or the file will not be launched.

Tab settings

1. Switching tabs

Tap on another tab to switch the tab screen.

Initially four tabs are registered: Running, Main, Programs and Games.

2. Changing tab names

1. Select Tab Settings from the Tools menu. The Tab Settings screen appears.

2. Tap the Select tab box to select the tab to be changed.

3. Tap Rename. The screen for inputting the new tab name appears.

4. Input the new tab name (up to 10 characters) into the Rename to box.

5. Tap OK. The tab name is changed and the Tab Settings screen reappears.

6. Tap OK at the upper right to return to the Home screen.

7. Deleting tabs

1. Select Tab Settings from the Tools menu. The Tab Settings screen appears.

2. Tap the Select tab box to select the tab to be deleted.

3. Tap Delete. A dialog asking you to confirm you want to delete the tab appears.

183

Toshiba Pocket PC e800/e805 User's Guide

4. Tap Yes. The tab is deleted and the Tab Settings screen reappears.

5. Tap OK at the upper right to return to the Home screen.

?Note that when a tab is deleted, all the icons on that tab are also deleted.

?Delete cannot be selected if there are only two tabs on the Home

4. Adding tabs

1. Select Tab Settings from the Tools menu. The Tab Settings screen.

screen appears.

the New tab box.

2. Tap New. An input screen appears.

3. Input the name you want to give the tab (up to 10 characters) into

4. Tap OK. The new tab is added and the Tab Settings screen reappears.

5. Tap OK at the upper right to return to the Home screen.

5. Setting the background image

1. Select Tab Settings from the Tools menu. The Tab Settings screen appears.
2. Select the tab whose background you want to set at the Select tab box.
3. Tap Browse to display the Browse Dialog.
4. Select and tap the image to be used as the background. The Tab Settings screen reappears.
5. Tap OK at the upper right to return to the Home screen.
6. Setting the text color
Different colors can be set for the application names at the different tabs.
1. Display the tab whose color you want to set, then select Text Color from the View menu.
2. Tap the color you want to set from the list of display colors. That color is set for the application names.

184

Chapter 9: Optional Functions

How to Make a Backup

Periodical backup of your data is highly recommended. You can make a backup of the Toshiba Pocket PC e800/e805 data to a storage device. Additionally, if you have backed up your data on a storage device, you can

restore that data in your Toshiba Pocket PC e800/e805 as well as delete backup file data from the storage device.

Data of the following three types can be backed up:

File: Includes a file created by Pocket Word, Pocket Excel, Notes, or an

additionally installed program.

Registry: Settings information on Windows Mobile 2003 or built-in programs.

Database: Microsoft Pocket Outlook information.

1. Data such as the password in Settings cannot be restored.
2. The data stored in the Flash ROM disk cannot be back up.
3. Before backing up or restoring data, stop other applications, and connect the AC adapter to the Toshiba Pocket PC e800/e805.

4. If you make a backup to the CF/SD card or Flash ROM Disk using the DataBackup Utility, please DO NOT: remove the CF/SD card, reset the device, and/or turn off the device's power until the backup is completed.
5. If you restore the data from the CF/SD card or Flash ROM Disk by DataBackup Utility, please DO NOT: remove the CF/SD card, reset the device, and/or turn off the device's power until the restore is completed. Failure to follow any of the above procedures may result in the loss of data.

Making a Backup

Before performing the backup or restore operations, do the following;
?Check that there is enough space in the main unit's memory and on the storage device. The backup process will stop if the storage device
185

Toshiba Pocket PC e800/e805 User's Guide

becomes full before completing the backup. The backup data is saved as a .dbk file on your storage device.

?Make sure the main unit's power is off when loading and unloading the CF/SD card.

?Save current data in the main unit's memory before backing it up on the storage device.

1. To make a backup to the CF/SD card, insert a CF Card or SD Card. Make sure to do so in the proper direction.

2. Tap Start, Programs, and then DataBackup to display the DataBackup screen shown below.

3. Tap Backup from Functionality, and select the storage destination. Tap to select Backup.

Tap to select the storage destination.

Tap to select:

Whole data: All files stored in main memory, registry, and database.

PIM data: Pocket Outlook data (Contacts, Calendar, and Task).

4. Tap Start. The screen for confirming that other applications have ended appears.

5. To display the Backup password input screen, tap OK.

6. Enter a password. You can enter a password up to a maximum of 16 characters. Backup can be made even without entry of a password. If a password is entered, that password is required at the time of restore.

186

Chapter 9: Optional Functions

NOTE If you forget the password, you cannot restore the backup data. Do not forget your password. Write down the password and keep it in a safe place where only you know.

7. When finished, tap OK. The progress bar is displayed during the backup process. When the backup is completed, the backup finish message appears. The backup time that is displayed on screen is the time that the backup was started.

8. Tap OK to return to the previous screen.

9. Tap Exit to close the DataBackup screen.

NOTE The backup process will stop if the storage device becomes full before completing the backup. Before starting the backup, check the remaining storage device capacity.

If the storage card is write-protected, you cannot save the backup data. Cancel the write-protection before starting the backup.

Backups can also be made periodically. For more information, see "Making an Auto Backup" on page 189.

Backup files are always overwritten.

Carrying Out the Restore Operation

To restore is to overwrite the backed up data from the storage device onto

the main memory of your Toshiba Pocket PC e800/e805. Prior to restoring your data, please consider the following:

?If the same file name exists in the main memory of your Toshiba Pocket PC e800/e805, this file data is replaced with the backup data from the storage device.

?If files exist in the main memory but not in the backup file, they

will not

be overwritten.

1. To restore from the CF/SD card, insert the CF/SD card that contains the backup data into your Toshiba Pocket PC e800/e805.

2. Tap Start, Programs, and then DataBackup to display the DataBackup screen shown on the following page.

187

Toshiba Pocket PC e800/e805 User's Guide

3. Tap Restore from Functionality, and select the storage destination. Tap Restore.

Tap to select the storage destination.

4. Tap Start. The screen for confirming that other applications have ended appears.

5. Tap OK to display the Restore password input screen.

6. Enter the password used when backing up the data (if the file was previously created without a password, then a password is not required).

7. When finished, tap OK. The progress bar is displayed during the restore process. When the restore is completed, the restore finish message appears.

188

Chapter 9: Optional Functions

8. Tap OK. Your Toshiba Pocket PC e800/e805 is now reset and it will automatically restart.

If your Toshiba Pocket PC e800/e805 memory becomes short of its capacity during restore, the restore process stops. Increase the memory allocation of the main memory of your Toshiba Pocket PC e800/e805 (see "Customize Your Toshiba Pocket PC" on page 58), and then restart the restore procedure.

Data backed up on a legacy model Toshiba Pocket PC or another manufacturer's Pocket PC (simply called "other Pocket PC" from here on) cannot be restored to your Toshiba Pocket PC e800/e805. To load other Pocket PC data to your Toshiba Pocket PC e800/e805, use Active-Sync to synchronize the personal computer with the other Pocket PC. Next, synchronize the personal computer

with Toshiba Pocket PC e800/e805, and then load the data to Toshiba Pocket PC e800/e805.

Deleting a Backup File

You can delete a backup file and replace it at another time or make room

for more data on your Toshiba Pocket PC e800/e805.

To delete the backup data on CF/SD card:

1. Insert the CF Card or the SD Card into your Toshiba Pocket PC e800/e805.
2. To display the Backup screen, tap Start, Programs, then DataBackup.
3. Tap Delete Backup File from Functionality, and select the storage destination.
4. Tap Start.
5. To delete the backup file, tap OK.
6. Tap Exit to close to the DataBackup screen.

Making an Auto Backup

You can set up your Toshiba Pocket PC e800/e805 to automatically backup files at a specified time intervals. Select the backup time, occurrence,

and frequency that best suits your needs. For example, when you

189 Toshiba Pocket PC e800/e805 User's Guide

select auto backup set1, data is automatically backed up at the specified day of the week and time.

NOTE Even if your Toshiba Pocket PC e800/e805 is turned off, data is periodically backed up.

To make a backup to the CF/SD card:

1. Insert a CF Card or a SD Card
2. To display the DataBackup screen, tap Start, Programs, then DataBackup.
3. Tap Auto backup settings from the Tools menu. The Settings screen is displayed.
4. Set the desired items.

Select Do auto-backup.

If required, enter a password.

Select the storage device.

Select if power off backups

are required.

5. Tap OK. The settings data is saved and periodical backups will be made at the preset time.

190

Chapter 9: Optional Functions

6. Tap Exit to close to the Backup screen.

NOTE If the "Do auto backup only when power is off" check box is not marked, the auto backup confirmation screen will be displayed if your Pocket PC is ON when the auto backup occurs. The backup will be automatically started if you tap OK or about 30 seconds elapses after the confirmation screen is displayed. Tap Cancel to stop the backup.

If the "Do auto backup only when power is off" check box is selected, the message screen will be displayed, and the backup will be started after about 10 seconds if your Pocket PC is off when the auto backup occurs.

Auto backups will only occur if the AC Adapter is connected or the remaining battery charge is 50% or more.

You can confirm whether or not auto backups have occurred by checking when the last backup was made.

Depending on the conditions, auto backups may not occur.

Auto backups will not occur if the preset storage card is not inserted in the card slot at the specified auto backup time.

Do not turn your Toshiba Pocket PC e800/e805 off during an auto backup. Doing so might damage the data or your Toshiba Pocket PC e800/e805.

If the storage device runs out of data storage space during an auto backup, the backup will end midway. Before an auto backup is made, check the amount of free space on the storage device.

System Information

The System Information program displays the system information such as CPU clock, CPU stepping, Boot Loader Version, OS Version, PIC Version, MAC address (WirelessLAN model only), and UUID. The information is displayed by accessing the Identity, Memory, Drivers, System, and

Wireless tabs.

To launch the program, tap Start, Settings, System, and then System Information.

191

Toshiba Pocket PC e800/e805 User's Guide

T

about Identity ,
, and Wireless
settings.

Memory Tab

Identity Tab

The opening menu presents identification information for product
service.

The Memory tab presents information about the systems RAM, ROM, and Flash ROM Disk.

Driver Tab

The Driver tab displays the drivers used by the system's software applications.

System Tab

The System tab displays CPU, operating system, and other system information.

Wireless Tab

The Wireless tab displays information about the Built-in Wireless LAN adapter.

Tools Menu

The Tools menu displays the system information and allows it to be exported to a text (*.txt) file. Export exports all system information parameters

to a text (*.txt), and About displays the system information version.

192

Chapter 9: Optional Functions

ATI Presentation Pack

The Toshiba Expansion Pack with ATI IMAGEON Dual Display Solution comes bundled with the ATI Presentation Pack, which includes the IA Presenter

and IA Screen Mirror modules.

IA Presenter

Take your Microsoft Windows PowerPoint slides and use IA Presenter to run a smooth presentation directly from your Pocket PC. IA Presenter can

run as a standalone mobile PowerPoint player using your portable device's LCD screen. But with IA Presenter and the Toshiba Expansion Pack linked to an LCD projector or a monitor, you can create powerful presentations

from your Pocket PC.

IA Screen Mirror

The IA Screen Mirror with the Toshiba Expansion Pack projects the current contents of your Pocket PC's LCD screen onto an external projector, or monitor. It can display up to nine different images from your LCD output

at the same time on the second display. See page 203 for information on updates.

IA Presenter

Getting Started

After you invoke IA Presenter, the screen lists all the converted PowerPoint presentations currently in your \My Documents folder. A sample presentation

file is included with the installation, so at least one file will be listed when you initially invoke IA Presenter.

To receive a presentation file into the \My Documents folder of your Pocket PC via Infrared beaming, tap Tools in the lower left corner of the

screen, then select Receive via InfraRed...from the menu shown above.

To drag-and-drop a PowerPoint file from your computer to your Pocket PC, see the section Using IA Presenter's Desktop Converter on the next page.

The Options... command on the Tools Menu opens the General, File, Display,

and VGA Output tabs. These tabs are explained in the on-line Help file, which can be accessed from the Tools Menu by tapping Help....

Or,

after opening one of the tabs, select Help from the Windows Start Menu.

Installing the ATI Presentation Pack

All components of the ATI Presentation Pack are installed together by

doing as follows:

1. Make sure your Pocket PC is connected to your computer and that an ActiveSync connection has been established.

193

Toshiba Pocket PC e800/e805 User's Guide

2. Start the ATI Presentation Pack installation by running the Setup program.

NOTE You can setup ATI Presentation Pack from Companion CD

3. After accepting the license agreement, choose the folder to which you want the ATI Presentation Pack to be installed. Click Next to accept the default destination folder; click Browse... to specify a different folder.

4. Check your Pocket PC screen for any additional steps required to complete the installation.

Using IA Presenter's Desktop Converter

When you drag-and-drop a PowerPoint file from your PC to your Pocket PC, the ActiveSync Converter in the IA Presenter will automatically convert

the PowerPoint file to a special IA Presenter format for your Pocket PC, using the resolution you specify. The file will be placed in any folder

on your mobile device where you choose to drag-and-drop it.

NOTE PowerPoint 97 or PowerPoint 2000 (or greater) is necessary for using IA Presenter's Desktop Converter.

There are two ways to open the "Set ActiveSync Conversion Options" dialog box:

- 1) Select ATI Presentation Pack from the Start Menu, and then Set IA Presenter ActiveSync Conversion Options from the submenu.

The dialog box will open, establishing it as your default PowerPoint filter

for your ActiveSync drag-and-drop operations. You can choose a dimension and then clear the Show this option dialog box next time check box (it is selected by default as shown in the figure above).

If

you cleared it, the dialog box will not open whenever you drag-and-drop a file from your computer to your mobile device. Instead, the

dimension you specified will be used during each conversion.

?2) You can set the dimension each time you drag-and-drop a PowerPoint file from your computer to your mobile device. If the Show this option dialog box next time check box has not been cleared, the IA Presenter "Set ActiveSync Conversion Options?dialog box will open automatically every time you drag-drop a PowerPoint file to your Pocket PC.

Choosing Dimensions for the Converted .IAP File

The conversion filter supports both PPT and PPS PowerPoint files. The conversion options are:

194

Chapter 9: Optional Functions

Pocket PC LCD Size ?320 x 240: Select this option if you only want to display the presentation on the LCD screen of your Pocket PC. However, if you have tried the 320 x 240 button and then find that images on the Pocket PC screen have been stretched to fit the screen, and you do not want this effect, try converting again using the User-defined button. After selecting User-defined, enter 240 in the first box, and 320 in the second box.

If you want to prepare the file to project the presentation to a VGA screen

or video monitor, select one of these options:

VGA ?640 x 480

SVGA ?800 x 600

User-defined: If you do not want to use one of the pre-defined dimensions listed above, select the User-defined option and enter your own value in the fields.

XGA 1024 x 768 is not supported. NOTE

Opening a Presentation and Using View Modes

When you invoke IA Presenter, the first screen that appears lists all the

converted PowerPoint presentations currently in your \My Documents folder. Tap on the name of the file you want to load. You can then choose from the following view modes.

Normal View

Normal view allows you to view the current slide in the upper pane, while

still able to navigate slides conveniently using the lower thumbnail pane.

You can drag the Splitter Bar that divides the two panes up or down, to

adjust the screen distribution above and below the splitter. The Normal View icon is located at the leftmost side of the Toolbar, as shown below.

You can also use the stylus to pan the slide image in the upper pane to

show the part covered by the lower pane. The splitter position will automatically

be remembered across multiple application sessions, freeing you from having to adjust the splitter position again during the current IA

Presenter session.

To display a different slide in the upper pane, simply tap on the desired thumbnail in the lower pane, or use the Slide Title Bar (unnamed slides will be represented by a number in the Slide Title Bar drop-down list).

The

lower thumbnail pane in Normal view provides slide navigation. If you want to select multiple slides for further operations, use the Slide Sorter

view, as explained in the next section.

You can project the currently selected slide to VGA Display by activating the VGA Slide Toggle command on the View Menu, or by tapping the

195
Toshiba Pocket PC e800/e805 User's Guide

VGA Slide Output Toggle icon at the rightmost side of the Toolbar. To end the projection, select the command again to toggle it off.

Slide Sorter

Slide Sorter view fills the entire application space with either large or small

thumbnails, depending on whether Large Thumbnail or Small Thumbnail is active on the View Menu. You can select:

?One slide by tapping on it, or

?Multiple adjacent slides by dragging your stylus over them, or

?If you select Multiple Select Mode on the Edit Menu, you can tap, drag, or a combination thereof, to select multiple slides that are separated.

Selected slides will be highlighted by a different border color. You can project an individual slide to the VGA output by activating the

VGA Slide Toggle command on the View Menu, or by tapping the VGA Slide Output Toggle icon at the rightmost side of the Toolbar. When you

activate this function:

?If one slide is selected at the time you toggle the VGA Slide Output "on,?that slide will be output to the VGA Display.

?If multiple slides happen to be selected, the first selected slide in

the sequence will be output to the VGA Display.

?If no slides are selected, there is no change to the current status of

the VGA Display. That is, if an image is already displayed on the VGA Display, that image remains until you select a slide on your LCD screen for projection.

To end the projection and return to viewing the slide only on your mobile device's screen, just select the command again (or tap the icon a second time) to toggle it off.

Indicator Icons under Thumbnails

Under each thumbnail in Slide Sorter view mode, there may be various small icons displayed which indicate the status/attributes of the slide, as

follows:

The transition icon indicates that a transition effect has been associated

with the slide, and tapping the icon will "demo?the transition effect.

The shape icon indicates that the slide contains animated shapes.

If you assigned a transition delay-time to the slide in the Automatically field of the Edit Menu, Slide Transition... screen, the delaytime will be shown.

196

Chapter 9: Optional Functions

The slide number is always shown at the right. If the slide has been hidden using the Hide Slide command on the Edit Menu, the slide number will be enclosed in a red box with a line crossing it out.

Notes Page

Notes Page view displays the current slide content in the upper pane, with

the lower pane displaying the speaker notes that were entered for the original PowerPoint presentation, or entered/edited in IA Presenter.

The

upper pane operation is the same as in Normal view. The lower pane is both a Notes display window and an editing window. After editing a Note, tap OK in the upper right corner to save it.

When in Notes Page view mode, you can project the currently-selected slide to VGA output by activating the VGA Slide Toggle command on the View Menu, or by tapping the VGA Slide Output Toggle icon at the rightmost side of the Toolbar. To end the projection and return to viewing the slide only on your mobile device screen, just select the command again to

toggle it off.

Quick Notes

The Quick Notes command on the View Menu (and the Quick Notes View icon on the Toolbar) gives you a view mode that combines the thumbnail images of Slide Sorter view with the Notes pane of the Notes Page view. When you tap on a thumbnail, a border around it indicates it is selected. You can also use the Up, Down, Left, or Right buttons on your mobile device to move the selection focus (or the Slide Title Bar, if you chose to

display it).

The lower pane displays the Speaker Notes that were entered for the original

PowerPoint presentation, or entered/edited in IA Presenter. The lower pane is both a Notes display window and an editing window. Tap in the lower pane to start editing a Speaker Note. The editing functionality is the

same as for Notes Page view.

If the Cut/Copy/Paste/Clear/Undo/Select All commands are required for editing the text, press your stylus within the Notes pane to activate the

pop-up editing menu. The Notes-editing operation can be undone by selecting the multiple-steps Undo command on the Edit Menu, pop-up menu, or Toolbar.

Slide Show

The Slide Show command on the View Menu starts a full screen Slide Show on the Pocket PC's LCD screen. (If you want to project the slide show to VGA output, you must use the VGA Slide Show command.)

Before selecting Slide Show or VGA Slide Show, you should select Set Up Show... from the Tools Menu to set up the desired behavior for your slide show.

197

Toshiba Pocket PC e800/e805 User's Guide

If the Auto-Rotate option is cleared in the Tools, Options, Display tab,

the slide will be automatically rotated according to the direction you choose (Left or Right).

Depending on the slide advancement setting specified in the Slide Transition

dialog box, you can tap to advance the slide (or the next animated object); use the navigation (arrows) buttons of your Pocket PC to advance/back play the slides; or, IA Presenter will automatically advance

slides based on the number of seconds (delaytime) you set. Sound effects will also be played according to your assignment.

Pop-Up Menu for Slide Show Mode

If the Show Pop-up-Menu Button option is cleared in the Tools, Options, and then Display tab, a small transparent icon will be shown in the upper

left corner of the LCD screen. Tapping on the small icon will activate the

Slide Show mode's pop-up control menu. If this option isn't cleared, you

can always tap-and-hold your stylus during Slide Show mode to activate the pop-up menu. The commands on the menu are explained below.

Next/Previous

Displays the next or previous slide, or next or previous animated object (if

the animated object display was designed). Hidden slides won't be shown.

Go

The Go submenu allows you to jump to the First Slide, Last Slide,

Previously

Viewed Slide, or jump to any slide using Navigate by Title.

Trigger

If the Trigger mode is selected, the slide show will advance according to

the mode you set using the Tools Set Up Show... command or Set Up

Show icon. For example, if you have specified to advance the slides manually,

they will advance each time you tap on the screen. If the slide show is

set to play automatically, you can use the pop-up menu to put it on pause

or end it immediately. IA Presenter is set to Trigger mode by default.

198

Chapter 9: Optional Functions

Pen

Select the Pen command to enter Ink annotation mode. During the Ink annotation mode, you can use the stylus to mark or highlight the presentation

elements on the screen. To exit the Ink annotation mode, select the Trigger, VGA Pointer, or VGA Zoom mode from the pop-up menu.

Use the Pen Color submenu to choose the Ink color, and use the Pen Width submenu to choose a thickness.

If Pen mode is active when you select Blank from the Screen submenu, you will be able to draw or write Ink annotation on the projected black screen. (The Screen submenu also lets you undo the most recent Ink stroke, or erase all of the Ink strokes.)

VGA Pointer

This mode works only when IA Presenter is in VGA Slide Show view. After you select the VGA Pointer command, your stylus movements on the LCD screen will simulate a laser pen light on the VGA screen during presentations.

(To exit the VGA Pointer mode, select Trigger, Pen, or VGA Zoom from the pop-up menu.)

VGA Zoom

This mode works only when IA Presenter is in VGA Slide Show view. After you select the VGA Zoom mode, you will be able to specify a portion

of

the screen which will be projected to the VGA screen, and also a zoom ratio for that specific area. (To exit VGA Zoom mode, select Trigger, Pen,

or VGA Pointer from the pop-up menu.)

The message that appears on your screen when you invoke VGA Zoom mode depends on the value that is currently selected on the VGA Zoom Size submenu. The message will either tell you to tap-and-drag your stylus

to define an area yourself, or it will tell you to simply tap your stylus to

create a zoom area of pre-defined size. You can specify the zoom ratio using the VGA Zoom Ratio submenu, accessed from the Slide Show pop-up menu.

199

Toshiba Pocket PC e800/e805 User's Guide

Pen Color

Tapping Pen Color opens a submenu of available colors to use for your Ink annotation when in Pen mode. Select one of the available colors as

the new pen color. The Reset command resets the pen color to the default White color.

Pen Width

Tapping Pen Width opens a submenu of available pen widths to use for your Ink annotation when in Pen mode. Select a thickness settings as the

new pen width to be used for Ink strokes on the LCD screen (and projection to VGA output, if desired). The 1 Unit option is the thinnest setting. Higher values give you thicker widths.

VGA Zoom Size

The VGA Zoom Size command opens a submenu of "zoom area?" options. When you invoke VGA Zoom mode by selecting it on the pop-up

menu, the current setting on the VGA Zoom Size submenu will be activated. The Quarter, Large, Medium, Small, and Tiny settings on the submenu represent pre-defined areas. For example, if Quarter is selected, tapping

on your LCD screen will automatically produce a rectangular area which

is

the size of one-quarter of your LCD screen (centered around the spot where you tapped).

The "zoom area" will be displayed on top of the already-existing projection

of the entire slide on the VGA screen.

After the rectangular zoom area exists on your screen, you can drag it to

any part of the screen you wish. It can also be converted to any of the

other pre-defined sizes by pressing your stylus on the LCD screen to open the pop-up menu again, then selecting a different value from the VGA Zoom Size submenu. The size of the existing area will then be changed accordingly.

If you select Drag Select on the submenu, you will be able to drag your stylus on the LCD screen and freely define any area for zooming. After the

desired area has been specified, you can drag it to any portion of the screen. You can also resize it by dragging any of its corners. To specify the zoom ratio for the projected zoom area, use the VGA Zoom Ratio command.

VGA Zoom Ratio

The VGA Zoom Ratio command opens a submenu of pre-defined "zoom ratio" options. When you invoke VGA Zoom mode by selecting it on the pop-up menu, the current setting on the VGA Zoom Ratio submenu will be activated.

Screen

200

Chapter 9: Optional Functions

The Screen submenu contains commands that allow you to pause a Slide Show (Pause Auto Play), project a blank screen (Blank), undo the most recent Ink stroke (Clear Last Pen), or erase all Ink strokes (Clear All

Pen).

Pause Auto Play

If you have specified that you want slides to advance automatically after a

specified number of seconds (using the Set Up Show... command on the

Tools Menu or the Set Up Show icon on the Toolbar), you can select Pause Auto Play during the playing of a slide show to pause the show. When ready to continue the automatic progress of a slide show, tap Resume Auto Play.

Blank

When you select Blank, your LCD screen will become completely black, and the black screen will also be projected to your VGA screen. (After you have selected Blank, the command name changes to Restore. Tap Restore when you are ready to return to the slide that was previously displayed.)

Using the Blank Option with Pen Mode:

When the Blank option is active and IA Presenter is in Pen mode, you can write or draw digital Ink on the screen, and it will be output to the VGA

device. In effect, this allows you to project an "electronic blackboard" which you might find useful when giving a presentation to an audience.

Be

aware that any Ink strokes you draw on the Blank screen will be lost when

you exit Blank mode. They cannot be retained.

When IA Presenter is in VGA Zoom mode or VGA Pointer mode, the Blank option is not available.

Clear Last Pen

Erases the last individual Ink stroke. This command can be applied repeatedly until there are no more Ink strokes in the current slide.

Clear All Pen

Erases all the pen strokes on the current slide.

201

Toshiba Pocket PC e800/e805 User's Guide

Speaker Notes

This command displays the current slide's Note text (if any) in a pop-up window, with the slide number also shown, on top of the displayed slide. To advance the slide or object when the Speaker Notes window is shown, tap on the underlying slide. When you advance the slides, the Speaker Notes window remains open and interactively displays the Note text of the

related slide. To close the Speaker Notes window, tap the X in the upper right corner.

End Show

This command terminates the Slide Show playback mode and returns to the mode you were using prior to entering Slide Show mode. The Action button on your Pocket PC can also be used to exit Slide Show mode.

VGA Slide Show

VGA Slide Show mode operates almost identically to the Slide Show mode, except for the following operational differences:

?You should use the VGA Output tab in the Tools, then Options... command to set VGA output-related options. You can also elect to have IA Presenter perform dithering for your slide if you project your slide to an external VGA/video device with less color capability (such as only 256 colors available).

?During VGA Slide Show mode, the presentation output will be directed to both the Pocket PC's LCD screen and the external connected VGA device or video device.

The Pocket PC will always show the reduced size version, while the VGA/video device will view the original matching dimensions set during ActiveSync conversion. Or if your current presentation has a dimension specified which is different from the exact dimension of your selected output dimension, IA Presenter will automatically re-size the slides to fit the output dimensions.

?The Ink annotation will be projected to both the VGA video device and the LCD screen.

?You can use VGA Zoom on the pop-up menu to designate an area on a slide during VGA Slide Show view, and project that specific area to the VGA screen (on top of the already-existing projection of the entire slide). Use the VGA Zoom Size command to specify an area of predefined size, or manually drag your stylus on the LCD screen to specify the desired area of the slide. Then use the VGA Zoom Ratio command to choose the ratio at which you want the zoomed area to be projected. After the "zoom window" has been created, it can be dragged to enclose other portions of the slide on your LCD screen, and this movement will also be reflected in the projected image on the VGA output.

?You can use the VGA Pointer command on the pop-up menu to enable movements of your stylus on the LCD screen to simulate a laser pen light on the VGA screen during VGA Slide Show presentations. ?In addition to being able to draw digital Ink annotation on your slides, you can project a black screen to the VGA output and write or draw projected Ink on it. To use Ink on the blank screen, make sure you are in Pen mode on the Slide Show pop-up menu before selecting Blank from the Screen submenu.

In addition, before a VGA Slide Show can be projected to a VGA screen, you must specify the appropriate settings. Select Options... from the Tools Menu, then tap VGA Output.

More information about the General, File, Display, and VGA Output tabs are included in the on-line Help.

Controlling Transition Effects

Any transition effects that were assigned in your original PowerPoint file

will be retained when the IA Presenter Converter converts it to an .iap file

on your Pocket PC.

However, IA Presenter also furnishes many attractive transition effects that can be assigned to the .iap file. You can assign a particular transition

effect to an individual selected slide, or to all slides in the current file.

After you select one or more slides, tap Slide Transition... on the Edit

Menu or the icon on the Toolbar.

The Slide Transition screen will appear. In it, you can select a transition

effect, a speed for the transition effect, method of slide advancement during

a slide show, and associate a sound (.wav file) to a slide.

Merging Presentations

You can merge the slides of two different presentations into one file. The

new inserted slides will adopt the Master Slide style of the current file.

Therefore, you should first open the presentation whose Master Slide

style you want to adopt to.

The next thing you should do is select Options... from the Tools Menu and open the File tab. Tap OK to close the tab and save the settings. If you selected To Current Selection in the File tab as the insertion position,

use your stylus to tap the desired insertion point in the current file (in

Slide Sorter view). Or, select the slide after which you want the imported

slides to be inserted.

203

Toshiba Pocket PC e800/e805 User's Guide

Select the Insert Slides From Files... command from the Tools Menu.

A

listing of files will appear. Tap the name of the file whose slides you want

to merge with the current file, and it will be done immediately. This command

can be undone or redone (Edit Menu). You can also use Save Presentation As... (Tools Menu) if you wish to save a backup copy before you start the merge operation, if desired.

More information about the General, File, Display, and VGA Output tabs are included in the on-line Help.

IA Screen Mirror

IA Screen Mirror projects an exact emulation of your mobile device's screen contents (LCD display) onto a connected external VGA output device or television monitor via the Composite video or S-video terminals.

It allows you to project and display multiple LCD screens on the VGA screen simultaneously, "freeze" them in the desired state, and maintain one as the active viewport. Flexible output control options let you control

the allocation of CPU utilization, orientation, resolution, and color optimization/

dithering of projected images.

Getting Started.

Tap the IA Screen Mirror icon in your Programs group to start the IA Screen Mirror program.

1. Use the Layout tab to set up the viewports to which you will project images.
 2. Use the Switch tab to assign a "switching?button on your mobile device.
 3. Use the Refresh tab and VGA tab to customize other parameters as desired.
 4. Tap OK to project the LCD screen contents onto the active viewport.
 5. Start and operate the application you want to project ("foreground application?.
 6. To make adjustments to the settings, use the "switching?button on your mobile device to freeze the active viewport and return to the IA Screen Mirror control screens. Tap OK to continue the projecting.
 7. Use the Exit Program button to terminate IA Screen Mirror entirely and stop projection to the VGA screen.
- For more information please refer to the on-line Help.

204

Chapter 9: Optional Functions

On-line Help

This Manual serves as a quick-reference guide. For more details about any feature, consult the on-line Help. When using IA Presenter, select Tools, then Help for the main Help table of contents. In IA Screen Mirror, tap the Help button in the About tab to access the main Help file. Context-

sensitive Help is also available. If, during some operations, you cannot open the Tools Menu, you can access the context-sensitive Help messages via the Windows Start Menu.

A Note about Updates to the ATI Presentation Pack

Your copy of the ATI Presentation Pack contains the latest versions of IA

Presenter and IA Screen Mirror. For updates, please visit the IA Style web site (www.iastyle.com).

205

Toshiba Pocket PC e800/e805 User's Guide

206

Toshiba Pocket PC e800/e805 User's Guide

207

Chapter 11: Additional Information

Chapter 11:

Additional Information

Correction

Charge the battery.

Lock side.

Switch Battery Pack Lock to the Lock side.

Charge the battery.

Select , Settings, System, Power to set to alter the power shut down time.

Replace the main battery with a new one.

Troubleshooting

Check the following guide for the possible cause of a problem and how to correct it.

Cause Symptom

The battery power is exhausted.

Even if the power button is pressed and the power does not turn on.

The main battery or the Attach the main battery/High Capacity Battery is Capacity Battery and switch not attached. Battery Pack Lock to the Battery Pack Lock is at the Release side. exhausted.

The power was suddenly The battery power is cut off.

Automatic suspend is active.

The battery is extinct. Even if the battery is completely charged, it discharges after a short period of time.

208

Toshiba Pocket PC e800/e805 User's Guide

Cause Symptom

The screen was tapped, Touch screen
but the correct action was adjustment is incorrect.
not executed.

Insufficient memory The operation is slow in
response.

Some malfunction.

Some malfunction. The screen was tapped,
but there is no response.

The operation button
does not work either.

The screen light is off. The screen is dark.
The screen is hard to see. Brightness setting is
incorrect.

?Cannot connect to your
computer.

The USB driver of your Reselect the USB driver.
computer may not be

ActiveSync does not
function when your

Toshiba Pocket PC e800/ compatible.

e805 is connected to your
computer with a cradle or
USB cable.

209

Correction

Select , Settings,
System, Screen, Align
Screen to adjust the touch
screen.

Secure the free memory.

Quit the application if it is not
in use.

Reset the system. If no
action is observed after
resetting the system,

initialize the system.
(However, the data will be
deleted.)

Reset the system. If no
action is observed after
resetting the system,
initialize the system.
(However, the data will be
deleted.)

Press and hold the power
button until the screen light is
turned on.

Select , Settings,
System, Screen Light to
adjust the screen brightness
for better sight.

See Help of ActiveSync.

Symptom

Cannot access the
Internet.

Following message is
displayed.

"NOT ENOUGH
BATTERY POWER.

USB devices can not be
used. Because PDA's
battery power is low.?

Following message is
displayed.

"TOO MUCH USB
CONNECTION.

Connecting USB devices
are too much.?

Following message is
displayed.

"USB OVER CURRENT is too large.
DETECT USB device is
turned off. Please

disconnect USB device.?

Chapter 11: Additional Information

Correction Cause

The connecting using a Check whether the specified cellular phone connecting using a specified connection cable was not cellular phone connection correct. cable is correct. are satisfactory.

Radio waves of a Carry out communications connected cellular phone where radio wave conditions are getting worse.

Carry out correct setting. Setting is incorrect. low to use USB devices.

The Battery power is too Charge the battery or connect AC adapter.

The total power This USB port supports total consumption of 500mA USB device. Confirm connected USB devices connected USB device. is too large.

The total power consumption of

This USB port supports total 500mA USB device. Confirm connected USB devices connected USB device.

To enable USB port again, turn off the power of Pocket PC or push Reset Switch.

210

Toshiba Pocket PC e800/e805 User's Guide

If the function cannot be restored even if the reset button is pressed, initialize your Toshiba Pocket PC e800/e805.

Resetting

Reset is equivalent to "Restarting" a computer. Reset the Pocket PC e800/e805 when a button or tapping the screen does not respond. When your Toshiba Pocket PC e800/e805 is reset, all data that was not stored during operation will be deleted.

NOTE

When the power is on, press the reset switch with the stylus, then

release.

211

Chapter 11: Additional Information

Clear Memory

When you initialize your Toshiba Pocket PC e800/e805, it returns to the status when it was purchased.

When you initialize your Toshiba Pocket PC e800/e805, all data stored in the memory is deleted. Your Toshiba Pocket PC e800/e805's initially installed programs are not deleted.

Before initialization, remove all CF/SD cards.

1. Turn off the power.
2. Press the power button while pressing and holding the reset switch with the stylus, and then release the power button.
3. When a screen appears, release the reset switch. When initialization is completed, the Welcome screen appears. Set up the system according to the screen as in the case of startup procedure.

212

Toshiba Pocket PC e800/e805 User's Guide

Troubleshooting for Wi-Fi

If you encounter some problems while using our product, please refer to this troubleshooting section.

Problems

Cannot connect to the network

The host computer cannot wirelessly connect with my Toshiba Pocket PC e800/e805

Cannot edit the "Channel" In Infrastructure mode, the channel is field in "Infrastructure"

Mode?

decided by the Access Point. You can only join the existing network formed by the working Access Point, not to create a new Wireless Network.

Reset the Toshiba Pocket PC e800/e805. The Toshiba Pocket PC e800/e805 freezes

213

Make sure the Wireless Communication Switch is turned on.

Check if the SSID is correct (note that it is case-sensitive)

Check Link Quality in Config Page. If the link quality is poor, rescan and find another Access Point.

Check if the operating mode is set properly. See Config Page.

Check if the WEP key is correctly entered.

Be sure you are in the range of a working Access Point.

Make sure the channel been set is in the range of 1 to 11.

Make sure you have setup the partnership for your Toshiba Pocket PC e800/e805 and your host computer.

Make sure you are within the range of a working network.

Make sure you have entered the IP address of the host computer as the WINS server on your Toshiba Pocket PC e800/e805.

Reset your Handheld PC or Toshiba Pocket PC e800/e805 to make the TCP/IP settings take effect. Make sure the SSID, WEP keys and channel for all devices in the network are set the same. Make sure the channel been set is in the range of 1 to 11.

Solutions

Chapter 11: Additional Information

FAQ for Wi-Fi

A. Compatibility

A1: Should I use equipment with the same brand as the IEEE802.11b WLAN Adapter's to enable the wireless communication? This is not necessary. IEEE802.11b WLAN Adapter is Wi-Fi certified which means that it will work well with differing brands of equipment as long as the equipment is also Wi-Fi certified.

A2: Can I connect IEEE802.11b WLAN Adapter to other devices using Bluetooth?

No, you can only connect the IEEE802.11b WLAN Adapter to other IEEE802.11b equipment.

B. Wireless LAN Connectivity

B1: How do I form a wireless network?

Typically, you can form a wireless network by connecting Access Points. Different Access Points should have different channels. Every devices connected to the network should have the same SSID. When you are using Access Points, set the mode to "Infrastructure? mode. Without Access Points, you can still build a network where adapters communicate peer-to-peer using a shared SSID. When you are not using Access Points, change the operating mode to be ?02.11Ad Hoc? To set the operating mode, click Start, Settings, System, Wireless LAN Utility, then Config.

B2: How can I connect my Toshiba Pocket PC e800/e805 to the usable Wireless Network?

Click Start, Settings, System, Wireless LAN Utility, Scan to view Scan Page where you can find the usable Wireless Network. If you cannot see all the networks you are expecting, please click "Rescan? to see the list of usable Wireless Networks. Choose one Wireless

Network you want and double click the BSSID to connect to the network. Once the network is chosen, you need to configure the IEEE802.11b WLAN adapter.

Click Start, Settings, Connections, Network Adapters, IEEE802.11b WLAN Adapter, Properties, IP Address to set IP address, Subnet mask and Default gateway settings. Click Start, Settings, System, Wireless LAN Utility to edit other settings, such as Mode and SSID etc. If the WEP

Mode of the Wireless Network you selected is enabled (64bit or 128bit WEP Mode), please choose the proper WEP KeyID and the proper WEP Key value network.

214

Toshiba Pocket PC e800/e805 User's Guide

More Information

B4. What is 802.11 Ad Hoc Network? What should I do to form an 802.11 Ad Hoc Network?

B5. What is the difference between "Infrastructure" and 802.11 Ad Hoc Network Mode?

How do I choose?

B6. Could I use the 802.11 Ad Hoc Mode to access the LAN resources? How can I access the LAN resource without an Access Point?

B7. What should I do if my host computer cannot wirelessly connect with my Toshiba Pocket PC e800/e805?

E1. What is WEP?

E2. How many WEP security service mode does Wireless LAN support?

E3. How to set the WEP security service?

B3: How do I know whether or not my Pocket PC has already connected to an AP successfully?

1. Check BSSID. When there is a link, the current Basic Service Set ID of the Access Point been used will be shown in the BSSID field in Link Page. When the adapter is disconnected with the Access Point, "Non-associated" will appear in the BSSID field. To view BSSID, from your Toshiba Pocket PC e800/e805, click Start, Settings, System, Wireless LAN Utility, then Link.

2. Check Link Quality. Link Quality shows how clearly the adapter can hear the Access Point. If the quality is poor, it's better to rescan and find a better performance Access Point or re-arrange

the AP's position for better performance. To view Link Quality, from your Toshiba Pocket PC e800/e805, click Start, Settings, System, Wireless LAN Utility, Config.

B4: What is 802.11 Ad Hoc Network? What should I do to form an 802.11 Ad Hoc Network?

802.11 Ad Hoc Mode is used to create a peer-to-peer connection without an Access Point. The SSID must be the same among stations to enable the wireless communication within the local area network.

NOTE You need to choose a proper SSID and channel for the first 802.11 Ad Hoc station. For other stations want to join

the same SSID group, you could only choose the same SSID as the first station for connection. The Channel setting for the 802.11 Ad Hoc Network stations to join the existing 802.11 Ad Hoc Network will automatically be set as the channel number of the network

215

Chapter 11: Additional Information

More Information

B5. What is the difference between "Infrastructure" and "802.11 Ad Hoc" Network Mode?

How do I choose?

B6. Could I use the 802.11 Ad Hoc Mode to access the LAN resources? How can I access the LAN resource without an Access Point?

B7. What should I do if my host computer cannot wirelessly connect with my Toshiba Pocket PC e800/e805?

B5: What is the difference between "Infrastructure" and "802.11 Ad Hoc" Network Mode?

How do I choose?

Infrastructure Mode is used to connect your Toshiba Pocket PC e800/e805 with the Access Point. Usually, to form a Wireless Network, you can connect your Access Point to the ADSL, Cable Modem or LAN Ethernet and then configure the Access Point base on the User Guide for the Access Point to set the proper SSID, Channel and WEP security service. After that, configure the IEEE 802.11b WLAN adapter. Set the same SSID, Channel and WEP as the Access Point's. 802.11 Ad Hoc Mode allows your Toshiba Pocket

PC e800/e805 to form its own local network where devices communicate peer-to-peer, using a shared SSID, without Access Points.

Under 802.11 Ad Hoc mode, the SSID must be the same among stations so that the devices can communicate properly within the Wireless Network. If you want to form your network without any Access Points, you should choose 802.11 Ad Hoc mode.

B6: Could I use the 802.11 Ad Hoc Mode to access the LAN resources? How can I access the LAN resource without an Access Point?

Yes, you can access the LAN resources without an Access Point. Follow the steps shown below:

- (1) Make sure your host computer already successfully connect to the LAN or Internet through the LAN Adapter or the Modem.

- (2) Install the Wireless LAN Adapter into your Host computer successfully

and set 802.11 Ad Hoc Mode and the proper SSID to form the 802.11 Ad Hoc Network. Install and enable the ICS (Internet Sharing Software, such as "SyGate?..) function in your host computer. (Note that the Windows 2K or later version, OS, supports the ICS function in Local Area Connection Properties? Sharing)

- (3) Set your Toshiba Pocket PC e800/e805 as 802.11 Ad Hoc Mode and choose the same SSID to join the 802.11 Ad Hoc Network (choose the DHCP to get the IP assigned).

216

Toshiba Pocket PC e800/e805 User's Guide

- (4) Check and make sure the Wireless LAN Adapter in the 802.11 Ad Hoc Network have the same IP group. (You can "ping?each other to make sure the connection is successful)

- (5) Now you can access the LAN resource successfully.

B7: What should I do if my host computer cannot wirelessly connect with my Toshiba Pocket PC e800/e805?

- (1) Make sure you have setup the partnership for your Toshiba Pocket PC e800/e805 and your host computer.

- (2) Make sure you are within the range of a working network.

- (3) Make sure you have entered the IP address of the host computer as the WINS server on your Toshiba Pocket PC e800/e805.

- (4) Reset your Toshiba Pocket PC e800/e805 to make the TCP/IP settings take effect
- (5) Make sure the SSID, WEP keys and channel for all devices in the network are set the same.
- (6) Make sure the channel been set is in the range of 1 to 11.

C. Application

C1: What should I do to use the ActiveSync Function through Wireless Network?

- (1) Make sure you have already setup the partnership for your Toshiba Pocket PC e800/e805 and your host computer through USB Interface and the ActiveSync can work properly. (The ActiveSync connection Interface should also choose the Ethernet interface for Wireless LAN ActiveSync Connection)
- (2) Make sure you are within the range of a working Wireless Network.
- (3) Make sure you can "ping?your Toshiba Pocket PC e800/e805 from your Host Computer. (Make sure the SSID, WEP keys and channel for all devices in the network are set the same.)
- (4) Make sure you have entered the IP address of the host computer as the WINS server on your Toshiba Pocket PC e800/e805.
- (5) Reset your Toshiba Pocket PC e800/e805 to make the TCP/IP settings take effect and execute the ActiveSync function in the Toshiba Pocket PC e800/e805 to enjoy the high speed Active-Sync Wirelessly.

C2: How do I wirelessly browse the Internet?

- (1) If your network uses DHCP (Dynamic Host Configuration Protocol), an IP address and DNS (or WINS) will be assigned automatically.

On your Toshiba Pocket PC e800/e805, simply click
Start, Setting, Connection, Network Adapters, IEEE802.11b
217

Chapter 11: Additional Information

WLAN Adapter, then Properties to set the proper setting for Internet connection.

- (2) If your network does not use DHCP, you should enter the IP address, subnet mask, gateway and DNS (or WINS).

IP Address is Internet Protocol Address; a numeric address such as 10.37.238.100 that the domain name server translates into a domain name. Each node on the IP network should have a

unique IP address.

Subnet mask is a number used to identify a subnetwork when multiple networks share one IP address. For example

255.255.255.0 Gateway is a device used to forward IP packets to and from a remote destination.

DNS stands for Domain Name System, a database system, which translates addresses and domain names. For example, a numeric address like 232.245.021.54 can become something like cba.com.

WINS stands for Windows Internet Naming Service which has two functions; one is a Microsoft Net BIO name server that eliminates the broadcasts needed to resolve computer names to IP addresses by providing a cache or database of translations. The other one is to set the IP address of the host computer that you already construct the partnership for Network adapter Active sync purpose.

To set IP address, Subnet mask and Gateway, click Start, Settings, Connections, Network Adapters, IEEE802.11b WLAN Adapter, Properties, IP Address. To set DNS or WINS (Windows Internet Naming Service), click Start, Settings, Connections, Network Adapters, IEEE802.11b WLAN Adapter, Properties, Name Servers.

(3) To ping your Toshiba Pocket PC e800/e805 from your host computer. In the Host Computer, open the DOS command mode window, type the command "Ping? followed by the IP address, such as "Ping 140.124.40.112? If you can see the reply from this IP address, the connection is complete. You are now ready to browse the Internet using Internet Explorer on your Toshiba Pocket PC e800/e805.

C3: How do I check my email on my wireless Toshiba Pocket PC e800/e805?

(1) Please make sure that you can use the ActiveSync function through USB Interface at first, and make sure you can use the ActiveSync to receive and send email successfully. For corporate email received and sent, please check with your network administrator for necessary connection settings.

(2) Make sure you have entered the IP address of the host computer as the WINS server on your Toshiba Pocket PC e800/

e805.

218

Toshiba Pocket PC e800/e805 User's Guide

(3) Reset your Toshiba Pocket PC e800/e805 to make the TCP/IP settings take effect and execute the ActiveSync function in Toshiba Pocket PC e800/e805 to enjoy the high speed, wireless ActiveSync to receive and send email.

You need to choose a proper SSID and channel for the first 802.11 Ad Hoc station. For other stations want to join the same SSID group, you could only choose the same SSID as the first station, but the channel will not take effect. The 802.11 Ad Hoc must enter the proper SSID. Blank SSID for the 802.11 Ad Hoc Mode is not allowed. The stations want to join the 802.11 Ad Hoc Network must have the same SSID and are suggested to have the same IP Address in the Network group.

D. Settings

D1: What is SSID? What should I set in the SSID field?

SSID stands for Service Set Identification, which is the ID to form the

Wireless Network. You can set up to 32 characters in the SSID field. For the Infrastructure Mode, you should set the SSID the same as the Access Point been connected with. To create a 802.11 Ad Hoc Network, the SSID must be the same among stations to enable the wireless communication within the local area network.

NOTE

D2: Why can't I choose the "Channel?field in "Infrastructure? Mode?

For the Infrastructure Mode, the Channel is decided by the Access Point. You can only join the existing Access Point formed Wireless Network but not create a new Wireless Network. That is the reason why you can't set the "Channel?setting.

D3: When should I set the IP address, Subnet mask and Default gateway settings?

When the Wireless Network does not have the DHCP server, you should set your own IP address, Submask and Default gateway for Wireless Network connection. Otherwise, the OS might set the different Network group IP address for you, which will cause the disconnection

for the Wireless Network.

D4: How can I set the IP address, Subnet mask and Default gateway settings?

Simply click Start Settings Connections Network adapter IEEE802.11b WLAN Adapter Properties IP Address to set IP address, Subnet mask and Default gateway settings.

D5: What Transmit Rate should I choose for Wireless Connection?
219

Chapter 11: Additional Information

Suggest you to use the "Fully Auto" option in the "Transmission Rate" field for full Transmission Data Rate range to automatically adjust the Best Communication Data Rate and to be compatible with other Low speed 802.11 Wireless Device.

E. Security

E1: What is WEP?

WEP stands for Wired Equivalent Privacy, a security service, used to prevent the unauthorized access to your wireless network.

E2: How many WEP security service modes does my Wireless LAN support?

WEP stands for Wired Equivalent Privacy that is the security service for the Wireless Network. There are three WEP security service modes available for "IEEE 802.11b WLAN Adapter" formed Wireless Network. The first is "Disable" which will disable the WEP security service; the second is "40bit" which will support 5 bytes Hexadecimal value WEP security service; the third is "128bit" which will support 13 bytes Hexadecimal value WEP security service.

E3: How do I set the WEP security service?

Please click Start, Settings, System, Wireless LAN Utility, and then Security to view Security page where you can set the WEP security service. Please choose the proper WEP Key Mode, WEP KeyID and WEP Key value for the Wireless Network.

NOTE The WEP Mode, WEP KeyID and WEP Key value must be exactly the same as your Wireless Network's to enable the connection.

Example of setting the WEP:

You can choose

1. WEP Mode "40bit" KeyID "1" and Key "1234567890"
or

2. WEP Mode ?28bit? KeyID ??and Key
?2345678901234567890123456?

or

3. WEP Mode "Disable?for connection
220

Toshiba Pocket PC e800/e805 User's Guide

F. Performance

F1: Will IEEE802.11b WLAN Adapter work in the environment where Bluetooth network is employed?

Yes, IEEE802.11b WLAN Adapter can coexist with Bluetooth environment.

F2: How far is the working range of IEEE802.11b WLAN Adapter?

It depends on the data transmission rate and the condition of the environments. The higher the data rate, the smaller the range it could cover. At 11 Mbps, the adapter can go up to 300 meter in an outdoor environment; however, in an indoor environment, it can only go up to 100 meter. Because of the ceilings, higher RF interference, interior walls and reflected signals, indoor range is usually shorter than outdoor range.

F3: How does the data transmission rate work?

IEEE802.11b WLAN Adapter allows you to choose one of the six data rate options: Fixed 1Mbps, Fixed 2Mbps, Fixed 5.5Mbps, Fixed 11 Mbps, Auto Select 1 or 2 Mbps, and Fully Auto.

The farther the distance between two communicating devices, the slower the data rate should be used. Basically, with slower data rate, the data delivery will be more reliable. If you don't know which data rate should be used, simply choose "Fully Auto" and the data rate will automatically step down from 11 Mbps, 5.5 Mbps, 2 Mbps, to 1 Mbps if you move farther your Toshiba Pocket PC e800/e805 away from the Access Point or other connected mobile device.

F4: The Wireless LAN uses lots of power. What should I do to save power?

(1) Please turn off the Wireless LAN Switch if you are not using the Wireless Network currently, or

(2) Click Turn Off on the TMU icon.

(3) Click Start, Settings, System, then Wireless LAN Utility Manager to get into Manager Page and enable the "Enable Power Saving Mode,"and then tap Apply.

221

Chapter 11: Additional Information

NOTE (1) Turn off the Wireless LAN Switch will cause the disconnection of the Wireless Network, please make sure to close all the Wireless Connection before you execute this function.

(2) The Turn Off function on the TMU icon will cause the disconnection of the Wireless Network, please make sure to close all the Wireless Connection before you execute this function.

(3) Enable "Power Saving Mode" will keep the connectivity but will lower down the average throughput due to longer connection period for the Wireless Network.

(4) If you are in 802.11 Ad Hoc Mode, you are not allowed to enable "Power Saving Mode" because Ad Hoc Mode doesn't support this function.

F5: How do I make sure that the Wireless LAN SW has been installed successfully and that Wireless LAN already work properly?

(1) Please check if the "IEEE 802.11b WLAN Adapter" already exist in Start, Settings, Connections, Network Adapters; if not, the Wireless LAN Driver is not Installed successfully.

(2) Please check if the Wireless LAN Utility already exist and could be opened successfully by simply click Start, Settings, System, then Wireless LAN Utility.

(3) Click Start, Settings, System, Wireless LAN Utility, Link to check the current Link information in the Link Page.

Error Messages for Bluetooth

This section explains the causes of and solutions for the various displayed error messages.

Error messages during COM/DUN service

An error has occurred with the Bluetooth SD Card. Confirm that the card is working properly.

Cause There was an error when loading the driver.

Solution Try reinserting the Card.

Unable to retrieve Local Device information.

Solution Reset the Toshiba Pocket PC.

Unable to retrieve Local Device information due to insufficient memory. Check the amount of available memory.

222

Chapter 11: Additional Information

The remote device does not support OPP service.

The remote device does not support this function.

Cause

Unable to send the object.

Cause Local Device is unable to send a contact, schedule, task, or business card due to a problem with the signal or a similar communications error.

Unable to receive the object.

Cause Local Device is unable to receive a contact, schedule, task, or business card due to a problem with the signal or a similar communications error.

Select the item you want to send.

Cause You have not selected an item to send.

Unable to store all receiving data due to insufficient memory.

Cause A contact, schedule, or task cannot be stored due to insufficient memory.

Solution Delete any unneeded data to increase the memory capacity.

Name not specified in owner information.

Cause A name has not been specified in the Name area of the owner information.

223

Chapter 11: Additional Information

Cause An error occurred while trying to delete a file or folder, or a separate

file or folder exists within the specified folder.

Solution Remove the file or folder from the specified folder and try deleting it again.

Unable to delete read-only file.

Cause Local Device tried to delete a file on the remote device, but because it is a read-only file, it could not be deleted.

The selected file/folder already exists. Enter another file/folder name.

Cause The name you tried to enter already exists.

Solution Enter a different name.

Enter a file/folder name.

Cause Either nothing has been entered for the name or the name consists of spaces or begins with a period.

Solution Enter a correct name.

The following characters cannot be used in the file/folder name. \ /

You entered an invalid character in the file/folder name.

; , : * ? " < > |

Cause

Solution Rename the file/folder using correct characters.

Cannot rename file/folder.

Cause A processing error occurred because the entered name exceeded the maximum length.

Solution Enter a shorter name.

Enter the folder name.

Cause After creating or changing a folder, either nothing has been entered for the name or the name consists of spaces or begins with a period.

Solution Enter a correct folder name.

The following characters cannot be used in the folder name. \ /

You entered an invalid character in the new folder name.

; , : * ? " < > |

Cause

Solution Rename the folder using correct characters.

The folder name could not be created.

Cause A processing error occurred because the entered name exceeded the maximum length.

Solution Enter a shorter name.

The specified file could not be executed.

Cause You selected Execute or Receive/Execute, but the specified file is not executable or the associated application software could not be found.

The connection destination server is not selected. Select a server.

Cause You have not selected the device to which you want connect.

Sending or receiving failed. Cancelling process.

224

Chapter 11: Additional Information

The folder that you tried to locate in Local Device does not exist.

Cause

A communications error occurred.

Cause An internal OBEX error occurred when the remote device was started.

Solution If the device you to which you were unable to connect is not a

Bluetooth SD Card, try the operation again without FTP authentication.

Troubleshooting for Toshiba IP Phone for Pocket PC

VLI Lookup Server Not Accessible

Check Internet connection referring to "Troubleshooting for Wi-Fi.?"

VLI Buddy Server Not Accessible

Check Internet connection referring to "Troubleshooting for Wi-Fi.?"

Your G-Number or Password is Wrong

Make sure you set your G-Number and password properly.

Cannot call an IP phone

Make sure you log on to VLI Buddy Server. If you log on to it properly, your status (Online, Offline, Busy or Away) is shown.

Check contact information in your buddy list or of your buddy icon.

Confirm your party's status is not offline.

Cannot call a phone

Make sure you log on to VLI Buddy Server. If you log on to it properly, your status (Online, Offline, Busy or Away) is shown.

You cannot hear your party's voice

Check speaker volume on your Pocket PC.

Your party cannot hear your voice

Check microphone volume on your Pocket PC.

Make sure muting microphone is not activated. If Mute button color is red,

push Mute button again.

Cannot see your buddy list

Make sure you log on to VLI Buddy Server. If you log on to it properly, your status (Online, Offline, Busy, or Away) is shown.

225

Specifications

External dimensions

Weight

Operating conditions

Battery type

Processor

Memory

Flash ROM Disk

Display

Interfaces

DC-IN

Headphone

Microphone

SD card slot

Infrared port

Cradle connection port

Audio

Accessories

Although the display is manufactured using an extremely high technology,

there may be a case that some dots do not light or always light. It is not a malfunction.

32 MB

Chapter 11: Additional Information

Approximate 5.0 in (130 mm) x 3.2 in (78 mm) x 0.7 in (16 mm) (L x W x H)

Approximate 195g (6.9 oz.) with Wireless LAN module (optional)

Temperature: 32°F to 104°F (0°C to 40°C), relative humidity: 30% to 80% when only the Toshiba Pocket e800/e805 is operating. Temperature capable of charging 41°F to 104°F (5°C to 40°C).

Lithium-Ion battery

Intel®PXA 255 Processor at 400 MHz

RAM: 64 MB, ROM: 32 MB

3.8" TFT Color LCD screen, 240 x 320 pixels, up to 64K colors
3.5 mm, stereo, mini-plug compatible

Integrated with 3.5 mm, stereo, mini-plug

SD memory card, SD I/O card or Multimedia card

The security function of the SD memory card is disabled. Data encrypted by the SD memory card security function compatible equipment is not usable.

Based on IrDA ver.1.3

Maximum data transmission speed: 115 kbps.

RGB, USB Host/Client

AC 97 codec, mono record, stereo playback, 8.0 KHz, 11.025 KHz, 22.05 KHz, and 44.1 KHz sample rate. Full duplex record and playback. On board microphone. on board speaker. Stereo earphone/microphone jack. Software volume control.

AC Adapter, USB client cable, stylus pen, cradle, USB host cable, battery pack, high capacity battery pack, battery charger.

226