

# A

## Specifications

The information in this appendix may be helpful if you plan to use or transport the notebook internationally or in extreme environments.

### Notebook Dimensions

Dimension	U.S.	Metric
Height	1.24 inches	3.15 cm
Width	14.06 inches	35.7 cm
Depth	10 inches	25.4 cm

### Operating Environment

Factor	U.S.	Metric
<b>Temperature</b>		
Operating	50° to 95° F	10° to 35° C
Nonoperating	-4° to 140° F	-20° to 60° C
<b>Relative humidity (noncondensing)</b>		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
<b>Maximum altitude (unpressurized)</b>		
Operating	10,000 ft	3,048 m
Nonoperating	30,000 ft	9,144 m

## Specifications

### Rated Input Power

The notebook operates on DC power, which can be supplied by an AC or a DC power source. Although the notebook can be powered from a stand-alone DC power source, Compaq strongly recommends that the notebook be powered only with an AC adapter or DC cable supplied or approved by Compaq.

An AC adapter provided by Compaq for use with this notebook is capable of accepting AC power within the following specifications:

Input Power	Rating
Operating voltage	100–240V AC @1.7A - 50–60Hz
Operating current	1.5A rms
Operating frequency range	50 to 60Hz

The notebook is capable of accepting DC power within the following specifications:

Input Power	Rating
Operating voltage	18.5V DC @3.5A- 65W
Operating current	4.9A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 Vrms.

## Finding More Environmental Information

 
 
 
The specifications in this appendix contain information about exposing the notebook to environmental extremes.

- For similar information about storing battery packs, see the “Storing a Battery Pack” section in Chapter 4.
- For information about exposing the notebook to sunlight, ultraviolet light, x-rays, or magnetic fields, refer on the *Documentation Library* CD to the *Maintenance, Shipping and Travel* guide.



## *Specifications*

---



---

# Index

1394 connector 2-9

## A

AC adapter 4-11

connecting 1-5, 4-11

disconnecting 4-11

identifying 2-17

power connector 2-12

AC power 1-12, 4-11

adapter

AC 1-5, 2-17, 4-11

country-specific modem 2-17,  
7-3, 7-5

Japan-specific outlet 2-17

Agere modem AT commands 7-9

airport security devices 5-3

altitude specifications A-1

antivirus software 1-11

applications key 2-4

applications. *See* software;

software updates

AT commands 2-18, 7-9

audio CD. *See* CD(s)

audio-out jack

connecting 6-4

identifying 2-8

AutoPlay 5-8

## B

backup, system 9-7

battery bay

identifying 2-13

inserting battery pack 1-3

removing battery pack 4-18

battery light 2-6

battery pack

calibrating 4-14

causing CD or DVD write  
corruption 6-10

charging 1-2, 1-6, 4-11

inserting 1-3

monitoring charge 4-12

removing 4-18

storing 4-16

when to remove 4-3

battery power

conserving 4-17

low-battery conditions 4-13

running notebook on 4-11

switching to and from 4-11

when to use 1-11, 4-4

BIOS (basic input output system)  
9-2

## Index

---

- boot order 5–10
- button(s)
  - PC Card eject 2–11, 8–6
  - power 2–5
  - TouchPad 2–3, 3–2
  - volume 2–7, 6–2
  - wireless device 2–8
  - See also* key; latch; switch, display
- C**
- cable
  - AC adapter 1–5
  - audio 6–5
  - DC 2–12
  - modem 2–9, 2–16, 7–2
  - network 2–16, 7–11
  - S-Video 6–5
  - See also* cord, power
- cable lock, connecting 8–16
- calibration, battery 4–14
- caps lock light 2–6
- card and socket services, PC Card 8–4
- card. *See* memory, modules supported; PC Card; SD Card
- CD drive. *See* drives
- CD(s)
  - CD-R vs. CD-RW 6–10
  - Compaq Support Software* 9–13
  - copying 6–9
  - creating 6–9
  - playing, with Windows Media Player 6–7
  - playing, with WinDVD 6–7
  - speed 6–10
  - starting from 5–10
  - See also* drive media
- Certificate of Authenticity label 2–15, 9–9
- commands, AT 2–18, 7–9
- Compaq Support Software* CD 9–13
- compartment, memory 2–13, 8–10
- connector(s)
  - 1394 2–9
  - docking 2–14
  - drive 5–3
  - external monitor 2–9
  - infrared port 2–12, 7–13
  - modem 2–9, 7–3
  - network 2–9, 7–10
  - parallel 2–9
  - power 2–12
  - USB 2–9, 8–3
- conservation, power 4–17
- cord, power
  - connecting 1–5
  - identifying 2–16
  - surge protection 1–11
  - See also* cable
- country-specific modem adapter
  - connecting 7–5
  - identifying 2–17
  - when to use 7–3
- critical low-battery condition 4–13
- currency formats, setting 1–10
- customer support 2–18, 9–13

**D**

data compression algorithm 7-2  
 date, setting the 1-10  
 DC cable 1-8, 2-12  
 designation, drive 5-2  
 device drivers, reinstalling 9-10  
 dialing mode 7-7  
 dimensions, notebook A-1  
 disc, diskette. *See* drive media  
 display release latch 2-2  
 display switch 2-5  
     function, changing 4-9  
     function, default 4-6  
     identifying 4-5  
 display, internal  
     brightness 3-7  
     opening 1-4  
     switching image 3-6  
 docking connector, cover 2-14  
 drive designation 5-2  
 drive media  
     affected by airport security 5-3  
     cancelling AutoPlay on 5-8  
     caring for 5-3  
     displaying contents of 5-8  
     inserting, removing CD or  
         DVD 5-5  
     types and terms 5-2  
 drivers, reinstalling 9-10  
 drives  
     adding to system 5-4  
     affected by airport security 5-3  
     avoiding Standby and  
         Hibernation while using  
         optical 5-9  
     IDE drive light 5-4

inserting, removing media 5-5  
 shipping 5-3  
 starting from 5-10  
 types and terms 5-2  
 USB 8-3

*See also* hard drive, internal

DVD drive. *See* drives

DVD(s)

playing, with WinDVD 6-7  
 region settings 6-8  
 starting from 5-10  
*See also* drive media

**E**

Easy CD Creator

CD Copier, when to use 6-9  
 DirectCD, when to use 6-9  
 features 6-9  
 formats 6-11  
 obtaining 6-9  
 preparing to use 6-10  
 prompt, UDF 6-10  
 settings 6-11  
 source drive vs. destination  
     drive 6-10

eject button

optical drive 5-6  
 PC Card 8-6

electric shock warning 1-12

electrical storm, safety issues 1-11

electrostatic discharge (ESD) 5-3,  
8-11

emergency shutdown procedures  
 1-10, 4-6

enablers, PC Card 8-4

End User License Agreement 1-8

## Index

---

environmental specifications A-1  
 error message  
     No Dial Tone 7-8  
     Playback Of Content From This  
     Region Not Permitted 6-7  
 ESD (electrostatic discharge) 5-3,  
     8-11  
 exhaust vent 2-10  
 external monitor  
     connecting 8-2  
     connector 2-9  
     switching image 3-6

## F

fan, vents 2-10, 2-14  
 FCC notice 1-12  
 FDD (floppy disk drive) 5-2  
 flash memory card 8-7  
 flash RAM card 8-7  
 Fn key  
     changing Standby function 4-9  
     hotkeys function 3-4  
     identifying 2-4  
     keypad functions 3-9  
     Standby function 4-5  
     video device function 6-6  
 function keys 2-4, 3-4

## H

hard drive bay  
     identifying 2-13  
     replacing hard drive 5-10  
 hard drive, internal  
     defined 5-2  
     displaying amount of free space  
     on 8-10  
     replacing 5-10

retaining screws 5-11, 5-14  
 space on, required for  
     Hibernation file 8-10  
     *See also* drives  
 headphones 6-4  
 Help and Support window 3-6,  
     9-13  
 Hibernation  
     avoiding when playing media  
     5-9  
     changing configuration during  
     4-2  
     controls and indicators 4-5  
     defined 4-2  
     identifying 5-10  
     initiated during critical  
     low-battery condition 4-13  
     initiating 2-5, 4-8  
     resuming from 4-8  
     setting preferences 4-9  
     when to use 4-2  
 hotkeys  
     changing function of Fn+F5  
     4-9  
     identifying 3-4  
     procedures 3-5  
     Quick Reference 3-5  
 hotkeys commands  
     access Help and Support 3-6  
     display brightness 3-7  
     initiate QuickLock 3-7  
     initiate Standby 3-6, 4-7  
     media commands 3-7  
     Open Internet Explorer 3-6  
     Quick Reference 3-5  
     switch image 3-6



hub, USB 8–3  
humidity specifications A–1

**I**

IDE (Integrated Drive Electronics)  
  light 5–4  
identifying components  
  additional 2–16  
  display 2–2  
IEC 60950 compliance 1–12  
infrared port 2–12, 7–13  
International Telecommunications  
  Union (ITU) 7–2  
InterVideo WinDVD  
  error message 6–7  
  managing region settings 6–8  
  playing video CDs and DVDs  
    6–7  
ITU (International  
  Telecommunications Union) 7–2

**J**

jack  
  audio-out 2–8, 6–4  
  microphone 2–8, 6–4  
  RJ-11 2–9, 7–3  
  RJ-45 2–9, 7–11  
  S-Video 2–8, 2–9, 6–5  
Japan-specific modem adapter  
  2–17

**K**

key  
  applications 2–4  
  Fn 2–4  
  function (F1, F2, etc.) 2–4  
  hotkeys 3–4

keypad 2–4, 3–8  
Microsoft logo 2–4  
num lock 3–9  
*See also* button; latch; switch,  
  display  
keyboard language 1–10

**L**

label  
  Microsoft Certificate of  
    Authenticity 2–15, 9–9  
  modem approvals 2–15  
  product identification 2–15  
  system 2–15  
  wireless certification 2–15  
language  
  choosing during setup 1–8  
  selecting keyboard 1–10  
latch  
  battery pack locking 4–19  
  battery pack release 2–13  
  display release 2–2  
  *See also* button; switch, display  
light  
  battery 2–6  
  caps lock 2–6  
  IDE drive 5–4  
  num lock 3–9  
  power/standby 2–6  
light(s)  
  hard drive 2–6  
  mute 2–6  
  wireless device 2–6  
line-out jack 2–8, 6–4  
lock, security cable 8–16

## Index

---

locked system  
     emergency shutdown  
         procedures 1–10, 4–6  
 locking latches, battery pack 4–19  
 lock-up, system 2–5  
 low-battery conditions  
     identifying 4–13  
 Lucent modem AT commands 7–9  
*Lucent/Agere Command Set*  
     (*Advanced Users Only*) guide  
     2–18

**M**

*Maintenance, Shipping and Travel*  
 guide 2–18  
 media hotkeys 3–7  
 Media Player, Windows 6–7  
 media, drive  
     affected by airport security 5–3  
     cancelling AutoPlay on 5–8  
     caring for 5–3  
     displaying contents of 5–8  
     inserting, removing CD or  
         DVD 5–5  
     types and terms 5–2  
     *See also* drives  
 memory  
     compartment 2–13  
     displaying amount of 8–10  
     increasing RAM 8–10  
     module, removing or inserting  
         8–11  
     modules supported 8–10  
 microphone jack 2–8  
 microphone, connecting 6–4, 8–2

Microsoft Certificate of  
 Authenticity label 2–15  
 Microsoft logo key 2–4  
 mode, dialing 7–7  
 model, identifying notebook 9–2  
 modem  
     approvals label 2–15  
     cable 2–16  
     connecting 7–3  
     country configurations 7–6  
     country-specific adapter 2–17  
     *Lucent/Agere Command Set*  
         (*Advanced Users Only*) guide  
         2–18  
     *Modem Command Guidelines*  
         (*Advanced Users Only*) guide  
         2–18  
     specifications 7–2  
     speed 7–2  
     troubleshooting travel  
         connections 7–7  
     virus protection 1–11  
 monitor, external  
     connecting 8–2  
     external monitor connector 2–9  
     switching display 3–6  
 mouse, external  
     connecting 8–2  
     USB connectors 2–9  
 multimedia card 8–7

**N**

network  
     cable 2–16  
     connecting 7–11  
     RJ-45 jack 2–9

- specifications 7–10
- speed 7–10
- No Dial Tone error message 7–8
- Norton AntiVirus 2003 1–11
- notebook model, family, type, and serial number 9–2
- NTSC television format 6–6
- num lock
  - key 3–9
  - light 2–6
- number
  - Product Key 2–15
  - serial 2–15
- numeric keypad 3–8



- opening the notebook 1–4
- Opens 2–2
- operating environment
  - specifications A–1
- operating system
  - installing retail version of 9–11
  - loading 4–6
  - Microsoft Certificate of Authenticity label 2–15
  - Product Key number 2–15
  - reinstalling 9–8
  - repairing 9–8
  - shutting down 4–6
- optical disc. *See* CD(s); DVD(s)
- optical drive
  - avoiding Standby and Hibernation while using 5–9
  - boot order 5–10
  - identifying 2–11
  - See also* drives

## P

- PAL, PAL-M television formats 6–6
- parallel connector 2–9
- passwords 9–11
- PC Card
  - configuring 8–4
  - functions 8–4
  - inserting, removing 8–5
  - stopping 8–6
  - types available 8–4
- PC Card eject button 2–11
- pointing device 3–2
- port, infrared 2–12, 7–13
- power
  - button 2–5
  - connecting the notebook to external 1–5
  - conservation 4–2, 4–17
  - controls 4–5
  - cord 2–16
  - emergency shutdown
    - procedures 4–6
  - Hibernation procedures 4–6
  - low-battery conditions 4–13
  - power connector 2–12
  - power/standby light 2–6
  - rated input A–2
  - running the notebook on battery 1–6
  - setting preferences 4–9
  - shutting down the notebook 1–10
  - Standby procedures 4–7
  - surge protection 1–11

## Index

---

- switching between AC and battery 4-11
- turning on the notebook 1-7
- See also* battery pack
- power button
  - function, changing 4-9
  - identifying 4-5
  - resetting with 4-6
- power connector
  - connecting 1-5
  - identifying 2-12
- power cord
  - connecting 1-5
  - surge protection 1-11
- Power Meter 4-12
- power, AC 1-12
- power/standby light 4-5
- Preboot eXecution Environment (PXE) 7-12
- preloaded utilities
  - displaying descriptions 1-9
- Product Key number 2-15
- projector
  - connecting 2-9, 8-2
  - switching display 3-6
- PXE (Preboot eXecution Environment) 7-12
- R**
- RAM (Random Access Memory) 8-10
- recovery CD 2-18
- region settings
  - currency, date, language, time 1-10
- DVD 6-8
- modem 7-6
- Regulatory and Safety Notices*
  - guide 2-18
- regulatory information
  - modem approvals label 2-15
  - notices 1-12
  - Regulatory and Safety Notices* guide 2-18
  - system label 2-15
  - wireless certification label 2-15
- release latch
  - battery pack 2-13
  - display 2-2
- repairing the operating system 9-8
- reset (emergency shutdown procedures) 1-10, 4-6
- resolution, screen 1-10
- restoring software 2-18
- RJ-11 telephone jack
  - connecting 7-3
  - identifying 2-9
  - modem cable 2-16
- RJ-45 network jack
  - connecting 7-11
  - identifying 2-9
  - network cable 2-16
- ROM
  - defined 9-2
  - determining current version of 9-3
  - downloading and installing 9-4
  - obtaining updates 9-4
  - RomPac, downloading 9-4

**S**

*Safety & Comfort Guide* 1-12,  
2-18

SD Card

inserting, removing 8-7

security cable

lock, connecting 8-16

slot 2-12

serial number, notebook 2-15, 9-2

series, notebook 9-2

Setup utility 9-11

shutdown procedures 1-10, 4-6

sleep button 3-7, 4-9

Sleep. *See* Standby

slot

memory 8-10

PC Card 2-11

SD Card 8-7

security cable 2-12

socket services, PC Card 8-4

SoftPaq

described 9-4

downloading and installing 9-6

software

antivirus protection 1-11

AutoPlay 5-8

Easy CD Creator 6-9

Help and Support window 9-13

infrared 7-13

installing optional 1-9

modem 7-6

network 7-12

Norton AntiVirus 2003 1-11

Power Meter 4-12

regional settings 1-10

reinstalling 9-8, 9-10

repairing 9-8

restoring 2-18

RomPaq 9-4

Setup utility 9-11

SoftPaq 9-4

UDF Reader 6-10

updating preloaded software  
9-2

Windows Media Player 6-7

WinDVD 6-7

software updates

downloading and installing  
9-4, 9-6

obtaining 9-4

preparing for 9-2

speakers, external 6-4

speakers, internal 6-3

specifications

dimensions A-1

modem 7-2

network 7-10

operating environment A-1

rated input power A-2

Standby

avoiding when playing media  
5-9

avoiding when using infrared  
7-14

controls and indicators 4-5

initiated during critical

low-battery condition 4-13

initiating 3-6, 4-7

power/standby light 2-6

resuming from 4-7

setting preferences 4-9

## Index

---

 
- S-Video
  - connections 6–5
  - jack 2–9
- switch, display 2–5
- system label 2–15
- system lock-up 1–10, 4–6
- System Restore utility 9–7
- T**
- technical support 9–13
  - notebook documentation 2–18
- telephone (RJ-11) jack
  - connecting 7–3
  - identifying 2–9
  - modem cable 2–16
- telephone numbers, service and support 9–13
- television
  - changing color format 6–6
  - connecting audio 6–4
  - connecting video 6–5
- temperature
  - notebook surface 1–12
  - specifications A–1
  - storage, battery pack 4–16
- 1394 connector 2–9
- time, setting the 1–10
- To 1–12
- TouchPad
  - components 3–2
  - setting preferences 3–3
- traveling with notebook
  - battery pack temperature considerations 4–16
  - environmental specifications A–1
  - modem approvals label 2–15
  - serial number 2–15
  - wireless certification label 2–15
- traveling with the notebook
  - modem country configurations 7–6
  - regional settings 1–10
- troubleshooting
  - modem travel connections 7–7
  - Troubleshooting* guide 2–18
- turning off notebook 1–10, 4–6
- turning on notebook 1–7, 4–6
- U**
- UDF Reader 6–10
- unresponsive system, emergency shutdown procedures 1–10, 4–6
- USB
  - connectors, identifying 2–9
  - devices, connecting 8–3
- utilities, preloaded
  - displaying descriptions 1–9
  - installing 1–9
  - See also* software
- V**
- VCR
  - audio-out jack
    - function 6–4
    - connecting 6–5
- vents, fan 2–10, 2–14
- video CDs, DVDs. *See* CD(s); DVD(s)

video device  
    connecting audio 6–5  
    S-Video jack 6–5  
    turning on and off 6–6  
viruses, computer 1–11  
volume, adjusting 6–2

## **W**





Windows applications key 2–4  
Windows Media Player  
    accessing with Digital Audio  
        button 6–7  
    using with audio CDs

WinDVD  
    error message 6–7  
    managing region settings 6–8  
    playing video CDs and DVDs  
        6–7  
wireless device  
    button 2–8  
    certification label 2–15











*Index*

            ---









© 2003 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are trademarks of Microsoft Corporation in the U.S. and/or other countries.

HP shall not be liable for technical or editorial errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. The information in this document is provided “as is” without warranty of any kind, and is subject to change without notice. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

Startup and Reference Guide  
Compaq Notebook Series  
First Edition June 2003  
Document Part Number: 311245-001

