 
 


# Handset (Front)

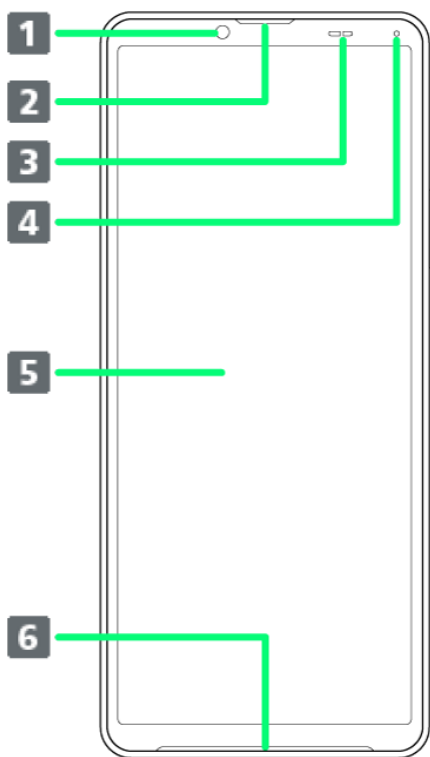

Part	Description
<b>1 Front Camera</b>	Use to shoot still images, videos of yourself, etc.
<b>2 Earpiece</b>	Hear the other party's voice here.
<b>3 Proximity/Light Sensor</b>	Detects surrounding brightness to automatically adjust Display or backlight and prevent Touchscreen misoperation during a call.
<b>4 Notification Lamp</b>	Flashes for notifications while Display is off. Lights while charging.
<b>5 Display</b>	Touchscreen-type display, operate with your fingers on Display.
<b>6 Speaker</b>	Listen to music as well as video, etc. audio.

## Handset (Back/Side)

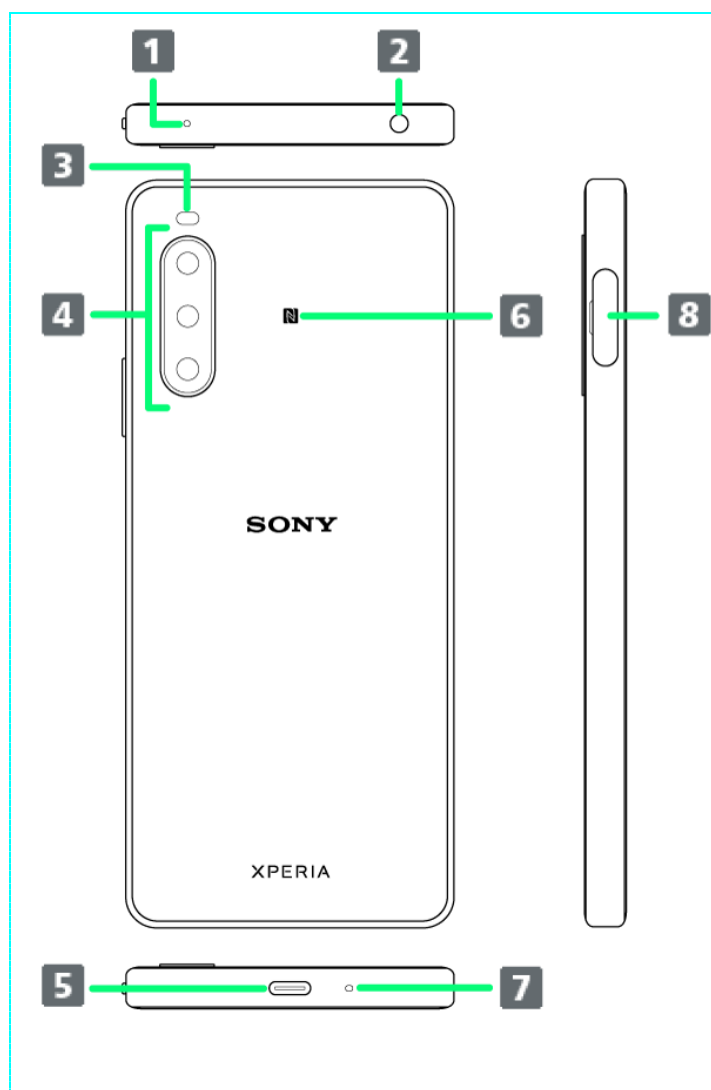

Part	Description
<b>1 Second Mic</b>	Reduces noise for calling. Also picks up audio when capturing videos.
<b>2 Headset Jack</b>	Connect commercially available headphones.
<b>3 Flash/Photo Light</b>	Use as camera flash when taking photos, etc.
<b>4 Main Camera</b>	Capture still images and videos.
<b>5 USB Type-C® Port</b>	Connect USB Type-C cable (commercially available), etc.
<b>6 NFC / Osaifu-Keitai® Detection Area</b>	Hold up to a reader/writer to use NFC / Osaifu-Keitai®.
<b>7 Mic</b>	Speak here.
<b>8 SIM Card/SD Card Slot</b>	Insert SIM Card/SD Card.

## Handset Keys



 
Part	Description
<b>1 Volume/Zoom Up/Down Key</b>	Adjust Volume. Adjust Zoom while using Camera.
<b>2 Power Key/ Fingerprint Sensor</b>	Long Press for power on/off. Turn Display on/off. Or, use Fingerprint authentication.

## Inserting SIM Card

SIM Card is an IC card containing phone number and other customer information.  
Always unmount SD Card beforehand.

**1**


Pull Tray out from handset

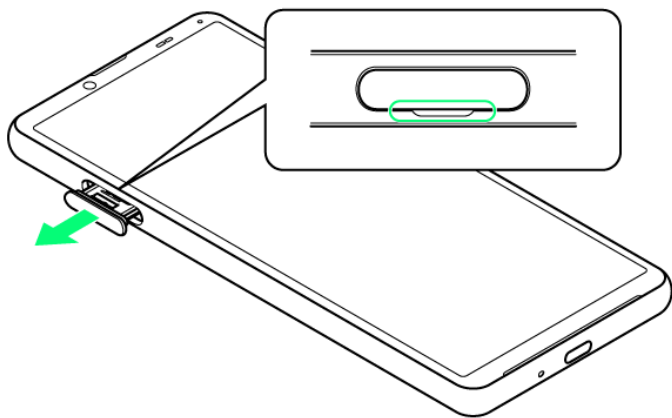

- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

2

 
Set SIM Card into Tray with IC chip facing up

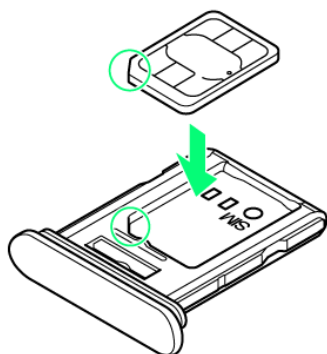

- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.

3

 Holding handset held level, press Tray in straight

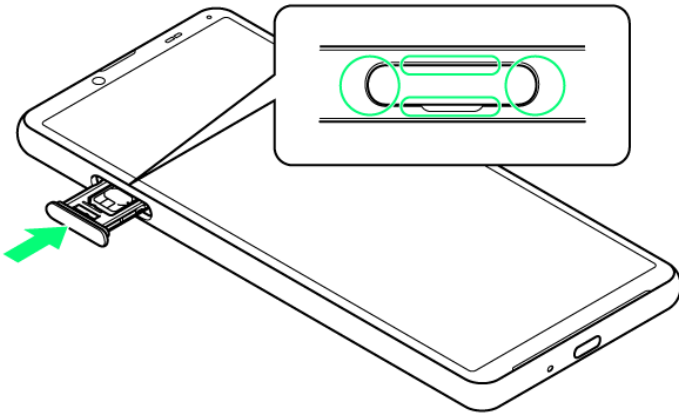


🚩 SIM Card is inserted.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.



## Handling SIM Card

 For SIM Card handling, see following items.

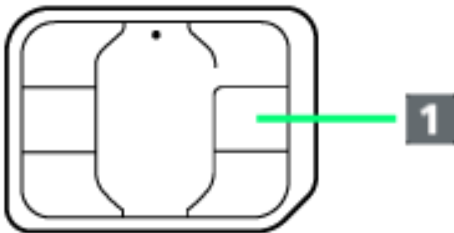

### ① IC chip

For SIM Card handling, see Ymobile Website.

<https://www.ymobile.jp/support/product/usim/>

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.



## SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. Ymobile Corp. is not responsible in such case.
- SIM Card is the property of Ymobile Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to Ymobile Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on SIM

 
Card. Ymobile Corp. is not responsible for damages from stored information that is lost.

- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact [Customer Service](#).

## Powering On

1

Long Press Power Key until handset vibrates

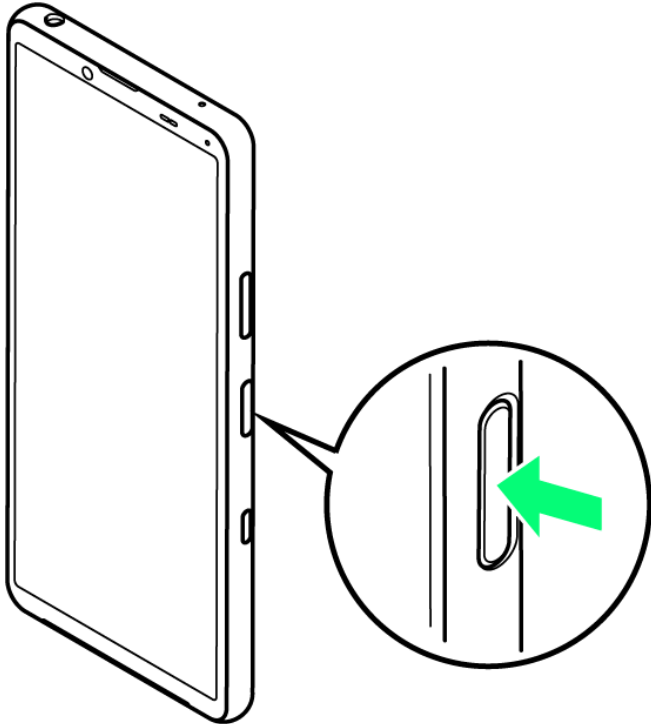

Lock Screen appears.

- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.

# FCC ID

To view the regulatory compliance mark

- Find and tap **Settings** → **About Phone** → **Certificates**

Regulatory compliance mark such as FCC ID is displayed on the screen.