 




QUICKSTART GUIDE (English)
GUÍA DE INICIO RÁPIDO (Español)
GUIDE D'UTILISATION RAPIDE (Français)
GUIDA RAPIDA (Italiano)
SCHNELLSTART-ANLEITUNG (Deutsch)
v1.0



1 PARA COMENZAR



Consumo:
350 W

- REGISTER YOUR PRODUCT
- DOWNLOAD THE USER GUIDE

Power Consumption:
350 W

- I. CH2/Bluetooth Volume:** Turn this knob to adjust the input gain of the connected Bluetooth device. Make sure your device volume is turned all the way up before adjusting this volume.
- J. Bluetooth/TWS Link Button:** This button is used for pairing Bluetooth devices and wirelessly linking two speakers. See the next section for details.
- K. Mix Out:** Use a standard XLR cable (not included) to connect this output to the input of another loudspeaker (i.e., another TX4 loudspeaker). This output sends the combined signal of CH1 and CH2.
- L. Battery Level Indicator:** Displays the current battery level. The LOW LED will flash when the battery is below 10%.
- M. Contour:** Engage (depress) this button to emphasize low and high frequencies by +3 dB. The LED will be lit when activated. Deactivate for a flatter response for live performance or for maximum output.
- N. Ground Switch:** Engage (depress) this switch to reduce hum or noise.

To unlink, double-press the **Bluetooth/TWS Link** button on either speaker.

- ENREGISTREZ VOTRE PRODUIT
- TÉLÉCHARGEZ LE GUIDE DE L'UTILISATION

Consommation électrique :
350 W

