

# **True Wireless Bluetooth** Earbuds

User Manual | VWS-D56

# **Specifications**

- Name: True Wireless Bluetooth Earbuds
- Model: NBI

· Supported codec: SBC/AAC

- Compatible Bluetooth profile: AVRCP/A2DP/HFP/HSP
- Maximum communication range: ≤10 m
- Frequency band: 2402MHz-2480MHz
- Frequency range: 20Hz-20KHz
- Earbuds' battery capacity: 40mAh/0.148Wh
- Earbuds' input power: 5V = 40mA
- Charging case's battery capacity: 300mAh/1.11Wh • Charging case's input power: 5V=330mA
- Charging case's interface: USB-C
- Material: ABS

## Operating instructions

a. When the charging case opens, the earbuds power on.

## 2. Pairing and connection

 $\ensuremath{\textcircled{1}}$  Earbuds are ready to pair right out of the charging case. Note: If the pairing fails, please check whether the earbuds are fully charged and repeat the operation above.

2) Open the Bluetooth menu on your device. In the list of discovered Bluetooth devices, tap or click your Vention E04.

Note: For the first-time pairing, please keep the pairing range within  $1\,m.\,After\,the\,pairing\,is\,successful, the\,earbud\,automatically\,powers$ off when placed back in the case, and you can use either earbud independently.

- a. The earbuds will automatically power off after 5 minutes of not being connected.
- b. When the earbuds are not paired with the phone due to the long distance, it will automatically power off if it is not connected for more than 5 minutes.
- a. Earbuds automatically power off when place back in the charging case with the lid closed.
- b. When it is connected, press and hold the multi-function button (left or right) for 5 seconds and make sure the earbuds are not in use and the earbuds will power off.

### 4. Music mode:



• Play/Pause: Tap the multi-function button twice quickly (1-2)





• Skip backward: Press and hold the multi-function button on the left earbud for 2 seconds



button on the right earbud for 2 seconds



on the left earbud



• Increase the volume: Tap the multi-function button on the right earbud



• Decline the call: Press and hold the multi-function



• Answer a call: Tap the multi-function button twice quickly (left or right)



• End a call: Press and hold the multi-function button for 2 seconds (left or right)

## 6. Using the voice assist function



• When the phone is in standby or playing music, tap the multi-function button for 3 times (left or right) to activate your voice assistant. Tap the multi-function button for 3 times(left or right) to stop mobile device voice control



 When the earbuds are powered on (and turned off the device's Bluetooth function), tan the multiple for the button for the device's Bluetooth function). device's Bluetooth function), tap the multi-function button for 4 times to clear the Bluetooth devices list.

### 8. Charging case status light

Status	Color	Indication		
During charging	Green	The indicator on the charging case repeatedly flashes in green. When the battery is fully charged the indicator lights up in green.		
Take out or place the earbuds back	White	Take out: The indicator on the charging case stays the same.		
		Place back: When the remaining battery charge of the earbuds is between 99% and 5%, the indicator on the charging case lights up in white. When the battery is fully charged, the indicator turns off.		

Important safety instructions

In appropriate use will cause damage to the product or personal safety.

5% or lower: The indicator on

the charging case repeatedly

flashes slowly in white for about

15 seconds, and then turns off.

- 1. Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire, or the like); do not store this product in high temperature, strong light, and strong magnetic field environment, do not place it in other harsh environments such as fire source, If your earbuds ever go into the water, please dry it naturally before using.
- 2. Improper use of the product can easily cause product damage or may endanger personal and property safety.
- 3. If consumers violate the product instructions and use them improperly, the company will not bear any consequences or legal liability for personal and property damage.
- 4. Non-professionals are strictly forbidden to disassemble this product. 5. Use this product only with an agency-approved power supply that neets local regulatory requirements.oved power supply that meets local regulatory requirements.

### Declaration on toxic or hazardous substances and elements contained in electronic products

	Toxic or Hazardous Substances or Elements							
Parts name	Lead	Mercury	Cadmium	Hexavalent chromium	Polybrominated biphenyls	Polybrominated diphenyl ethers		
	(Pb)	(Hg)	(Cd)	(CrVI)	(PBB)	(PBDE)		
PCBs	Χ	0	0	0	0	0		
Ceramic Parts	Χ	0	0	0	0	0		
IC Parts	Χ	0	0	0	0	0		
Charging Cables	0	0	0	0	0	0		
Casing	0	0	0	0	0	0		

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular  $\,$ installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from
- -Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly user's authority to operate the equipment.

NOTE3: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCCID: 2A7Z4-NBI

















