

## To Remove the DEMO WIRE & the "TRY ME" Control

The DEMO WIRE and the "TRY ME" Control is only used for store display and should be removed before use.

1. Unpack the unit. Slide to open the battery compartment cover at the back of the Remote Control unit. Remove and discard all batteries from the battery compartment. Unplug the DEMO WIRE and the "TRY ME" Control from the Remote Control. (See Diagram A)
2. Insert new batteries according to the diagram in the battery compartment securely. Replace the battery compartment cover.
3. Locate the battery compartment at the bottom of the vehicle. Unlock the battery compartment cover by turning the stopper in an anti-clockwise direction. Lift and remove the cover. Unplug and discard the DEMO WIRE. Insert a fully-charged 9.6V rechargeable battery pack (see the section of *Battery Charging* for instructions) and replace the battery compartment cover to begin play.

