

SYLVANIA

KARAOKE BLUETOOTH PORTABLE
MICROPHONE
SPMC100-C-GOLD




User Manual


SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license

1. Introduction
2. How to Use
3. Troubleshooting
4. How to Charge
5. Technical Parameters

1. Introduction

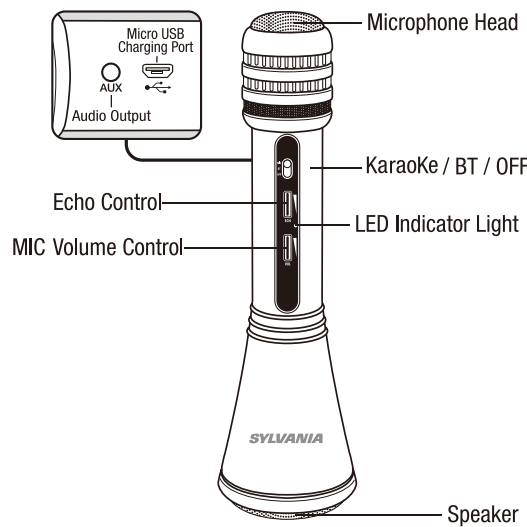

Accessories

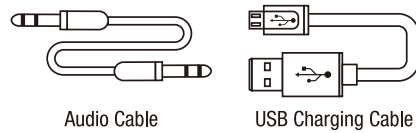

2. How to Use

1. Turn on microphone speaker by pushing the button to “BT”. The blue indicator light turns on and blinks.
2. Connect it with your bluetooth device by searching “**Sylvania SPMC100** ” . If a password needed, please enter “0000”. When the Bluetooth is paired successfully, you will hear a sound.

3. Either download a Karaoke APP of your choice or find a karaoke video online (eg. You Tube).

4. **Push the switch to"Karaoke" mode, and connect to the BT or insert an AUX in cable to entertainment.** Adjust the echo (‘ECH’) and volume (‘VOL’) controls to set the desired effects & levels.

5. *Play your music & start to sing!*

6. **Aux mode: An audio input jack,enable the sound source connection with computers,digital media players, mobile phones and other audio-visual products**

Notes:

1. Bluetooth should connect automatically after the first pairing. If unsuccessful please repeat step 2 (above)
2. If you only need to listen to the music, just switch to “BT” mode.

3. Troubleshooting

Error	Reason	Solution
Indicator light is not lit when charging	Battery has run out or charging cable is not connected properly	Charge microphone speaker, re-connect the charging cable
Microphone has no sound	Microphone is powered off, or the volume is turned down	Ensure “MIC” is selected, and/or turn up the volume
Without echo	Echo is turned down	Turn up echo dial
Background noise when singing or playing	Environment noise or mobile device signal interference	Choose a quiet place, put microphone speaker and mobile device within the operational distance of 10m
Under BT mode, music plays intermittently	The distance between microphone speaker and mobile phone is too far. Obstacle between microphone speaker and mobile device	Reduce the distance and/or avoid obstacle
Music volume is low	Mobile devices volume is low, or volume of music file is low	Turn up mobile devices volume, or change to another music file with higher volume
Bluetooth fails to connect	The distance between microphone speaker and mobile device is too far. Obstacle between microphone speaker and mobile device. Or connected with another mobile device	Reduce the distance, avoid obstacle,or disconnect with the other mobile device
Music distortion under BT mode	Volume is too high, or microphone speaker has low battery	Turn down mobile device volume, or charge microphone speaker
Karaoke app under iOS/Android system does not play with microphone speaker	Karaoke app under iOS/Android system does not support Bluetooth output	Change to music player or download an alternative app that supports Bluetooth output

4. How to Charge

1. When the battery is low, the microphone speaker will automatically turn off.
2. Use USB charging cable and standard mobile phone charging adapter to recharge. Red indicator light is on when charging.**When charging is completed ,the LED tuns off**

3. Charging time: 3 hours
4. Working time: 3-5 hours

5. Technical Parameters

Sound pickup: Capacitive sound pickup
Speaker Power: 3W
Input Voltage: DC5V
Battery Capacity: 1200mAh lithium battery
Bluetooth Connectivity: Up to 10 metres

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.