


Remote Control Instructions

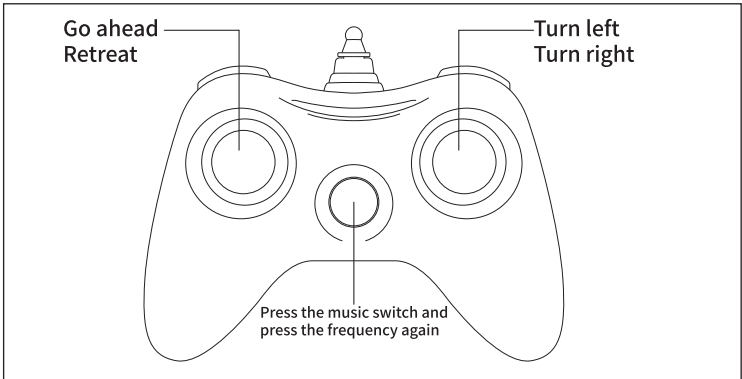

Batteries and Charging

**Battery installation for remote control**

1. Loosen the screw in the battery compartment door with a phillips screwdriver.  
2. Install 2 x1.5V"AA" batteries with correct polarity (+/-) as shown inside the battery compartment.  
3. Replace the battery door and tighten the screw.

**Battery safety information**

1. Battery requirement: vehicle requires 3.7V500mAh rechargeable battery pack; remote control requires 2x1.5V "AA" non-rechargeable batteries.  
2. Install and remove battery properly.  
3. DO NOT recharge non-rechargeable batteries.  
4. DO NOT mix old and new batteries or different types of batteries.  
5. Use only batteries of the same or equivalent type as recommended.

6. Insert batteries with correct polarity.  
7. Always remove exhausted batteries from the toy.  
8. Rechargeable batteries are only to be charged under adult supervision.  
9. Remove rechargeable batteries from the toy before charging.  
10. DO NOT short-circuit the supply terminals.

Charging diagram of vehicle

Power switch

**NOTE:**  
Only use chargers specifically designed to charge the included vehicle.

1. Loosen the screw and remove the battery door. Remove the exhausted battery pack and install a fully charged one, making sure the battery connected with correct polarity (+/-), Replace the battery door and tighten the screw.  
2. Connect one end of the USB charger cable to battery, other end of the USB charger cable can charge the battery by connecting a power supply medium with a USB socket, (For example, notebook computer, power adapter). The charging time is 75 minutes.

Trouble Shooting Guide

Problem	Cause	Solution
Remote control does not work	1. Batteries are installed incorrectly.	1. Check that the batteries are installed with correct polarity(+/-) as shown inside the battery compartment.
	2. The battery is low.	2. Replace new batteries.
	3. Vehicle is out of range of remote control.	3. Ensure the distance of remote control within 40 meters, point remote control at the vehicle.
	4. Fail to link remote control with vehicle.	4. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.
Vehicle does not work properly	1. The power switch is in the "OFF" position.	1. Turn the power switch to the "NO" position.
	2. The vehicle is slow to respond.	2. Charge the vehicle.
	3. vehicle is out of range of remote control.	3. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.

How to play

Power switch

Power ON: Pull the power switch of the vehicle to the "ON" position, then turn on the power switch of the remote control, If the operation indicator of the remote control is always on, the linking is successful.

Remote control distance: about 30-40 meters.  
Operating time: When fully charged, it takes about 50 minutes in slow mode and 40 minutes in fast mode.

Note:  
Always switch vehicle OFF when not in use to avoid reducing the life of the vehicle.

**Forward**

① Forward  
Push the left control stick up, the vehicle moves forward; if you continue to push the left control stick up, the vehicle will keep moving forward.

**Backward**

② Backward  
Push the left control stick down, the vehicle moves backward; if you continue to push the left control stick down, the vehicle will keep moving backward.

**Turn left**

③ Turn left  
Push the right control stick to the left, the vehicle turns left; if you continue to push the right control stick to the left the vehicle will keep turning left. This allows for continuous circles to the left.

**Turn right**

④ Turn right  
Push the right control stick to the right, the vehicle turns right; if you continue to push the right control stick to the right, the vehicle will keep turning right. This allows for continuous circles to the right.

Trigger buckle

Front

Trigger buckle

**Ejection function**

⑤ Ejection function  
The vehicle has a built-in trigger buckle. When the vehicle collides with another vehicle and triggers the buckle, the character in the vehicle is ejected.

**Warning**  
Children should be supervised during play.  
Please keep this instruction manual for future reference, as it contains important information.

**FCC Compliance Statements**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.  
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.  
RF Exposure Compliance  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.  
CE-DOC



Fro any assistance, please contact [simrexservice@outlook.com](mailto:simrexservice@outlook.com)



**SIMREX®**



**BC-10**  
BUMPER CAR  
**User Manual**

**3+**  
AGES