

현대카드_보조배터리_설명서_영문

전면




FCC Statement
This device complies with part 15 and part 18 of the FCC Rules. Operation is Subject To the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not explicitly approved by the party responsible for compliance could void the user's authority to operate this equipment.
Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 18 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Increase the separation between the equipment and any other radio device.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

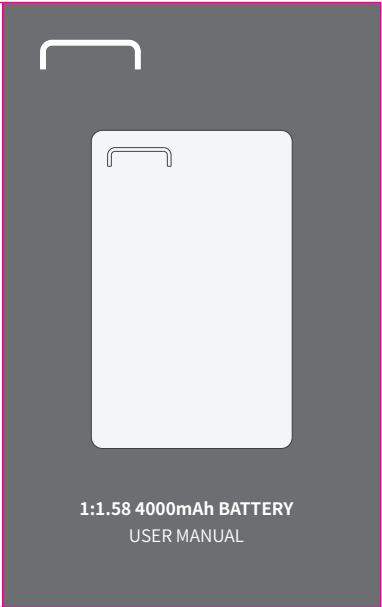

1:1.58 4000mAh BATTERY
USER MANUAL

후면

Product description

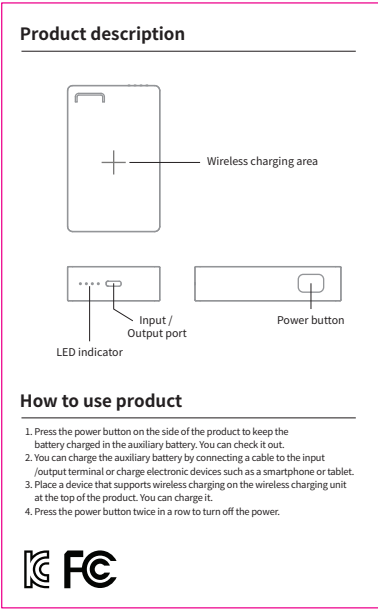

Wireless charging area

LED indicator

Input / Output port

Power button

How to use product

1. Press the power button on the side of the product to keep the battery charged in the auxiliary battery. You can check it out.
2. You can charge the auxiliary battery by connecting a cable to the input /output terminal or charge electronic devices such as a smartphone or tablet.
3. Place a device that supports wireless charging on the wireless charging unit at the top of the product. You can charge it.
4. Press the power button twice in a row to turn off the power.

Product specification

Product name	4000mAh BATTERY
Model No.	CHD_05_BA
Size / Weight	85.5*54.0*20.0 mm / 108g
Material	ABS
capacity	4,000 mAh
Rated input	9V/1200mA, 10.8V
Rated output	9V/1200mA, 10.8V
Importer	Inteco.
Manufacturer	INTECO(Dongguan) Trading Co., Ltd.
Manufacture Y/M	2021.11
Country of origin	China

Precautions

1. To preserve the battery life, it must be used and charged at least once every three months.
2. If you use it at temperatures higher or lower than -10°C to 40°C, the product may be damaged. Battery life can be shortened.
3. If you use it in hot and humid places for a long time, damage to products such as battery deformation, fire, explosion, etc. After may occur.
4. Keep it out of reach of children or pets.
5. Be careful not to use the damaged charging cable.
6. For high-speed charging, you should use the provided charging cable or a cable that supports high-speed charging.
7. Wireless charging is possible only when the auxiliary battery and the device are in contact with the center.
8. Do not place magnet or metal objects on the wireless charging unit.
9. It causes overheating and malfunction.
10. If a credit card or information storage medium is placed close to the wireless charging unit, the storage information will be stored. It can be damaged.
11. If you use a thick case or a metal cell phone case, Charging may not be smooth.
12. Do not arbitrarily disassemble, modify, or repair the product.
13. After completely discharging the product at the end of its life, separate it into the waste cell box to prevent it from being incinerated.

