

Model No.: MH 22205

BLUETOOTH HEADPHONE  
OPEN TOUCH PRO100

QUICK START GUIDE  
Please read this Quick Start Guide carefully and keep it for future use.

Product Overview

Open earphones x2 (L & R)

Charging case x1

USB-C cable x1

Quick start guide and warranty card

Charging

Before using the "Monster Open Touch Pro100", please connect the USB-C cable to a power adapter to begin charging. Fully charge the earphones and the charging case before the first use.

USB-C Port

Power On/Off  
When taken out of the charging case, the earphones will turn on and pair with each other automatically. To turn off the earphones, put them in the charging case, then the earphones will be turned off and start charging.

Pairing  
The earphones will turn on when taken out of the charging case.

Wearing

For new device connection, turn on the Bluetooth in your device and choose "Monster Open Touch Pro100" from the Bluetooth list to connect. You will hear system prompts after the earphones are connected to the device. If the earphones have been connected before, they will connect to the last connected device automatically after being turned on.

1. Take out the earphones from the charging case.  
2. Turn on the earphones by touching the touch sensor.  
3. Put the earphones on your ears.  
4. Adjust the earphones to fit your ears.

MFB Operation

Reset  
In the power on state, touch the MFB of earphones 5 times (two earphones at the same time), and the earphones will automatically shut down and restore the factory settings.

Smart Charging Case Operation

• After the screen is turned off without operation, double-click the screen to light up;  
• Short press the MFB button of the charging compartment for 1 time to turn on the screensaver or turn off the screen.

Swipe left or right to enter the main interface of the function

Smart Charging Case Music Mode Select

When switching to SD music mode, tap the directory icon to the right of the cycle key to view the song file directory in real time.  
Note: The SD card function does not support hot swap. The SD card needs to be restarted to identify. When playing the local music function, both earphones need to take out the smart charging case.

Smart Charging Case function display

Additional Operation

Answer call	Press L or R twice
End call	Press L or R twice
Reject call	Press MFB 3seconds
LED indicator (earphone)	The white light on ls and then turn off
Pairing is successful	The red light on 2s and then turn off
Charging	Red flashes
Fully charged	Red off
Low battery	Red flashes
LED screen (charging case)	
Power on/off	In the power-off state, press and hold the MFB to power on In the power-on state, press and hold the MFB to pop up the shutdown or restart interface, slide left and right to slide back to the main interface
Charging	A white lightning bolt symbol is displayed when the screen is locked When the screen is unlocked, the menu bar displays the percentage of battery in real time

Low battery

When the screen is unlocked, the menu bar displays the charging case in real time, Percentage battery and the icon turns red and flashes slowly

Music playback

Play/Pause: Tap the play icon  
Next song: Tap the right icon  
Previous song: Tap the left icon  
Volume up: Tap the right icon  
Volume down: Tap the left icon

Equalizer

Tap the left/right icon to select EQ sounds

Light level

Tap the left/right icon to select screen brightness

Language switch

Tap the left/right icon to select a language

Find my earphone

Tap the left/right ear icon and select Start accordingly (If you cancel, you will return), and the L/R earphone will sound accordingly. Tap the stop button to disappear and go back

Time setting

When connected to a mobile phone, the network time is automatically calibrated

Bluetooth to take pictures

When your phone turns on the camera, tap the on-screen camera icon to start the remote photo taking feature on your phone

Answer an incoming call

When the earphones remains connected outside the charging case, tap the storage screen Answer icon

Hang up

When the earphones remains connected outside the charging case, tap the storage screen Hang up icon

Reject an incoming call

When the earphones remains connected outside the charging case, tap the storage screen Hang up icon

Attention

\*Private replacement of batteries without permission is not recommended.  
\*Batteries [battery packs or battery combinations] should not be exposed to lighting, baking or similar overheating environments.  
\*The input voltage and current standard ≤ 5V/1A when charging the headset charging compartment from an external power source;

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2AVD2-MH22205

Model No.: MH 22205

OPEN TOUCH PRO100

快速指南  
请仔细阅读本快速指南并妥善保存以备将来使用。  
本产品由中国平安保险公司承保

产品概述

耳机x2 (左&右耳)

充电盒x1

USB-C充电线 x1

快速指南/保修卡

充电

请在使用此设备前先给耳机和充电仓充满电，此设备可以通过USB-C接口进行充电。

USB-C 接口处

电源开、关  
打开充电盒盖，拿出两只耳机，它将自动开机。想要关闭耳机，请将耳机放入充电盒，耳机关机同时进行充电。

配对  
打开充电盒，拿出两只耳机，它将自动开机。对于新设备连接，请打开蓝牙设备并搜索 "Monster Open Touch Pro100" 进行连接，配对成功后，您会听到系统提示音。如果耳机之前已配对过，开机就会尝试连接上一次的设备。

佩戴

佩戴  
拿出耳机，将 "Monster Open Touch Pro100" 顺着耳后佩戴，并轻轻旋转至舒适位置，以确保获得最佳的佩戴效果和音质体验。

1. Take out the earphones from the charging case.  
2. Turn on the earphones by touching the touch sensor.  
3. Put the earphones on your ears.  
4. Adjust the earphones to fit your ears.

按键操作

恢复出厂设置  
开机状态下连续5击耳机触控键（双耳同时），耳机将自动关机，恢复出厂设置。

智能仓操作

• 无操作息屏后，双击屏幕点亮；  
• 短按1下充电仓MFB键也可以点亮屏保或熄屏。

左右滑动可进入功能主界面

智能仓音乐模式选择

耳机在仓外保持连接时，轻点播放/暂停键下方的循环图标可以来回切换手机音乐和SD音乐模式

当切换到SD音乐模式时，轻点循环键右边的目录图标可实时查看歌曲文件目录  
注意：SD卡功能不支持热插拔，中途插拔SD需要重启才能识别。启动本地音乐功能时，两只耳机需要拿出智能仓。

智能仓功能展示

更多操作

接听	双击左或右耳
挂断	双击左或右耳
拒接	长按MFB键3秒
LED 指示灯（耳机）	配对成功：白灯长亮1S熄灭 配对超时：红灯长亮2S熄灭 充电中：红灯慢闪 充满：红灯熄灭 电量低：红灯慢闪
开、关机	在关机状态，长按MFB键开机 在开机状态，长按MFB键弹出关机或重启界面，左右滑动则回到主界面 锁屏时显示白色闪电符号 屏幕解锁时菜单栏实时显示百分比电量 屏幕解锁时菜单栏实时显示充电仓百分比电量，同时图标变红色慢闪 播放/暂停：轻点播放图标 下一曲：轻点右箭头图标 上一曲：轻点左箭头图标 音量调节：加音量：轻点右喇叭图标 减音量：轻点左喇叭图标

均衡器

轻点左/右三角标单向选择EQ音效

屏幕亮度

轻点左/右三角标单向选择屏幕亮度

语言切换

轻点左/右三角标单向选择语言

找耳机

轻点左/右耳图标，对应选择 "开始" (取消则返回)，L/R耳机时发出提示音，点击停止键声音消失并返回

时间设置

与手机连接时，自动校准网络时间

蓝牙拍照

手机打开相机时，轻点屏幕相机小图标启动手机远程拍照功能

接听来电

耳机在仓外保持连接时，轻点仓屏的接听图标

挂断电话

耳机在仓外保持连接时，轻点仓屏的挂断图标

拒接来电

耳机在仓外保持连接时，轻点仓屏的挂断图标

注意

\*不建议未经许可私下更换电池。  
\*电池[电池组或电池组合]不得暴露在照明，烘烤或类似过热的环境中。  
\*耳机充电仓在外接电源充电时，输入电压电流标准≤ 5V/1A；

封面

75X95MM 105G双胶+4C印刷+风琴折