Operation Instruction for Sveaverken MooCollar SCN200



Sveaverken Svea Agri AB



Högmossevägen 11 SE-641 39 Katrineholm Tel: +46-150-48 77 00, Fax: +46-150-48 77 77 www.sveaverken.com



Contents

| Safety Precautions | .2 |
|-----------------------------|-----|
| Product Introduction | . 3 |
| Product Specifications | . 3 |
| nstallation | . 4 |
| nstructions of APP | . 6 |
| Disclaimer | 13 |
| Common Faults and Solutions | 14 |

Safety Precautions

Routine



• Please read the operation instruction before the installation, adjustment, inspection and maintenance of the MooCollar and other work. Improper installation and operation may lead to serious injury, for which the manufacturer shall assume no responsibility.

• The MooCollar must be matched with the corresponding gateway; otherwise it cannot be used normally.

Warning



• Protective equipment is required for the installation, adjustment, inspection and maintenance of the MooCollar.

• Long-term use may lead to neck-tag fall-out or wear and tear. Please adjust and replace the neck strap in time to avoid physical injury to animals.

• Regular inspection and maintenance are essential for the normal operation of the device.

• If the device has to be used by children aged 8 and above, people with relatively weak extremity, sensory or mental capacity and people lacking experience and expertise, relevant personnel must receive guidance and training on safety usage specifications for the device and relevant hazardous matters.

• This device is not a toy for children!

• The cleaning and maintenance of device must not be handled by children without supervision.

• For safety, damaged device must be replaced by the manufacturer, its service agent or other qualified personnel,

Danger



• The MooCollar contains battery. Please avoid heavy extrusion and hitting.

• Please keep the MooCollar away from fire!

Product Introduction

Sveaverken MooCollar collects positioning data through GPS chip, and transmits them to the back-end server by wireless communication. Users can view the position and activity track of animals on the mobile APP or Web, and can also set an electric fence on the map, so that when the cow walks out of the fence, an alarm message will be sent to the user APP to remind the user to quickly find the lost animals, helping reduce the the losses and management cost.

The MooCollar is provided with a large-capacity lithium battery and a solar panel for battery charging, extending the service duration. The MooCollar is also designed with the anti-dismantle detection function, so that an alarm message will be sent to user APP immediately when the neck-tag is removed.

Sveaverken MooCollar Lora communication frequency band is divided into 868 MHz and 923 MHz.

| Specifications of Sveaverken MooCollar | | | |
|--|--------------------|--|--|
| model | SCN200 | | |
| Size of sensor unit (length*width*height) | 123x80x33.5 (mm) | | |
| Weight of sensor unit | 350g | | |
| Size of clump weight (length*width*height) | 86x66x30 (mm) | | |
| Weight of clump weight | 500g | | |
| Protection grade | IP66 | | |
| Battery life | 1years+ | | |
| Communication mode | LoRa | | |
| GPS positioning accuracy | 5-10m | | |

Product Specifications



Structural composition of MooCollar:

- 1 Sensor unit
- 2 Buckle
- 3 Neckband
- 4 Clump weight

Installation

1. MooCollars are generally installed outdoors and work with a gateway, which uses a power supply of AC100-265 V or solar energy. Before using MooCollars, install the gateway on a pole or on the wall and connect it to a cloud server through 4G network, WiFi, or Ethernet. The coverage radius of a single gateway is about 1.2 km. If the grazing area is larger than the total coverage of gateways, use more gateways to fully cover the grazing area. One gateway can work with 500 MooCollars. If the herd is larger than that, use more gateways.

2、 A MooCollar set includes a neck strap with a metal buckle, a sensor unit and a clump weight. Open the package, and take out the above components.

3. The device shall be preassembled before wearing. Put the sensor unit and the clump weight on the neck strap, and then put the entire device on the neck of animals. First put the sensor unit on the neck strap and then the clump weight. See below for the preassembled state of device. Please note the following:

4. The picture below shows the state of device on the neck of animals, with the tail of neck strap fastened by the metal buckle to form a circle. In the preassembled state, the tail of neck strap is not fastened by the metal buckle.

5. After the equipment is put on, the top of the sensor unit faces upward (convenient for solar power supply), and the clump weight faces the bottom

6. The relative position of the sensor unit and the clump weight on the neck strap should be adjusted according to the neck circumference. After the MooCollar is put on the neck of animals, fasten the neck strap. The sensor unit shall be on one side of the neck, the clump weight right below the neck, and the buckle on the other side.

7、 After the neck strap is fastened, there should be space left between the neck strap and the neck of animals, otherwise it may be uncomfortable for the animals. Under serious circumstances it may even lead to injury. The space between the neck strap and the neck should be enough to fit an adult's fist in (about 8cm).

8. The duty cycle was not exceeded 0.1% in a period of 1 hour.



Instructions of APP

Login

- 1. Get your account and password from the manufacturer or dealer.
- 2. Enter the account and password.
- 3. Tap login to start using the app.



Homepage

- 1. The homepage shows locations, alarms, and collar wearing of all animals.
- 2. Tap Homepage, Animal, Record, and Account to change the screen.

| - 27.99 | | | - |
|------------------------------|------------|-------------------|-----------|
| MooCollar | Queer or | wite more | |
| 3.1. | China - | | 0 |
| | | | ***** |
| A. | | 800408 800 | |
| ./ | - | | |
| Myarmilliarma | ar Lans | 1 | Haran |
| 0 | 0 | C | C |
| taxe battery seed attern. | alars | alart | the state |
| | | 5 | |
| 0 | | | A |

3. Tap Low battery level alarm, Off-boundary alarm, Dismantling alarm, or Error alarm to view the corresponding alarm records.

| 300s re tu Low battery level alarm | 300 - X010 | no 2004 vertad C Emzalarm |
|--|---------------------------------------|---|
| and the second first stands | < Dismanting atam | |
| Channell Annual (1.). Alternity (10. | D dament primer in a management | Reason Sector Sector |
| Animal IO 2002 | Anamal ID 2008 | and the second se |
| Name (1996) 10022-00 10 10 10 10 10 | diamentaria (2017 Distant Program | Animal ID |
| Design Add (1990) (1990) (1990) | Damong Weighted 11110000000 | Name (1997) 2020 2030 21 (1997) 20 |
| | | Terms (0.077) (CONSTRAINED |
| Animal ID 2002 | Animal ID-20007 | |
| Marry 1994 1 2020 03 54 (1998 24 | Marrison - 2010 01/01 112/107 | Animal ID: |
| Server 31(1)(1)(1)(1)(1)(1)(1)(1)(1)(1)(1)(1)(1) | Daving Build with previously for | Aller 1 (1996) 7 2022 40103 12:00 44 |
| | | Desine Mail 1111 (Characteristics |
| Animal ID 2002 | Animal 10:2007 | |
| argument (1999) 1202(14)8-04 (14)814.04 | diame book 00031-00-02 14,00-08 | Animal ID. |
| Same Skillstill History | Annual PERMIT | Water (1994) (2012 20 - 02 22 - 04 21 |
| | | (access 24x () 11023 + 020044 |
| Animal 10:2002 | Animal ID:2007 | |
| Warm (http:// 2010/02/04 16 11/54 | (Auroration) (2022) (0.142) (0.142) | Animal ID |
| Second \$44,21007127111000000 | Dermy Delivery Columns | Marry (1994) 2522-02-02-14-0429 |
| 100000 | | Particular State (11) (Statements and |
| Animal 10 | Animal ID:2004 | |
| Part (114 122) 41 10 10 10 10 | diametrization (1002) 00111 01444 (40 | Animal ID |
| Nervice hts 2100/2711 (manufit | 24000 (%210) (1110) (80) * | March 1014 1 2022 20102 1210 02 |
| Terror Contractor | | Second Herry (Channelles) |
| Animat ID | Animal ID:2003 | |
| Americana, 1,2023 42 19 13 13 11 13 | Apres 8144 (2022/02/14/16/94/25 | Animal ID: |
| Device (N 21 (012)) to summing | (special 092710)/27110000000 | Apres 1044 (2022/2010) (2020) 16:00.06 |

Animal Management

1、Tap Animal to open the Animal info screen.

| 2118 4 | + 54.82 |
|--|---|
| Avenul offe | + |
| (Instantion and | |
| Animal ID 00000001 | Section 1 |
| desse de concentration de | - |
| Animal (0.2002 | In Formerski |
| Server includes () | sphere in sectory |
| Animal ID 0509 | 14-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1- |
| provention of the second se | And a local data |
| Animal (D-8519 | Section 19 |
| make (w) (this summary) | And Description |
| Animal (D:0048) | Part County 100 |
| And a second sec | adamp and the |
| Animal (Crypt12 | (manufacture) |
| An one the play to prove the play | Name and Address |
| | 9 8 |
| twining and the | 5 X |

2、Tap + at the top right to enter Wearing Collar screen. You can enter the animal ID or device SN, or scan the QR code to get the collar information.



1. Tap an entry in the Animal info screen to open the Wearing info screen of this collar and view the detailed wearing information.

| 30:07 | | 40-54(0) |
|-----------|------------------|-------------|
| | Wearing info | Loui |
| Animal I | Þ | inonnoni i |
| Device 5 | N: | 110000002 |
| Day of w | earing | |
| Battery I | evel | 11.1 |
| Last cor | nmunication | |
| Time of | wearing 2002-02- | 22 15 40 50 |

2. If you tap Lost, a reminder message "Check if collar is lost. Animal info of lost collar cannot be found in animal list." pops up. Tap Cancel or Lost to complete.

| 0 | - | - | - 110 |
|-------------|-----------------------------|--|----------|
| Animality | | | |
| Sec. 1 | | | |
| Derstand | and the second | | |
| Ramory land | | | |
| San sann | - | | |
| Check | if coller is a coller co | er itast Flost, Aeim enot be foi al tot | and in . |
| 0 | iniat i | i la | et 1 |
| | | | |

Record

1. Tap Record to open the Record screen, which shows the Low battery level alarm, Off-boundary alarm, Dismantling alarm, and Wearing/Dismantling record. Tap one alarm type to view details.

| | * | | 10.34.00 |
|-------------|---------------|-------|----------|
| | Net | bot | |
| Low hatte | ry level atam | | |
| off-bound | ary alarm | | |
| Dismantik | ng alarm | | |
| Liter alarr | n: | | |
| Wearing/E | Sinerting) | ecord | Ø |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| 20 | | | 0 |

Account

1、 Tap Account to open the following screen.

| 2007 | | | < 14 m |
|------------|---------------|---|--------|
| | estadrei333-3 | | |
| My farm | | | |
| E fence | | | |
| Settings | | | 5 |
| About Us | | | - 20 |
| Charipe pa | boward | | |
| | Log o | 4 | |
| 8 | a | | 8 |

2、Tap My farm to set the farm name, organization code, contact, contact telephone number, and farm address.

3. Tap E fence to open the screen to set the fence name and edit the fence. The system automatically calculates the area inside the fence.

| 20:00 - | | 10 54 00 |
|-------------------|----------|-----------------|
| < | My fence | |
| Fence name | | test2.2 |
| Notification type | | Off the fence 2 |
| Edit Fence | | 2 |
| Fence area | | 1.4665 > |
| Note | | ંક |
| | | |

4、Tap Settings to set the region, language, and alarm push. Tap More language, select a language, and tap finish.

| 2006 + | 40 %H 00 | 30.08 • | 16 °B4 0D |
|-----------------|------------|-----------------|---------------|
| C Setter | da. | < Setting | |
| Region settings | | Region settings | |
| More language | Brighten J | More language | Anglant 1 |
| Alarm push | | Alarm push | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | glease ch | odise (s.i.d) |
| | | Englis | h |
| | | Follow the | |
| | | Chines | E |

5. To change your password, enter the old password and the new password, and enter the new password again to confirm, and then tap Save.



Disclaimer

Sveaverken bears no joint and several liability for any damage caused by the following conditions in operation:

1. Accidents caused by improper storage, such as placement of battery or other parts in fire, or making the battery and other parts within the reach of children;

2. Damages caused by problems such as improper operation (incorrect wearing, incorrect operation in the app, intentional damage, and other destructive behaviors), and installation not compliant to the operation guide, or uses in fields other than animal husbandry;

3. Damages caused by force majeure events (such as fire, flood, earthquake, lightning, mud avalanche, and nuclear leakage), or damages caused by farm animals, wild animal attack, insect disaster, livestock disease, or other similar natural factors (including but not limited to entry of corrosive liquid, scratches, and strong radiation);

4. Failures or damages caused by tampering, change of specifications, or installation, addition, or extension of parts that are not sold, authorized, or recognized by Sveaverken; and

5. Accidents caused by improper use of this product, or negligence, breach of contract, defamation, or infringement of copyright or other intellectual property rights, and any loss incurred thereby, except for those expressly stated by Sveaverken.

Common Faults and Solutions

| Product | Fault | Solution |
|-----------|--|---|
| | Failed to connect to the gateway and activate the MooCollar. | Shake the MooCollar to activate it for the first use. |
| | connection. | Check the battery, and charge the MooCollar with the magnetic charging cable if necessary. |
| MooCollar | | Replace it if necessary. Tighten the neck strap. |
| | The housing of the sensor unit is | Remove it and contact the manufacturer or dealer. |
| | The gateway fails to receive any data after the connection is established. | Check the gateway and its configurations. |
| | The power indicator of the PoE adapter is off. | Check whether the power supply works normally. |
| | is off. | Check whether the PoE and the network cables are normal. |
| Gateway | The network indicator is off, and the gateway cannot connect to the network. | |
| | | Contact the technical support. |
| | | Check the gateway configurations and whether there is any activated collar nearby. |
| | Unable to log in the gateway | Check whether the IP address |

| through Web connection. | is correct. |
|-------------------------|-------------|
|-------------------------|-------------|

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Federal Communication Commission (FCC) Radiation Exposure Statement

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

CE statements:

Do not use the device in the environment at too high or too low temperature, never expose the mobile phone under strong sunshine or too wet environment. The suitable temperature for the product and accessories is -20^{+55} °C.

If you use a third-party charger, the recommended output voltage/current of the adaptor is DC 5V/1A, and the adapter shall be CE approval type.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body.

| Operation Frequency | Max. Perp |
|---------------------|------------|
| 863.1-869.9MHz | 11.076 dBm |

This product can be used across EU member states.

EU Regulatory Conformance

Hereby, Sveaverken Svea Agri AB declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

For the declaration of conformity, visit the Web site http://www.sveaverken.com.

CE

