

尺寸: 70*95mm

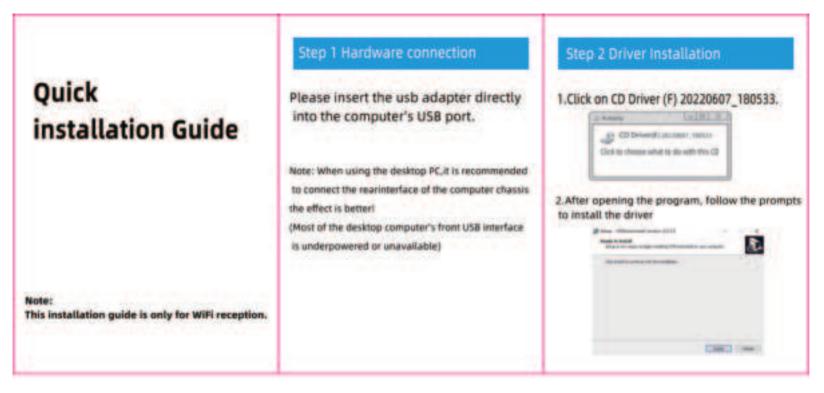

Step 3 The installation is complete

Please wait for the wireless adapter to be initialized. After clicking, it will automatically display downward, and the wireless connection icon will appear in the lower right corner of the computer. Click the wireless connection icon "WiFi" and select an available WiFi signal.

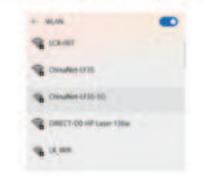

FAQ (Frequently Asked Questions)

If the computer has a firewall or a virus is displayed, it means that the anti-virus software cannot recognize the driver software, please close the anti-virus software first, and then start the installation program If it cannot be used after installation, replace the USB interface, or use the USB interface on the back of the host, delete all network card drivers, and reinstall the drivers

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.