



- 1 初次开始使用的情况下 从本中令子甲令出日机斯特伊拉腊 加甘 机放回充电仓耳机就会开始充电并自动关机。当耳机从充电仓里取 中 표제하수수하고제
- 2.当耳机不使用时,放回充电仓会自动关机。

- 1 从本由合金起开机
- 2. 耳机红、蓝交替闪烁(配对模式)

手提电脑/平板电脑配对

3.打开手提电脑/平板电脑的设置---蓝牙---打开蓝牙---搜索---YYK-526 ---配对/连接-播放音乐。

# 蓝牙发射器操作说明

- 1.将发射器插入电脑USB端□,此时红蓝交替闪。
- 吖,并机与友别奋连接风功。 3.在电脑上做如下设置:打开电脑-设置-蓝牙和其它设备-设备-相关设备-戸言-USBAUGIO1.U 4.当设置完成后、在电脑ト播放歌曲、互机就能接收到歌曲。

# 与echo do配对

打开alexa app-设置-添加新设备-蓝牙-配对新设备-搜索设备 -YYK-526 -配对/连接-播放音乐。

# 如何重置?

耳机在关机状态下, ON/OFF键长按8秒。将耳机放入充电仓, 耳机会自动 关机并开始充电。取出耳机后,耳机会自动开机,重置就完成。

# 如何给耳机充电

1.把耳机放入充电仓内,耳机就会自动关机然后开始充电,充电仓 显示屏亮起,显示充电仓当前电量,说明充电仓正在给耳机正在充电。 2.耳机充满电后,耳机指示红灯就会灭掉。

# 给充电仓充电

支持蓝牙

接收距离

喇叭阳抗

待机时间

通话时间

音乐播放时间

耳机电池容量

充电仓电池容量

耳机充电时间

充电仓充电时间

产品重量

频带

- 1.请使用手机适配器给充电仓充电,可以使用电脑Type-c线或者其他 Type-c接口的充由哭讲行充由 2 充由分数字显示屈指示,说明正在给充由分充由。充满由为100%。

/HFP/HSP/ SPP/HID

2.402GHz-2.480GH

320±10%

6小时

6/J\Rt

约1.5/NH

约1.5小时

\*\*\*

71g

生活防水(出汗、下雨、洗脸、淋浴等,水里游泳等除外)

\*请注意手机的蓝牙信号不能在水中传输

水上

# A2DD/AV/DTD/AV/DCD/DECOMM

注意 🔨

- 2.请避免接触腐蚀性液体,以免损坏产品。
- 3.不要放在-10摄氏度以下或者60摄氏度上的极端温度下。 4.远离小孩或宠物。
- 5.不让耳机接触尖锐物品,否则容易刮花。 6.请不要在雷雨天气使用避免损坏或发生电击。
- 7.1个月以上不使用的话,为了安全运行,请定期充电,保养。 8.因为蓝牙耳机信号不能在水中传输,游泳潜水将会导致信号断开

# 为什么我搜索不到蓝牙?为什么不能连接蓝牙?

1 蕨草的野枣具10m 法确保没有障碍物 毛和季季等近甘和

2 加有甘他手机或者设备连接讨该耳机,请失解除配对 3.请重新启动蓝牙设备,然后尝试重设耳机

# 为什么耳机没有声音?或者音乐会断开?

- · 请检查手机网络是否正常,网速是不是比较慢,音乐是不是正在 ·请检查手机是否同时连接了两个音频设备,双击多功能按钮,
- 可以退出连续
- · 周围环境的干扰或者磁场大强将全影响蓝牙信号传输 ·打开手机蓝牙界面,点击接触配对,删除配对记录,搜索蓝牙, 再次配对 ·你可以重启手机或者重置耳机

# 蓝牙耳机接收距离

关于蓝牙耳机接收距离如下图所示



灯显示编号达到"10"时, 请为充由含充由。请注音不要使耳机和充 电盒中的电量耗尽。可能会缩短内置锂电池的使用寿命。

# - 安全预防 -

- 京质量的甘机 为了延长使田寿命 请参考以下说明: 1.请让本品远离高温、高湿、腐蚀环境。
- 2.请防止本品被撞击,跌落,弯曲,浸泡等。
  - 3.请不要拆耳机或者充电座。 4.请不要让本品一直过度充电,这样会降低的的使用寿命。 5.如果它引起任何不适感或者疼痛,请停止使用本品。

为什么耳机会自动关机?

为什么不能给充电仓充电?

空全连控到玄由仓

田洒结武老布嫁拭。

将耳机重新放入充电仓,拿起耳机将自动开机。

请确保耳机有足够电量。另外耳机将自动断开蓝牙连接10min。

1.请确保充电线或者手机充电器是良好状态日正确连接。

2 有可能接触不良 田毛指按耳机 并将耳机的杂由触占

4 日机请嫁于汪水放同农由仓农由 日机均元灯亭起

3.耳机的充电触点可能脏,多尘或出汗。放回充电盒充电时,请

5.如果听到"Battery Low"的提示音,请为耳机充电。当充电盒LED


6.使用由受监管的制造商认证的DC 5V-1A适配器。 反复充电和放电耳机会导致电池性能随时间降低,这对所有可充 电电子产品来说都是正常的。


# 产品包装内有

1 莜芽甘和1个 2.充电座1个 3Type-c充电线1条

4.另外的耳帽2个 5.说明书1本

# **User Manual** —Product description— YYK-526 Wireless business headset

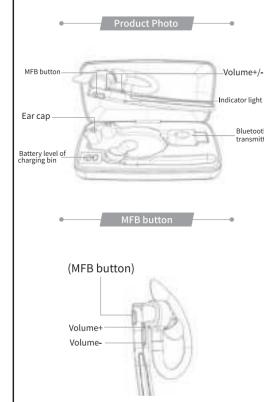

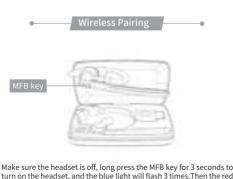


成功配对连接后,耳机指示灯息灭,表示配对连接成功!


此时可以讲行手机由话, 听歌

turn on the headset, and the blue light will flash 3 times. Then the red and blue lights flash alternately (entering the pairing state at this



Turn on the Wireless function of the user's mobile phone (or other Wireless devices), and search or scan, At this time, the mobile phone will search all the Wireless devices nearby, and click the Headset Name: YYK-526, and enter the password 0000 (most mobile phones do not need a password at present) After successful pairing and connection, the headset indicator light goe off, indicating that the pairing connection is successful! At this time, you can make mobile phone calls and listen to songs

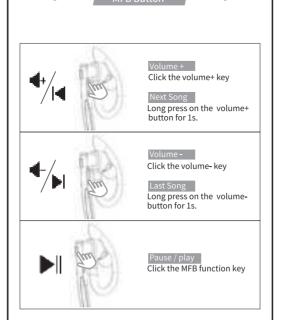

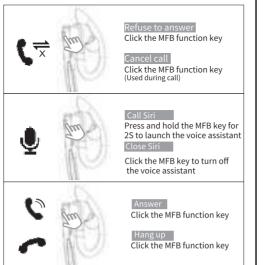

# ON/OFF switch

off the protective film. Once put into the charging bin, the earbuds will turn off and initiate recharging automatically. When taken out from the charging bin, the earbuds will turn on automatically. 2. After use, put the earbuds into the charging bin, and it will turn off automatically

1 In the first time use, take the earhurds from the charging hin and neel

- 1. Pick up from the charging compartment and switch 2. Headphones blink red and blue alternately (pairing mode)
- 3. Open laptop/tablet's settings—Bluetooth—Open Bluetooth—Search—YYK-526-Pair/Connect-Play music.

- 1. Insert the transmitter into the USB port of your computer, at this time, the red and blue flash alternately 2. Take out the headset from the charging seat, the headset will turn on automatically, when the red light of the transmitter is off and only the blue light is on, at this time, the headset and the transmitter are connected
- 3. Do the following settings on the computer; open the computer settings - Bluetooth and other devices - devices - related devices - sound-USBAudio1.0
- 4. When the settings are complete, play the song on the computer, the neadset will be able to receive the song.

Activate Alexa App - Settings - Add New Devices - Wireless - Pairing New Devices - Search Devices - YYK-526 - Pair/Connect - Play music.

When the headset is off, press the on / off key for 8 seconds. Put the headset into the charging compartment, and the headset will automatically turn off and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

- 1. put the headset in the charging bin, the headset will be automatically turned off and then charged. The display lights up to show the current power of the charging chamber, indicating
- that the charging chamber is charging the headset. 2. When the headset is fully charged, the red light of the headset indicator will be off.

1.Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interfa 2.The digital display of the charging bin will indicate the recharging process, and 100% battery level means fully recharged.

/ersion	V5.4
Vireless support	A2DP/AVDTP/AVRCP/RFCOMM /HFP/HSP/ SPP/HID
Reception distance	≥10m
requency band	2.402GHz-2.480GHz
lectrical impedance	32Ω±10%
tandby time	180h
Call time	6h
Music playing time	6h
arbuds battery capacity	40mAh
lost battery capacity	500mAh
Charging bin recharging time	About 1.5h
Charging time of headset	About 1.5h

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.) \* Note that the Wireless signal of mobile phones





Please keep beyond the reach of kids or pets.

Why cannot I detect Wireless?

Why Wireless pairing failure?

phone close to the earbuds.

please disconnect first.

and with proper connection.

the indicator lights will turn on.

the charging points to the charging bin.

5. Please mind contact with sharp objects to avoid scratch

Reception distance greater than 10 metres

1. Please avoid disassemble/reassemble the product in case of failure or fire

3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C

6.Please avoid use in thundering and raining days to prevent damage or

Please keep away from corrosive liquids to prevent the product from damage.

7. In the case of non-use for above a month, please charge regularly for mainten

1.The Wireless rang is 10m; please ensure no obstacles and place the mobile

1. Please ensure the charging cable or mobile phone charger is in a good state

3. The earbud charging points might be stained with dust or sweat. When place the

4.Please wipe the sweat on the earbuds before putting into the charging bin, and

2.To ensure proper connection, press the earbuds to fully connect

into the charging bin for recharging, please clean with alcohol or cloth.

2. If the earbuds are connected to other mobile phone or devices.

Please reboot the Wireless device and reset the earbuds.

Why do the earbuds produce no sound?

Or, why does the music playing stop?

8.As the Wireless signal cannot transmit in water, it is not suitable for swimming

About the Bluetooth headset receiving distance is shown below

Attention 🛆

rsion	V5.4
reless support	A2DP/AVDTP/AVRCP/RFCOMM /HFP/HSP/ SPP/HID
ception distance	≥10m
quency band	2.402GHz-2.480GHz
ctrical impedance	32Ω±10%
indby time	180h
ll time	6h
sic playing time	6h
buds battery capacity	40mAh
st battery capacity	500mAh
arging bin recharging time	About 1.5h
arging time of headset	About 1.5h
ight	71 g



# Why do the earbuds turn off automatically?

Please ensure sufficient battery level. In addition, the earbuds will automaticall disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting.

## Why cannot I recharge the charging bin?

1.Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.

2.To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.

3.The earbud charging points might be stained with dust or sweat. When place them

into the charging bin for recharging, please clean with alcohol or cloth.

4. Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on. 5.Once the prompt tone "Battery Low" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging bin reaches "10", please recharge the charging bin. Please pay attention to not using up the battery of the

# arbuds and charging bin, as it may shorten the service life of the built-in lithium Safety Precautio

To guarantee the service life of the quality earbuds, please refer to the instructions as follows:

1.Please keep away from high temperature, high humidity and 2. Please avoid humping, falling, bending, soaking, and etc...

3. Please do not disassemble the earbuds or charging bin.
4. Please do not overcharge for a long time, which will shorten the service life. 5.In the case of feeling any discomfort or pain, please stop using the product. 6.Please use certified DC 5V-1A adaptor from manufacturer under the supervisio

of regulatory authorities. Repeated charging and discharging will impair the batter

# performance over time, which is normal for all rechargeable electronic products

1. Earbuds \* 1 4. Earbuds cap \* 2 2 Charger \* 1 5. User Manual \* 1 3. Type-C charging cable \* 1



# FCC Warning

# 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if

not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
  -Connect the equipment into an outlet
- on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

# FCC RF Radiation Exposure Statement:

This Transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

 This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

FCC ID: 2AOZMYYK-526