

单页尺寸: 90x130mm

材质: 封面200克铜版纸, 内页105铜版纸

工艺: 骑马钉, 过哑膜

**注: 单色印刷**

# **VIDEO BABY MONITOR**

3.2" Color LCD

**User Manual**

 


# CONTENTS

<b>SAFETY INSTRUCTIONS</b>	02
<b>CAUTION</b>	02
<b>PACKAGE CONTENTS</b>	03
<b>PRODUCT DIAGRAM</b>	04
<b>GETTING STARTED</b>	08
1. Charging & Powering Monitor	08
2. Powering Camera	08
3. Placing the Camera	08
4. Wall Mounting Camera	09
<b>FUNCTIONS &amp; OPERATIONS</b>	10
Top Status Indications	10
1. Volume Adjustment	11
2. Brightness Adjustment	11
3. Add Camera	12
4. Selecting a Camera & Scanning	12
5. Delete a Camera	13
6. VOX mode	13
7. Alarm Clock	14
8. Lullabies	14
9. Temperature	15
10. Screen Sleep	15
11. Alarm Volume	16
12. Factory Settings	16
<b>TROUBLESHOOTING</b>	17
<b>WARRANTYS CUSTOMER SERVICE</b>	18
<b>FCC COMPLIANCE</b>	19
<b>WEEE COMPLIANCE</b>	21

# SAFETY INSTRUCTIONS

- Keep cord out of the reach of children (more than 3ft (0.9m) away) in case of STRANGULATION.

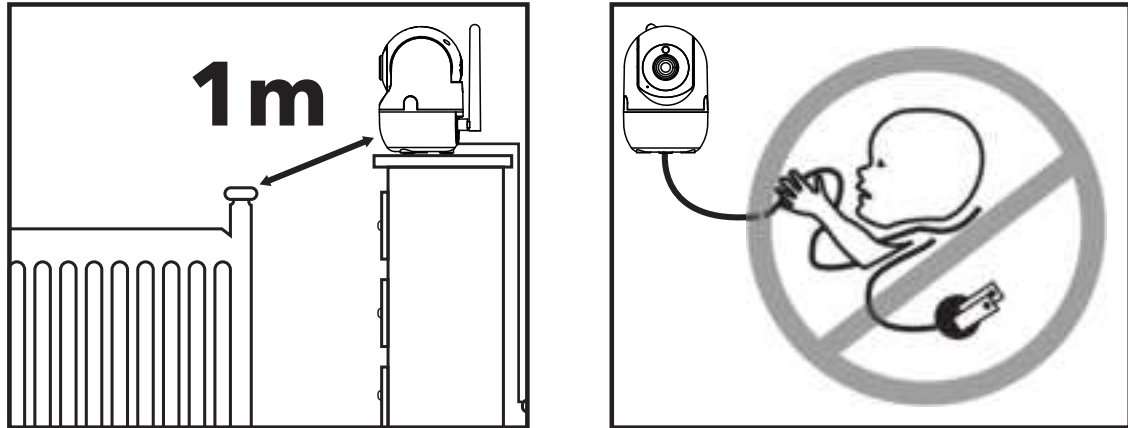


- NEVER place the camera or cord in or near the crib or playpen.
- NEVER mount the camera directly above the crib or playpen to avoid the risk of injury.
- Only use the AC adapters provided.
- Never use the unit near water, including near a bathtub, sink, laundry machine tube, wet basement, etc.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Only use attachments and accessories specified by the manufacturer.
- Unplug this device when unused for long periods of time.

## CAUTION

 
- NOT toys. Do not allow children to play with them.
- This product is NOT intended to replace the proper supervision of children. You MUST check your child's activity regularly.

- This product is not intended for use as a medical camera and its use should not replace adult supervision.
- Unplug the product during lightning storms.
- Please check the operating range and condition of the camera carefully at the initial installation, and on a regular basis after that.
- Check the reception regularly. Test the camera before use and after changing the camera's location.
- For indoor use only.
- Clean the camera with a dry cloth only.
- Do not block any ventilation openings.
- Microphone feedback might occur when the monitor is too close to the camera. Please keep them at least 1.5m /4.9ft apart.


## PACKAGE CONTENTS

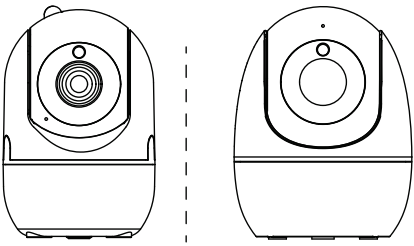


Camera\*1

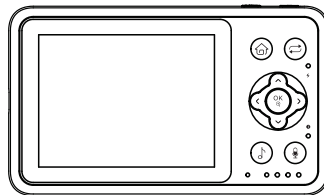 


Baby Monitor

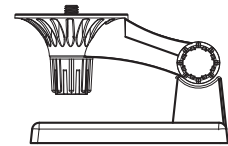 


Wall Mount Bracket  
(optional)

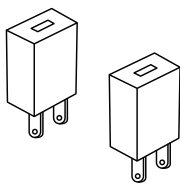 

Adapter \* 2

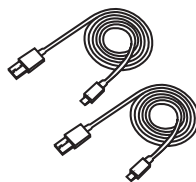 

Power Cable \* 2

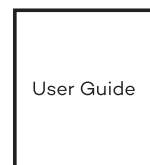 

User Guide



Screw \* 2  
(optional)

 
 








Wall Anchor \* 2  
(optional)

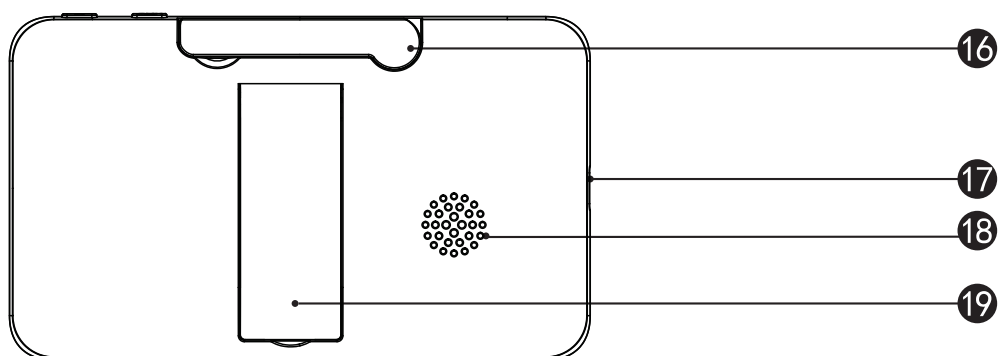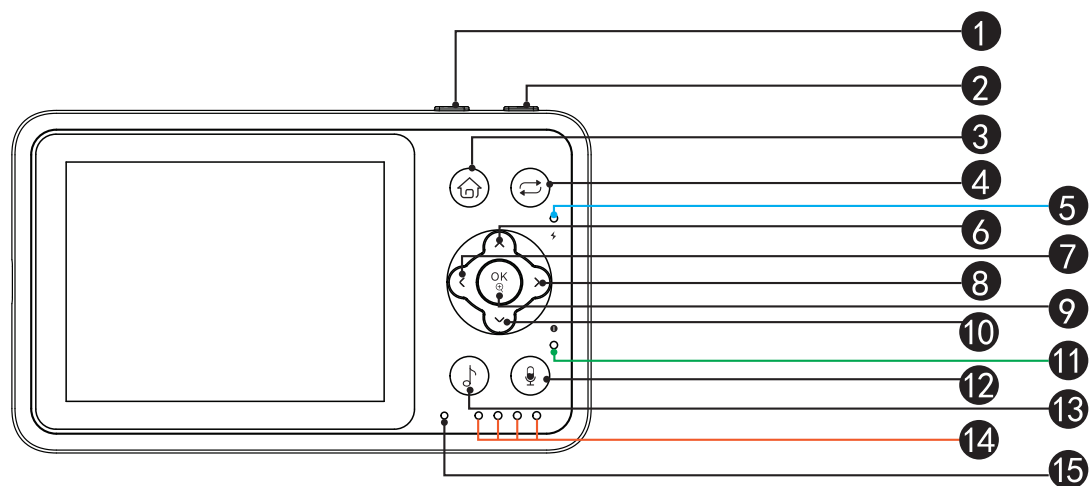**Note: This product contains only one camera.**

# PRODUCT DIAGRAM

 
## Baby Monitor



- ① VOX shortcut key: Turn on or off the audible alarm function.
- ② Power/Sleep Button: Long press to turn on/off the monitor; short press to turn on/off the screen.
- ③ Menu/Back Button: Press  to enter menu page or press as a back key.
- ④ Camera switching: switching and cycling of multiple cameras.
- ⑤ Charging indicator: Red during charging, and goes out when fully charged; Blinking red when the monitor is in a low power state.
- ⑥ Up Button: Press  to tilt the camera upward or to change your selection upward.
- ⑦ Left Button: Press  to pan the camera leftward or to change your selection leftward.
- ⑧ Right Button: Press  to pan the camera rightward or to change your selection rightward.
- ⑨ Confirm/Zoom Button: Press  to Zoom in/out or to confirm your selection.
- ⑩ Down Button: Press  to tilt the camera downward or to change your selection downward.
- ⑪ Monitoring Status Indicator: Green. When the camera is disconnected, it flashes slowly; when the camera enters pairing mode, it flashes quickly; when the camera is turned on, it remains steady.
- ⑫ way talk: Long press to talk with your baby.
- ⑬ Lullaby shortcut keys: Turning the lullaby on or off.
- ⑭ Sound Level LED: Low/high level shows low/high sound detected by the camera.
- ⑮ Microphone
- ⑯ Antenna
- ⑰ Power Input
- ⑱ Speaker
- ⑲ Support Stand




# Baby Monitor

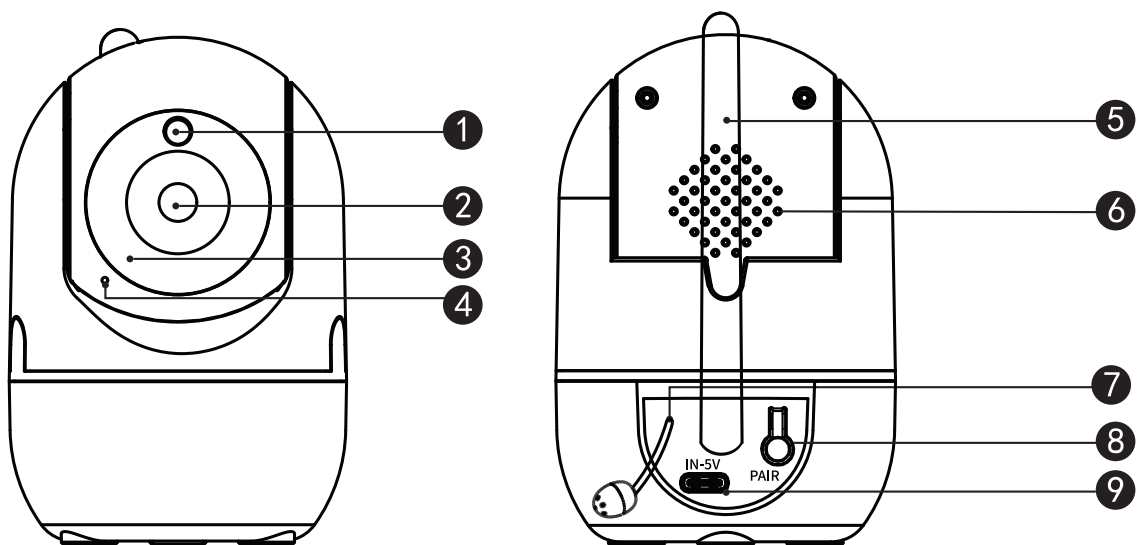

(Front)

 (Back)

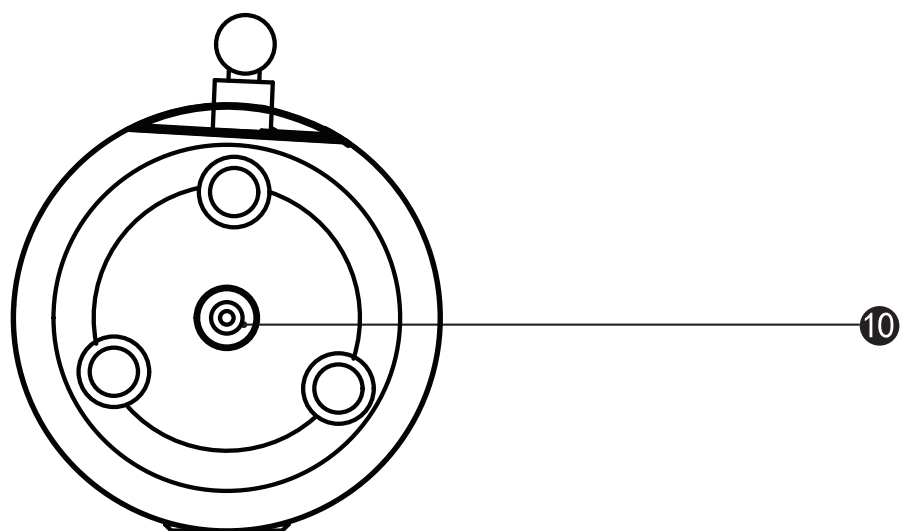


(Bottom)


- ① Night Vision Sensor
- ② Camera Lens
- ③ LEDS
- ④ Microphone
- ⑤ Antenna

- ⑥ Speaker
- ⑦ Temperature Sensor
- ⑧ Pair Button
- ⑨ Power Input
- ⑩ Mounting Threaded Holes


# Baby Monitor

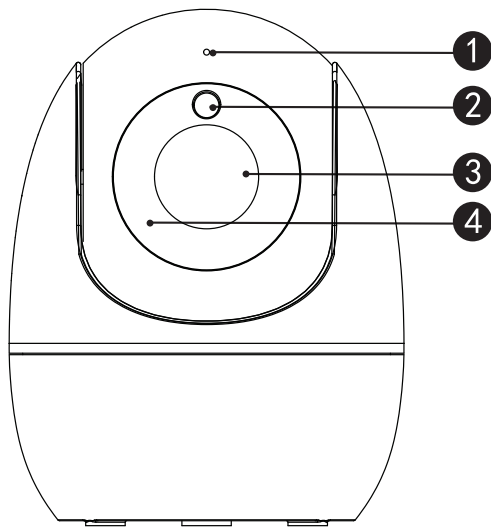 

(Front)

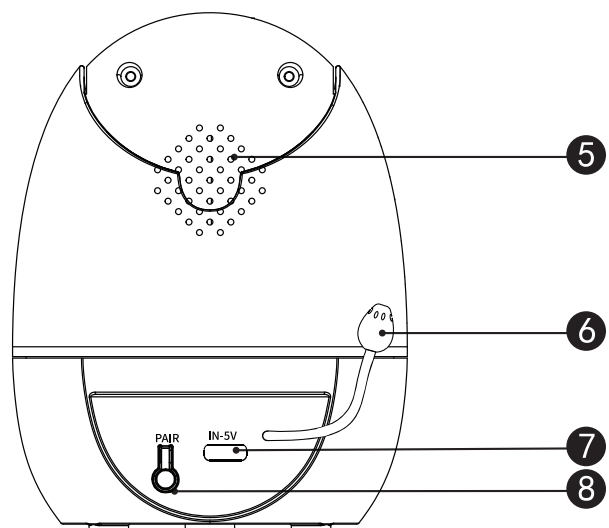 

(Back)

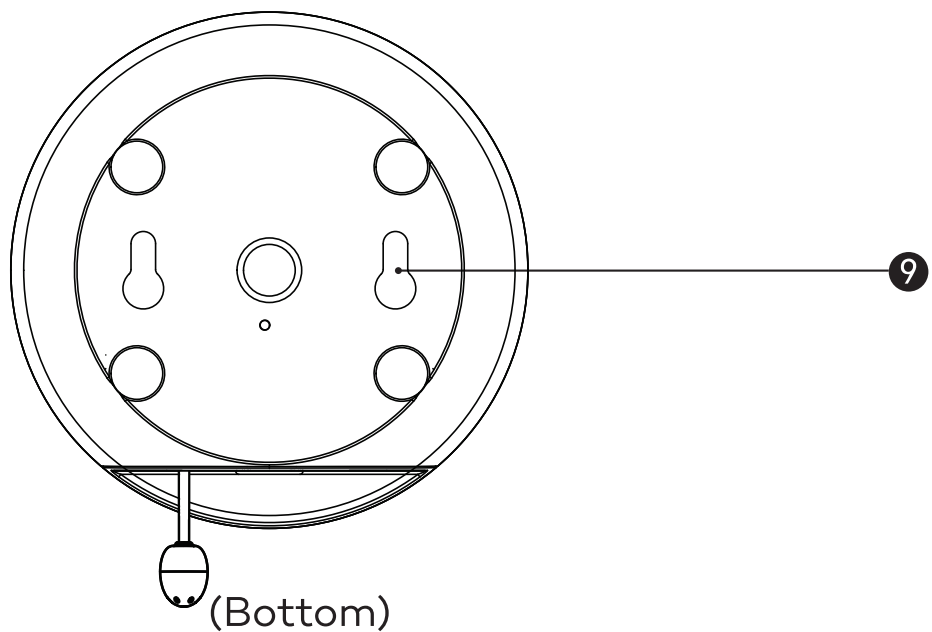 

(Bottom)

- ① Microphone
- ② Night Vision Sensor
- ③ Camera Lens
- ④ LEDs
- ⑤ Speaker

- ⑥ Temperature Sensor
- ⑦ Power Input
- ⑧ Pair Button
- ⑨ Bracket

# GETTING STARTED

## 1. Charging & Powering Babyphone

- 1) Connect the monitor to a power source via the type-C cable and power adapter.
- 2) Unplug the unit when its power indicator turns off, indicating a full charge. Of course, if it stays plugged in, it will not affect the use, but it may affect the battery life.
- 3) Press the power button on the monitor to turn on the device. See green power indicator lighting.

## 2. Powering Camera

 
- 1) Connect the camera to a power source via the type-C cable and power adapter.



- Only use the power adapters included in the package.
- Do not place the camera and power cord within the reach of your baby.

## 3. Placing the Camera







For safety reasons and better vision in night vision mode, place the camera on a 0.75m table top and ensure the distance from the baby is at least 1.5m.

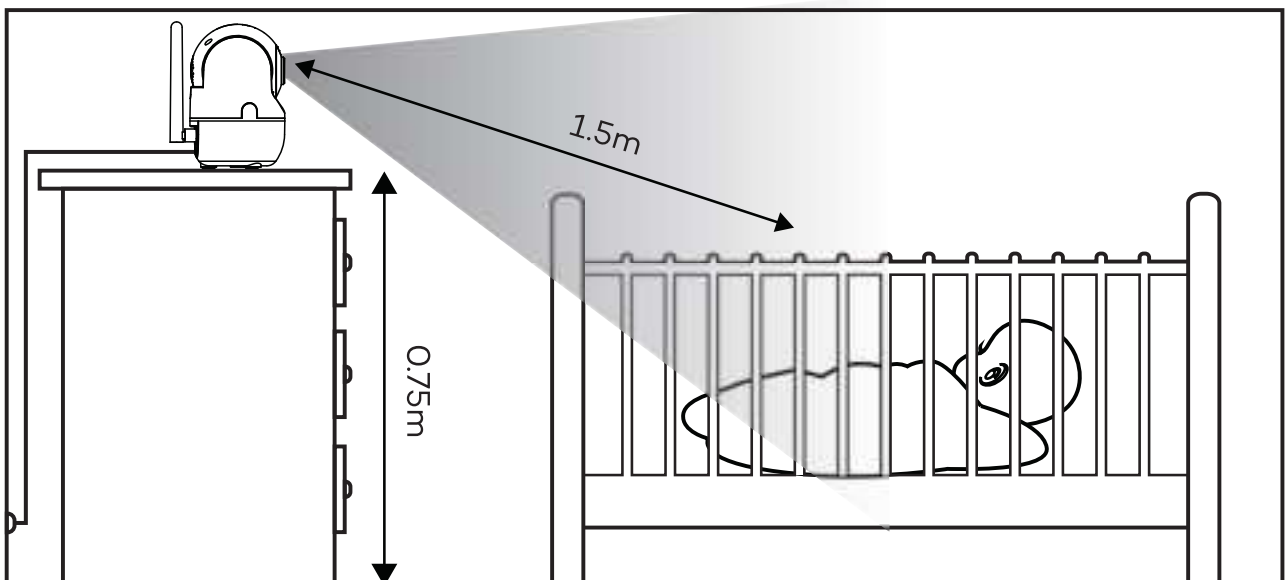

## 4. Placing the Camera

      **Note: The camera bracket is an optional accessory**



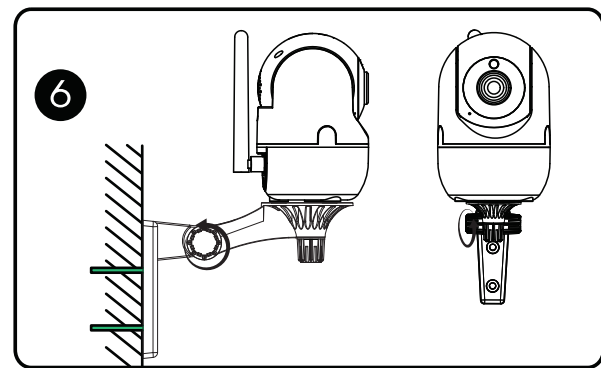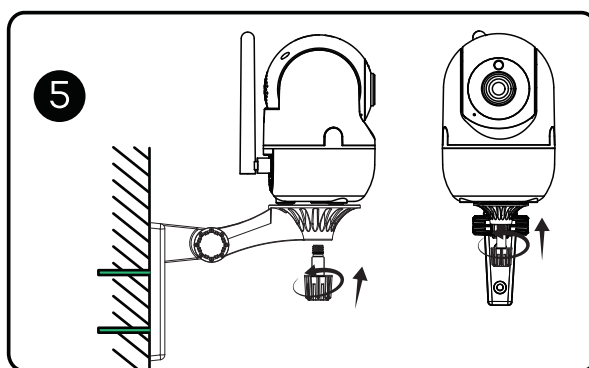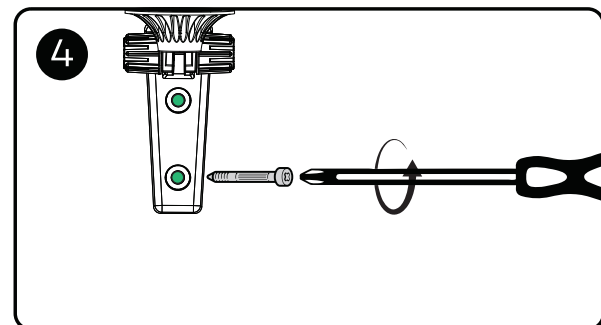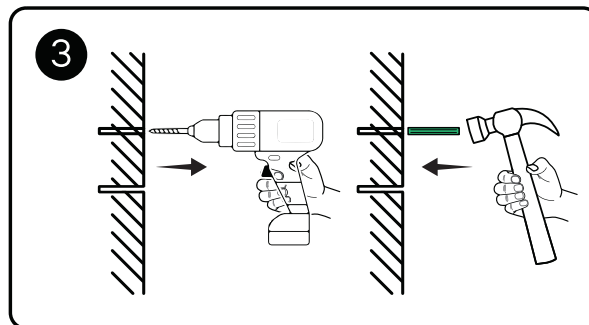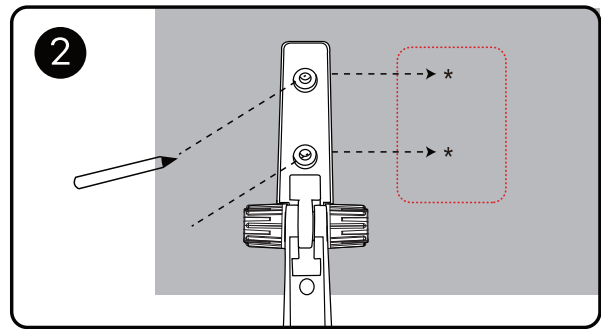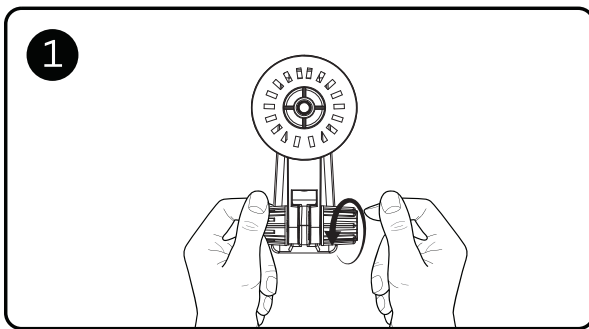







- 1) Rotate the knob in anticlockwise direction to adjust the wall mount bracket, then fasten the joint and secure the angle.
- 2) Mark the upper and lower holes with a pencil.
- 3) Drill holes in the wall (17/64 inch drill bit ) and insert wall anchors into holes with a hammer.
- 4) Fasten the wall mount bracket with screws.
- 5) Place the camera on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the camera.
- 6) You can maximize your camera unit's viewing angles by tilting the wall mount bracket. Tilt your camera up or down to adjust to your preferred angle.





• Don't release the camera until it is firmly mounted.

# FUNCTIONS & OPERATIONS



## Top Status Indications

	No Signal Connection
	Signal Strength
	Cycle Camera Enabled (rotete every 10 seconds)
	Camera
	Lullabies Enabled
<b>VOX</b>	Voice Activated Transmis
	Temperature Alarm Enabled
	Feeding Reminder Enabled
	Screen Mute
	Night Vision Mode
<b>°C / °F</b>	Current Room Temperature
	Battery Level

## Notification Icons

	Feeding reminder
	High / Low temperature alarm







- You can open Live-Video-Loop function through short presses on the  button until you see  on the status bar.
- When Live-Video-Loop function is on, the connected cameras will automatically switch every 10 seconds.

## 1. Volume Adjustment

### Explanation:

This function is used to adjust the speaker volume of the monitor.

Step 1:

1. Press  to enter menu page.
2. Choose  ->  button-> Left/ Right button to decrease/ increase the volume, and press  Button to save your settings.







## 2. Brightness Adjustment

### Explanation:

This function is used to adjust the screen brightness of the monitor.

Step 1:




1. Press  to enter menu page.
2. Choose  ->  button-> Left/ Right button to decrease/ increase the Brightness, and press  Button to save your settings.



### 3. Add Camera

This function is to adjust the monitor side system sound.


Step 1:

1. Press  to enter menu page.
2. Choose  ->  button.

Step 2:

1. Select through  ->  ->  button.

Step 3:

1. Press  PAIR button on the rear of the camera.
2. Then the monitor shows the camera is paired successfully. The monitor can connect up to 4 cameras at the same time.



### 4. Selecting and switching camera


#### Explanation:

This function requires more than two cameras to be turned on. Multiple cameras are powered on and within the monitor connection range.


 
Step 1:

1. Press  to enter menu page.
2. Choose  ->  ->  button.

Step 2:

1. Select the camera you want to delete and press  button.

Step 3:

1. If you need to cycle multiple camera views. Select  ->  button.




## 5. Delete a Camera

Step 1:

1. Press  to enter menu page.
2. Choose  ->  ->  button.

Step 2:

1. Select the camera you want to delete and press  button.

Step 3:

1. Select **YES** . The camera is deleted successfully.  
The monitor is paired with one camera by default, you should keep at least one camera connected.



## 6. VOX mode

### Explanation:

1. There are three options of sound detection, LOW(75dB), MEDIUM(65dB)and HIGH(60dB).LOW means the sound can be detected if it reached 75dB.and so on for MEDIUM and HIGH.
- 2.Setting“ off ”turns off the alarm sound in VOX mode.

Step 1:

1. Press  to enter menu page.
2. Choose **VOX** ->  button.

Step 2:

1. Select the option you want. Press  button.



- After setting the VOX wake-up level on this page, press the VOX button to quickly turn on/off the VOX function.
- A VOX alarm can be temporarily turned off by pressing any button on the monitor.






## 7. Alarm Clock

### Explanation:

This function is to remind you of feeding your baby. OFF means you turn off the function; 2 hours mean it reminds you every 2 hours and so on for the other options.

Step 1:

1. Press  to enter menu page.
2. Choose  ->  button.



Step 2:




1. Select the time you want. Select **OFF** to turn off the feeding reminder.

## 8. Lullabies

### Explanation:


This function is to comfort baby with soothing lullabies.

Step 1:

1. Press  to enter menu page.
2. Choose  ->  button.



Step 2:




1. Select your desired lullaby and press  to turn it on/off.  
Press left/right button to decrease or increase the lullaby sound. Select to play the lullaby on a loop.
2. After setting the lullaby playback track under this function page, open the lullaby button to quickly turn on / off the camera lullaby.

## 9. Temperature

### Explanation:




you can set the maximum/minimum temperature and turn on the temperature alert, so that the baby monitor beeps whenever the room temperature falls outside the desired temperature range. You can also choose to display the temperature in Fahrenheit (°F) or Celsius (°C) on your monitor.

Step 1:

1. Press  to enter menu page.
2. Choose  ->  ->  button.



Step 2:

Press  &  key to make settings, and press the  key to return and automatically save the settings.






- A temperature alarm can be temporarily turned off by pressing any button on the monitor.

## 10. Screen Sleep

### Explanation:




This function is to set the monitor screen to sleep without powering off the monitor.

Step 1:

1. Press  to enter menu page.
2. Choose  ->  ->  button.



Step 2:

Press  &  to select the desired time or turn off the rest screen function, and press the  key to return and automatically save the settings.



- The screen will automatically light up if there is a VOX or a temperature alert.
- When VOX is turned off, the screen will not automatically wake up and light up.
- When the sleep time is set to "OFF", the monitor will not be off the screen.

## 11. Alarm Volume

### Explanation:

This function is to adjust the monitor system sound.

Step 1:

1. Press to enter menu page.
2. Choose -> -> button.



Step 2:

1. Select the preferred alarm sound level. Press button.

## 12. Factory Settings

### Explanation:

System will be restored to default Settings.

 
Step 1:

1. Press to enter menu page.
2. Choose -> -> button.






Step 2:

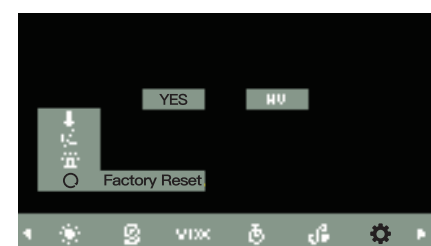1. Choose **YES** -> button to start restoring factory settings.



# TROUBLESHOOTING

Product not turning on?	<ul style="list-style-type: none"><li>· Check that the camera and monitor are turned on.</li><li>· Check the camera and make sure it is well plugged into the outlet.</li><li>· Check that the monitor has enough battery (when the battery level icon flashes red slowly on the display, it will automatically turn off in about 10 minutes).</li></ul>
Babyphone can't connect with the camera?	<ul style="list-style-type: none"><li>· Check whether the camera is near the monitor (recommended to keep within 1.5-2m while connecting).</li><li>· Check whether the monitor is of low battery. Charge it in time to restore good connection.</li><li>· Check whether the camera is well connected to power.</li><li>· Check whether there are any large metallic objects including doors, refrigerators, mirrors, etc., placed between the camera and monitor thus blocking the radio signals.</li><li>· Check whether there's any other 2.4GHz product used nearby like WiFi routers or microwave ovens, which may interfere the connection.</li><li>· If nothing above is involved, please retry to pair.</li></ul>

Nothing shown when viewing a camera?	<ul style="list-style-type: none"> <li>· Check all connections to the camera (power cable plugging and pairing).</li> <li>· Check whether the screen is in sleep mode. Press any button to awake it.</li> <li>· Check whether the camera is within range of the monitor.</li> <li>· Adjust the monitor antenna to vertical position for better signal transfer.</li> </ul>
No sound from the monitor?	<ul style="list-style-type: none"> <li>· Check the system to verify if the babyphone is set to mute.</li> </ul>
Black and white pictures?	<ul style="list-style-type: none"> <li>· Night vision LED may be ON. Please turn on room lights to force it out of the night vision mode.</li> </ul>
Choppy videos?	<ul style="list-style-type: none"> <li>· Check whether the camera is near the monitor and that there're no obstacles between them.</li> <li>· Adjust the monitor antenna to vertical position for better signal transfer.</li> </ul>
Too much noise?	<ul style="list-style-type: none"> <li>· Volume may be set too high. Press  -&gt;  -&gt;  Button to volume down.</li> <li>· The camera and monitor may be put too close; keep them at least 1.5m / 4.9ft apart.</li> </ul>

## WARRANTY & CUSTOMER SERVICE

12 months guarantee (contact information can be found on the monitor or on the cover of this user manual)

## **FCC Caution:for Baby Monitor**

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **FCC Caution: for camara**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



## WEEE COMPLIANCE

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

“  ”The symbol indicates DC voltage

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



