

Manual

Manual	01
Security information	02
Customer Service	03
First steps	04
First usage	04
Recover to factory default	04
Firmware	04
Homescreen	05
Software	06
WiFi configuration	06
adding your Apps	06
Webbrowser	06
Gallery	07
Music playback	07
more Apps	07

Security information

Thank you for purchasing our product. To make it easier and more comfortable to use this product, please consider the instructions in this manual.

1. The Display works also as a Touchscreen. The surface is sensitive to scratches. Avoid direct contact with edged items. Use your finger or a special pen to operate.
2. Keep your Tablet on a flat and stable surface.
3. Do not place any items on its surface and beware of dropping the Tablet.
4. Do not put any items into any holes.
5. Disconnect AC Power before cleaning. Use a soft towel and no cleaning supplies.
6. Do not open your Tablet. Only authorized personnel may do this.
7. Beware of strong electrical and magnetic fields.
8. Do not cover a running Tablet with things which will disturb air circulation.
9. Working Temperature: This Tablet can be used in Environment which ensure an environmental Temperature from 5 °C to 40 °C.
10. Prepare out Tablet before transport, switch it off and protect it by using a optional pocket.
11. Do not charge your Tablet unwatched for a long time.
12. Use only original AC Adapter for charging.
13. This Tablet is electrical waste - do not dispose to your normal waste.



Service

Customer Service

For your Questions and Warranty issues, please contact us:

Workingdays

Monday to Tuesday	09:00 a.m. till 5:00 p.m.
Friday	09:00 a.m. till 3:00 p.m.

Web:	www.suitepad.de
eMail:	service@suitepad.de

Reference of Logos, Trademark and Brands

This Product is delivered with several parts of third parties.

Brand and product names mentioned are trademarks of their respective companies.



is a Trademark of SuitePad AG.

All specifications are subject to change without notice.
All pictures are samples and only for review.

First steps

First usage

- To start your Tablet, please hold the „Power Button“ for more than 3s.
- To switch the Tablet off, hold „Power Button“ again and confirm the question by clicking „switch off“.
- For a short interruption just click the „Power Button“ for a second. This will switch on or off the Display.
- After booting, you will find your first screen „Lock-Screen. To activate - open the lock by switching it with your finger to the right.
- You can use a Headset for a better, private sound enjoyment.
- This pad dispose a mini USB connector to be used with your Personal PC. By connecting it to your PC you may use this like a storage device.
- There is an on board installation for maintainly used drivers included. You will not need to install any drivers in this mode.
- Attention should be paid to the usage of mini USB. It's not possible to connect and work with external Devices like Printer, Photo-Camera, etc.
- The microSD Card slot may contain and work with Storage-Cards up to 32GB. This Media should be formatted with FAT32.
- To recharge the battery, use only original AC Adapter. The Charging time at switched off Tablet will take about 1,5h.

Recover to factory default

This Tablet is already installed with its own Firmware. To reset your tablet and delete all personal data use the settings Menu.

After resetting this Tablet, it will now start as on factory default.

Firmware / Source Code

You will find the latest Firmware and Source Code on our homepage:

<http://www.suitepad.de/>

There will also be a PDF with further information - how to handle an update.

There is no concede for any Upgrades.

Homescreen

The Homescreen is your central position of working. You may install more Apps and Widgets on it - as you demand.

Usual installed Apps will be found at the App Menu. On your right border you will find the right Symbol (circle with 4 squares). Your favorite Apps may be linked to your homescreen by holding its start button for 3s. Tanke the floating icon on your favorite position in your homescreen.

The same procedure may move an App-Link to an other homescreen.

While the icon is floating, a trash symbol will be found at top of the screen. If you take the icon on the trash, just the link will be delete - not the application.

To remove an App from your device, the function is comparable. Enter the App-Menu and let the App float to „uninstall“ Trash Symbol. You will be requested one time to confirm this procedure.

WiFi configuration

it's easy to setup WiFi. First, you need to switch WiFi on in the WiFi Settings.

After initialization of the Module, the Tablet shows you possible (non hidden) SSID Stations.

Take access to your preferred WiFi Accesspoint by choosing it. Enter - if required - the correct WiFi Password.

In usual Environments, the Accesspoint will support your Tablet with all information like IP, DNS etc...

adding your Apps

The Android™ Play-Market supports you with all possible Applications. All you need, is a free Google Account to login. There were some Apps for Free, but also paid apps. A purchased App will be stored in your personal Google Account. If you will wipe all data anytime - paid apps may be reinstalled as well. They don't have to be repaid. A one time paid app will be accessible to all your Android Devices registered to your Google Account.

Please be aware, that we can't support services to any App. On questions request the developer of an app. You also may feel free to use other App-Stores.

Webbrowser

This PAD is preinstalled with a webbrowser symbolized by a small globe. Trigger this globe to start web browsing. To enter the URL type into the textfield on top. A virtual Keyboard will push up. In case, you need to access special chars like „german umlaut“, hold this char for 2-3s. You may now see all special chars according to this standard char. Select it by swiping your finger to the left or right. This Pad comes with a 5-point Multitouchpanel. On your demand you will be able to double-clicking to zoom the screen. Also by using two fingers-gestic.

Gallery

The preinstalled Gallery takes all Pictures and Videos into an overview. You may select your Pictures from all media like internal memory, microSD Card or USB-Device. Wipe the picture by your finger to the left or right for a manual Slideshow or start an automaticly slideshow in the menu. With two fingers- gestic its also possible to zoom in and out. Manage your Device by using a Filemanager.

Music playback

Use a Filemanager to upload your MP3 to your PAD or use Google Music as your Catalog for purchasing Tracks. We recommend you, to plug in the usb cable and connect your Personal Computer to access your home music library.

more Apps

The App-Store support a lot of applikations for Android devices. The presins- talled Main-Store is „Google Play Market“ but you a able to choose other third partie App-Stores.

We apologize to support no further informations to applications. The possible kind of Apps will be as much as we can't explain. But we will take care to support our customers - in case, contact our Service hotline.

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.