

User Guide

MK-BR01



Soundbar Home Theater System

CONTENTS

 
English	1/8
Deutsch	9/16
Français	17/24
Español	25/32
Italiano	33/40
日本語	41/48



MK-BR01 Soundbar Home Theater System
User Manual

1

What's in the box



Main Unit



Remote Control
X1



3.5MM-RCA
X1



Optical
X1



X1



Dowel
X2



Screw
X2

 


Location Card
X1


2

Input Interface

1. Plug the power cord to a wall outlet (100-240V ~50/60Hz). Then turn the main power switch on, the status indicator will be red.
2. Set the main power ON/OFF switch to OFF position if you want to switch the unit off completely.

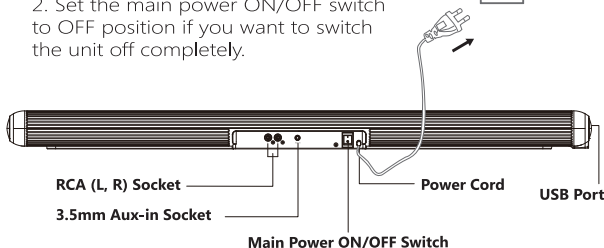


3 Remote Control

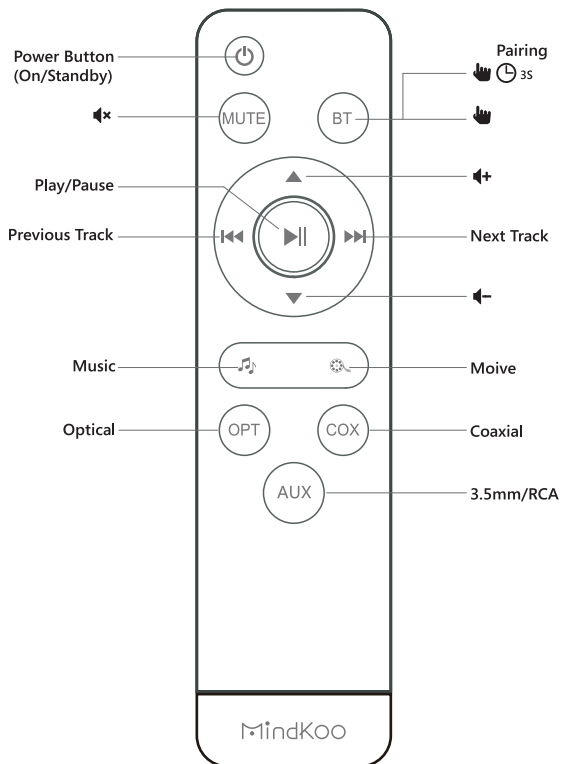 

4 Basic Operations

 1

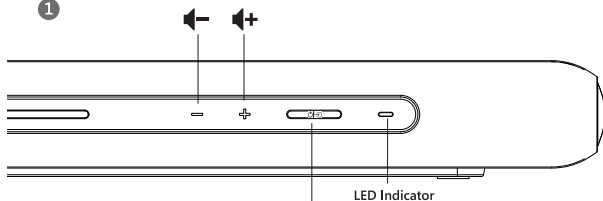


LED Indicator



LED Color	Status
Red	Standby mode
Blue	Bluetooth mode
Green	AUX/RCA input mode
Cyan	Optical
Purple	Coaxial
Orange	Mute

 
2 BLUETOOTH CONNECTION:

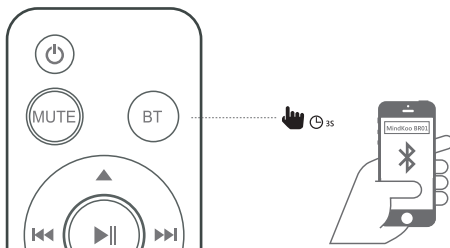


Notes:

1. Bluetooth Name: MindKoo BR01;
2. If first time use to the speaker, it will automatically enter pairing mode when turn on the speaker.

 3 Wired Connections

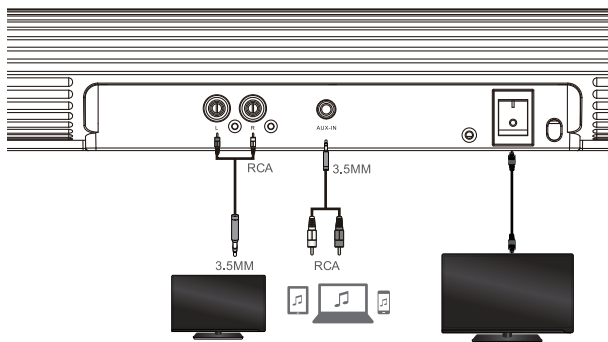

4 USB Charging

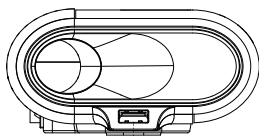 

USB Out Charging 5V,1A

- 1** Use the attached Location Card to drill 2 parallel holes($\Phi 6\text{mm}$ each)in the wall, please refer picture below:



 
- 2** Firmly fix 1 dowel into each hole in the wall if necessary.

Dowel




- ✓ Solid wall (i.e., Solid brick, Solid concrete, solid wood)
- ✗ Drywall, Plaster wall, Lath wall, etc.

- 3** Put the speaker onto the screws in the wall.

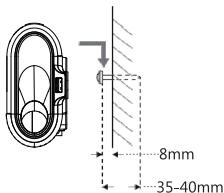

- 4** Hold the ►|| button on the remote control(no battery included) for 10S until the indicator flashes, to switch the soundbar from Table-Placing Mode to Wall-Mounting mode, so that you can have better sound effect.

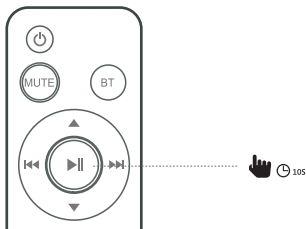 



Trouble Shooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected.
- Ensure that there is power at the AC outlet.
- Ensure that the power ON/OFF switch on the rear of the unit is set to ON position.
- Press standby button to turn the unit on.

Remote control does not work

- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn the unit on again.

Can't find the Bluetooth name of this unit on Bluetooth device

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.



General Specifications:

Parameters	Index
Power Input	100-240V~50/60Hz
Power Consumption	46 W
Standby Power Consumption	<0.5W
Output Power	20W x 2
Speaker Driver	4 x (2" 4Ohm 10W)
Frequency Response	40Hz-20KHz
Power of Remote Control	2 x AAA Battery (not included)
Bluetooth Version	V4.2
Unit Size	840x110x55mm
Range	up to 10m

IMPORTANT SAFETY INSTRUCTIONS



Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

48

MANUFACTURER

Rujun Building, Floor 4, No.105, the Center Road,
Bantian Street,Longgang Zone, Shenzhen, China

CONTACT US:

US:support.us@mindkoo.com

UK:support.uk@mindkoo.com

CA:support.ca@mindkoo.com

DE:support.de@mindkoo.com

FR: support.fr@mindkoo.com

ES: support.es@mindkoo.com

IT: support.it@mindkoo.com

JP: support.jp@mindkoo.com



FCC ID:2AKL2-LAYY1
Made in China