

INSTALLATION *guide-Telis 1*

1. Characteristics:

- Power: 3V lithium battery, CR 2430
- Operating Temperature: +5°C to +40°C
- Range: Minimum 90'
- Battery Life: 3 years assuming 4 operations per day

2. Programming:

- While the RTS motor is in programming mode, press the PROG button located on the back of the transmitter.
- A series of three beeps will be heard from the RTS motor indicating the RTS motor has been successfully programmed.
- Press the PROG button on the transmitter to exit the programming mode.

3. Operation:

- Press the UP, STOP, or DOWN button for desired operation.
- During transmission, the LED on the front of the transmitter will illuminate. If it doesn't replace the battery.