
ET-0904 Hello Kitty Birthday Confetti_IM R2

17APR24

Size: 350 x 110 mm

 
雙面印刷

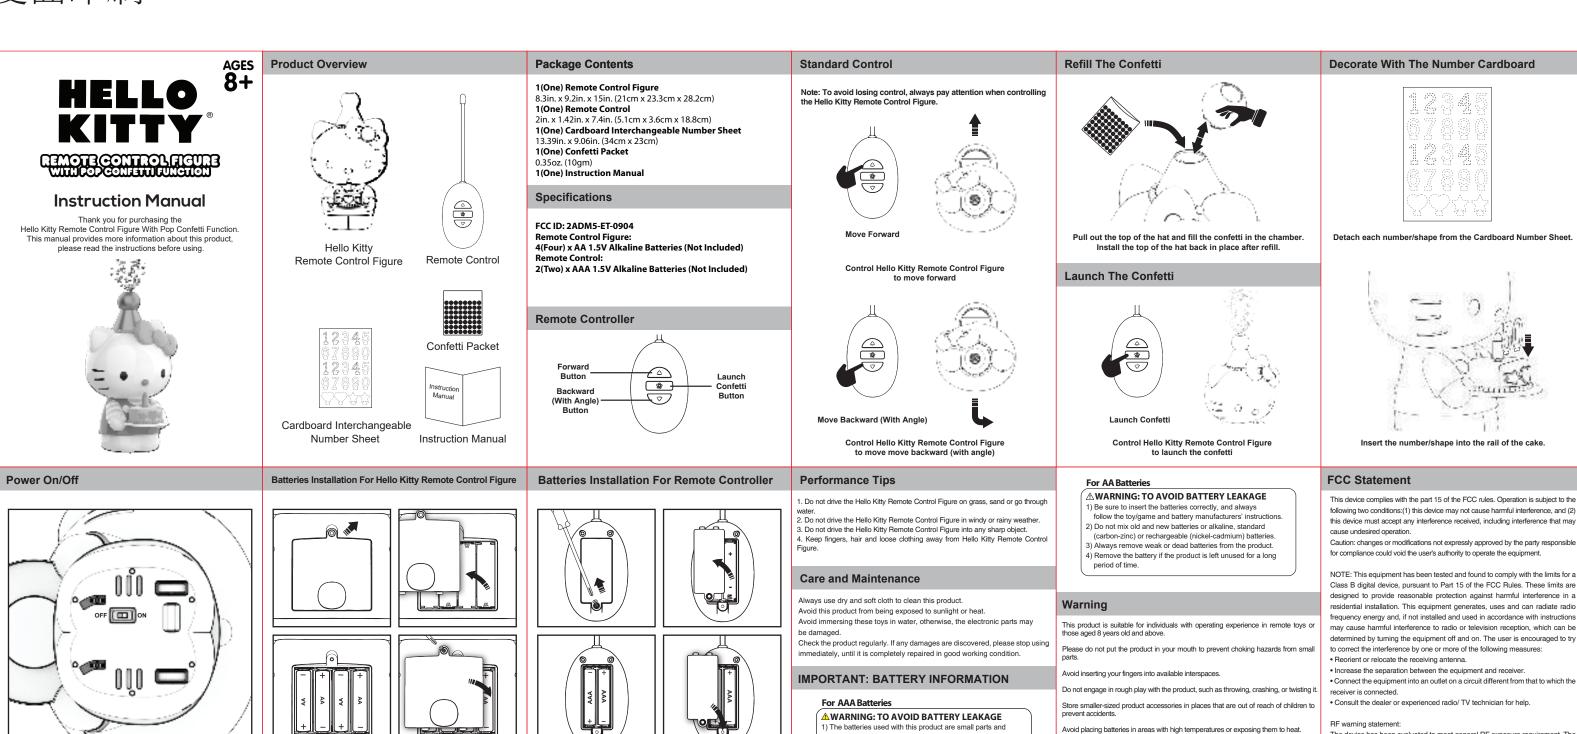

Power On/Off


Slide the ON/OFF Switch to ON to turn on the Slide the ON/OFF Switch to ON to turn of the Hello Kitty Remote Control Figure.

Slide the ON/OFF Switch to OFF to turn off the Hello Kitty Remote Control Figure.



on the battery box cover to open the cover. Insert 4(Four) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw

 When inserting the batteries, you must insert according to the correct polarity the Hello Kitty Remote Control Figure won't function if batteries are reversed.



battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.

When inserting the batteries, you must insert according to the correct polarity. the Remote Controller won't function if batteries are reversed.

- The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
- 2) Always purchase the correct size and grade of battery most suitable for intended use.
- 3) Do not mix old and new batteries, alkaline, standard
- (Carbon Zinc) or rechargeable (Nickel-cadmium) batteries 1) Clean the battery contacts and those of the device prior to battery installation.
- 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).
- Always remove batteries if consumed or if product is to be left unused for a long time.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

Class B digital device, pursuant to Part 15 of the FCC Bules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2ADM5-ET-0904



When young children are operating the product, it is essential to ensure that adults are

When the product is not in use, please switch off the power supply and remove the

Please note that we cannot be held responsible for any injuries, property damage, loss resulting from incorrect operation during the assembly or use of this product.

guiding them and maintaining visual control of the toy for convenient control.

▲WARNING: CHOKING HAZARD

Distributed by 1616 Holdings, Inc. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. 701 Market Street, Suite 200 Philadelphia, PA 19106



Made In Shantou, China

Keep All Relevant Information for Future Reference

Item# ET-0904