RGBLED Controller

Instructions

213 Dynamic Modes

256 Static Colors

Very Smooth Effects

SpeedAdjustable

Brightness Adjustable


Card Type RF Remote

Ultra Slim Design

Dynamic Demo Mode

Easy remote pairing

Direct Color Select

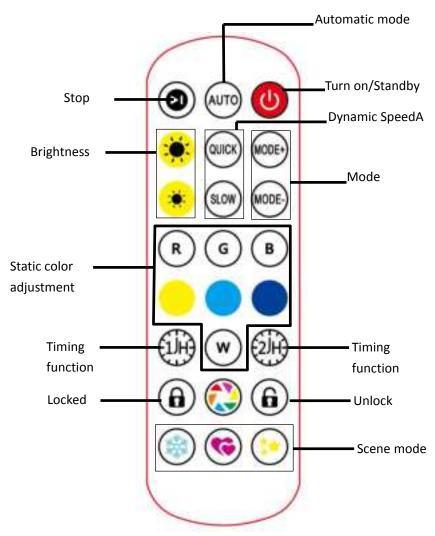

Operation manual of remote controller:

1. Using Remote Controller;

Please pull out the battery insulate tape before using. The 2.4G remote signal can pass through

barrier, so it's not, necessary to aim at the main unit when operate.

2. Free Remote Pairing Mode;

In some specific cases, the main unit may need to be paired to any remote controllers. Please do following steps for free remote pairing mode: Plug off the power of main unit and plug in after seconds.

3. Switch Output Color Sequence;

The controller's default output signal sequence 1sCommon-Green-Red-Blue. If the LED application is in different cable sequence, the direct color keys will not match the LED color. In this case, user can adjust the output signal sequence.

(Press on or enter the standby state
(3)	Pause
AITO	Automatic mode (21 default dynamic mode cycles)
	Speed / sensitivity increases / decreases
66	Mode switching
☀ 💌	Brightness increases / decreases
R G B - 0 0 0	Switch the light color to: red/green/blue/yellow/cyan/purple/white
(1) (3)	Turn off the lights regularly for 1 hour/2 hour
(A)	Locked/Unlock
	According to the program set color flow display
(a) (c)	Switch respectively is: the snowflake/romantic/starry sky model

Note:Adjust the brightness, when the speed is large, the light flashes to indicate that it has been adjusted to the maximum or minimum state.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the device and receiver.
- --Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment