USER MANUAL

PRODUCT OVERVIEW

This product is a fast thrusting vibrating thumping dildo developed for adult women and it can be controlled by remote. Made from liquid silicone, it is soft and close to human skin feel. With intelligent heating function, you can feel the real warmth. Put the ball close to clitoris and change different thumping modes as you like. Fast thrusting combined with tip vibration can give you deep vaginal stimulation. It can help you release your lustful desires and achieve orgasm easily.



USAGE



Before use, please open the remote back cap and remove the tab as shown above. Then put the button cell battery in place and close the cap. Now it's ready to use.









Usage 1: Dildo Only

- Press and hold Button for 1.5 seconds to turn on, activating standby mode.
 Press Button once to cycle through 10 vibrating and thumping modes.
- 3. Press Button once to cycle through 3 thrusting speeds.
- Press and hold for 1.5 seconds can turn the mode off.
- 4. Press and hold (i) Button for 1.5 seconds to turn off.

Usage 2: Dildo with Remote

- 1. Press and hold (1) Button on dildo for 1.5 seconds to turn on, activating
- 2. Press Button on remote once to cycle through 10 vibrating and thumping 3. Press 1 Button on remote once to cycle through 3 thrusting speeds.
- 4. Press (i) Button on remote once can get back to standby mode.
- 5. Press and hold (b) Button on dildo for 1.5 seconds to turn off.

- 1. When standby mode is on, quickly press the (b) Button on dildo twice to turn on the heating mode. Red light will flash while heating.
- 2. Quickly press the Button on dildo twice to turn off the heating mode and the red light will be off.
- * Heating mode will be automatically off after 6 minutes.

CHARGING

Dildo Charging

- 1. Before charging, please completely dry the charging port and charging pin.
- Plug charging pin into charging port and connect USB to power source.
 Light will flash while charging. Once fully charged, it will turn to solid light.
- Please don't use the toy when charging.
- 4. Please don't charge over 24 hours.
 5. Use the original charger provided for charging the toy.



Replacing Remote Battery

The remote requires one CR2032 3V button cell battery. Open the back cap, change the battery, and then close the cap.



SPECIFICATIONS

Material	Liquid silicone+ABS
Battery	Dildo: Built-in rechargeable polymer lithium battery Remote: Requires one CR2032 3V button cell battery
Charging Voltage	5V
Charging Time	Approx. 2.5 hours
Run Time	Approx. 1 hour after fully charged
Working Mode	3 thrusting speeds, 10 vibrating and thumping modes

CLEANING AND STORAGE

- 1. Always clean the toy before and after each use.
- Use body wash, mild soap or cleaner specialized for cleaning sex toys to clean the toy surface. Then rinse with warm water. Avoid water and cleaner getting into control panel.
- 3. Do not submerge the toy in water when cleaning.
 4. After cleaning, please pat dry with dry and soft towel or allow to air dry.
- 5. When not in use, please put the toy into the packaging box and keep it in dry and dust-free place.

SAFETY

- 1. For personal health, do not share the toy with others.
- 2. Always use water-based lubricant with the toy. Do not use silicone-based $\mbox{\bf I}\mbox{\bf ubricant},$ or use massaging oil, hand cream or body lotion as $\mbox{\bf I}\mbox{\bf ubricant}.$
- 3. If you feel any discomfort, stop using immediately.
- 4. If any part of the toy is damaged, stop using immediately. Do not attempt to take apart or disassemble the toy.
- 5. Do not charge if the USB cord appears damaged.
- 6. Keep out of reach of children and pets.

LEGAL DISCLAIMER

This product is sold as a novelty only. It is not intended for medical applications or any use that has an adverse affect on any function of the body. In general, the toy is suitable for healthy adult women to use. If you have doubts about your physical conditions, please consult your doctor or other health professionals first. Users should clearly know the right way to use and discreetly use it based on their own adaptability. Users use this product at their own risk. Our company assumes no responsibility for any adverse affect caused by this product.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.