

INSTALLATION *guide*




inteo TELIS SOLIRIS RTS

The **TELIS SOLIRIS RTS** is a SINGLE CHANNEL hand-held transmitter compatible with the **SOLIRIS receiver RTS**. Commands are transmitted by radio (frequency 433.42 MHz).

1 Characteristics :

- ☐ Power: 3V lithium battery , CR 2430 type
- ☐ Protection index: IP 30
- ☐ Operating temperature: +5°C to +40°C
- ☐ Class III product
- ☐ Normally polluted environment

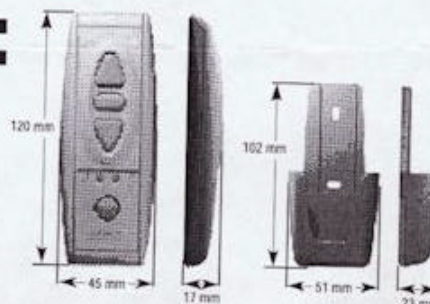

2 Programming :

A INITIAL INSTALLATION

Memorise a TELIS SOLIRIS RTS in the memory of a SOLIRIS receiver RTS

- Press the PROG button of the **SOLIRIS receiver RTS** until its LED lights. This indicates that the receiver is ready for one minute to memorise the address of the transmitter. After this time limit, the LED goes out.
- Press the programming button on the backside of the **TELIS SOLIRIS RTS** with a ball-point pen until the LED of the **SOLIRIS receiver RTS** blinks.
- ⇒ The address of the transmitter is memorized by the RTS receiver, which automatically quits its programming mode.



B EXISTING INSTALLATION

Add another control (TELIS 1/4 RTS; CENTRALIS RTS) in the memory of the SOLIRIS receiver RTS

TWO POSSIBILITIES

- 1 Repeat the same procedure as described in chapter 2A.
- 2 • Press more than two seconds on the programming button of a **TELIS SOLIRIS RTS** already memorized in the **SOLIRIS receiver RTS** in order to "wake up" the receiver.
 - ⇒ the both LEDs of the **TELIS SOLIRIS RTS** light on, indicating that the **SOLIRIS receiver RTS** is in its programming mode for one minute.
 - Press briefly the programming button of the new control you wish to memorise.
 - ⇒ The address of the control is memorised in the **SOLIRIS receiver RTS** which automatically quit its programming mode.

SOMFY

C DELETE A TRANSMITTER FROM THE MEMORY OF A RECEIVER

To delete a transmitter from a RTS receiver, carry out the same procedure as described in **chapter 2A** :
Set the RTS receiver in its programming mode, then press the prog button of the transmitter (the transmitter will be erased from the memory of the receiver).

3 Using :

A UP / DOWN / STOP COMMANDS

By pressing briefly the  or  push buttons, the awning is activated in the corresponding direction.
By pressing briefly the  push button, the awning stops.

B WIND/SUN CONFIGURATION

With the TELIS SOLIRIS RTS, it is possible to configure the functioning of the SOLIRIS receiver RTS.

- (wind) : the receiver reacts in accordance with the wind information and with the manual UP/DOWN/STOP commands.
- (wind and sun) : the receiver reacts in accordance with the wind, the sun and with the manual UP/DOWN/STOP commands.


VISUALISE THE CONFIGURATION MODE :

- Press briefly on the select button of the TELIS SOLIRIS RTS to visualise the present configuration mode.
- The corresponding LED lights on.



CHANGE THE CONFIGURATION :

- Press continuously the select button of the TELIS SOLIRIS RTS (approx. 2sec) in order to change the configuration mode of the SOLIRIS receiver RTS (wind only / wind and sun).
- The LED corresponding to the present mode lights on during approximately 2 sec, then it toggles to the other LED indicating that the TELIS SOLIRIS RTS has send a radio control to change the configuration of the SOLIRIS receiver RTS.

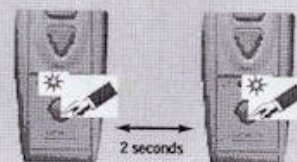

 **In order not to have a TELIS SOLIRIS RTS visualising a wrong information, do not memorise two TELIS SOLIRIS RTS in the same SOLIRIS receiver RTS.**

Battery life


The transmitters are fitted with a 3V battery (type 2430) which provides about 3 years operation assuming 4 operations per day. When the battery becomes discharged, the control LED no longer lights up when a command is sent and the command is not carried out.

How to change the battery

- Remove the back cover of the transmitter with a screwdriver.
- Slide the battery out of its house by pushing it with a screwdriver.
- Insert the new battery.



Do not throw the empty battery anywhere
(put it in a special expected place).

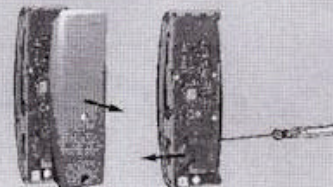

SOMFY

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment