# User manual (V5H(2G-60))

### Content

PDF

1 LED instruction.	2
2 Key function instruction	2
3 User experience instruction.	3
4.Usage scenarios	4

1 LED instruction.			
NO	Test item	Instruction	Result
1	LED in Idle Mode	Press start button for 1 second when the power of the logger is normal	LED toggle red/blue twice
2		Press start button for 1 second when the power of the logger is low	No LED light under any condition
3		Press and hold Flight button for 5 seconds	No LED light and logger can not enter Flight Mode
4		Press and hold start button for 5 seconds then logger from Idle mode to Recording mode	The status LED flash Blue every 10 seconds for 30 minutes to indicate it has started properly After 30 minutes this flash sequence will stop

NO	Test item	Instruction	Result
5	LED	Press start button for 1 second when the power of the logger is normal	Blue flash indicates logger is recording
6	in Recording Mode	Press start button for 1 second when the power of the logger is low	No flash means low battery (no LED) Battery is dead
7		press Flight button for 1 second	No Flash means logger is not enable Flight Mode

NO	Test item	Instruction	Result
		Press and hold Flight	Flight Mode LED blink
8		button for 5 seconds then	Red LED 5 times to
0		logger from Recording	indicate logger has
	LED	Mode to Flight Mode	entered Flight Mode
	in	Singlepress Flight button	Red LED light indicates it
9	Flight	for 1 second and a Red	e e
	Mode	LED light indicates	is in flight mode
10		Press and hold flight	Red LED go solid for 5
		mode button for 5	seconds and exit Flight
		seconds	Mode

## 2 Key function instruction

NO	Test item	Instruction	Result	
----	-----------	-------------	--------	--

1	Start	Press and hold start button for 5 seconds	Logger data upload to platform, read interval is	
		enable logger to record	10mins and report interval	
		data	is 60mins	

NO	Test item	Instruction	Result
2	Flight Mode	In Recording Mode, Press and hold Flight button for 5 seconds enable logger to Flight Mode	Logger continue to record data but will stop uploading data to platform until it exit Flight Mode
3		press and hold Flight button for 5 seconds exit Flight Mode after logger in Flight Mode for 12 hours	platform and device data are not lost

NO	Test item	Instruction	Result
4	Stop	In recording mode, connect usb cable to logger	logger stop then user can view PDF or export PDF to PC
5		In Flight Mode, Connect usb cable to logger	logger will stop then user can view PDF or export PDF to PC

### 3 User experience instruction.

NO	Test item	Instruction	Result
1	Capacity display	Check whether the Capacity display match with real battery capacity.	The Capacity display match with real battery capacity.
2	Reporting stable	Check the Reporting performance in different environment.	Reporting normally in different environment.
3	PDF function	Stop logger then export PDF	PDF content is displayed correctly and data is not lost
4	Power consumption	Enble logger then set the report interval to 20min	Meet company quality standard

#### 4. Usage scenarios

Put the device in the container with goods together.

#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.