


eco terra
general mobile radio service

- 15 GMRS / 7 FRS Channels
- Long Battery Life
- Up to 5-mile Range*
- Channel Scan
- Channel Monitor
- Battery Strength Meter
- Call Button
- Roger Beep
- Keytone on/off

GMRS 2-way radios

*Range may vary depending on environmental and/or topographical conditions.

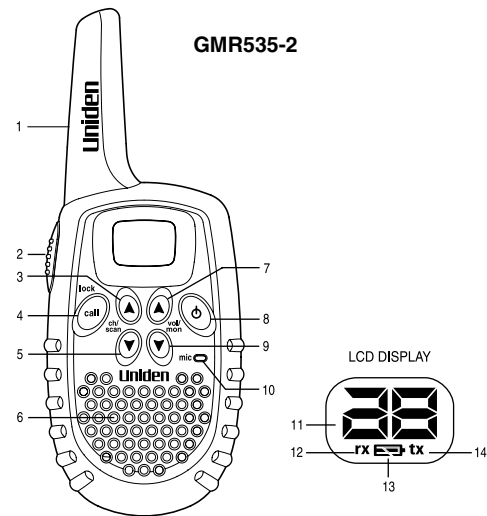

- 1 Antenna
2 PTT (Push-To-Talk) Button
3 Channel/Scan up Key
4 Call/Lock Key
5 Channel/Scan down Key
6 Speaker
7 Volume up/Monitor Key
8 Power On/Off Key
9 Volume down/Monitor Key
10 Microphone
11 Channel Indicator
12 Receive Indicator
13 Battery Level Indicator
14 Transmit Indicator

GMR535-2

Congratulations on your purchase of the Uniden GMR535-2 (General Mobile Radio Service) radio. This lightweight, palm-sized, radio is a state-of-the-art device, equipped with many valuable features. Use it at sporting events, to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication.

PACKAGE CONTENTS

Your package contains the 2 GMR535 radios, this reference guide and 2 belt clips. You will need to purchase 6 AAA alkaline batteries in order to operate these units.

FCC GMRS LICENSE

The GMR535-2 radio operates on the General Mobile Radio Service (GMRS) frequencies which require a Federal Communications Commission license to operate. For licensing information and application forms, visit the FCC on-line at: www.fcc.gov/wtb/uls or call the FCC hotline at 1-800-418-3676. If you have any questions you can contact the FCC direct at 1-888-225-5322.

INSTALL THE OPTIONAL BATTERIES

Your GMR535-2 radio uses 3 AAA alkaline batteries (not included) for power. We recommend using high quality alkaline batteries.

To install the batteries:

- 1) Make sure your radio is OFF.
- 2) Remove the battery compartment door by pressing on and sliding the compartment door, and remove the cover.
- 3) Install 3 AAA Alkaline batteries (not included) into the battery compartment. Be certain to follow the + and - symbols in the compartment. Installing the batteries incorrectly will prevent the unit from operating.
- 4) Replace the battery compartment door by sliding the door into place.

USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the radio.

Turning the Radio On and Adjusting the Volume

- 1) Press and hold the **PTT** key to turn the radio ON.
- 2) To change the volume level press the **vol/mon** ▲ or ▼ key to increase or decrease the volume level.
- 3) Press and hold the **PTT** key to turn the radio OFF.

Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the keys (except for the **PTT** button and **call/lock** key) is pressed. The sound of the Key Beep will increase or decrease depending on the volume level setting.

To turn OFF this beep:

Press and hold the **call/lock** key while turning ON the radio.

To turn ON this beep:

Turn the radio OFF and ON again without pressing the **call/lock** key.

Choosing a Channel

Your GMR535-2 radio has 22 channels you can use to talk to others. In order to speak to someone, each of you must be set to the same channel.

To choose a channel:

Press the **ch/scan** ▲ or ▼ key to increase or decrease the channel number displayed.

Channel Scan Feature

Your GMR535-2 radio has a channel scan feature that allows you to easily scan all 22 channels. When an active channel is detected, the unit pauses on that channel until the channel is clear. Then after a 2 second delay, the radio continues scanning. Pressing **PTT** button while the scan is paused on a channel will allow you to transmit on that channel.

To turn ON channel scan:

Press and hold either the **ch/scan** ▲ or ▼ key for 3 seconds. The channel number on the display will rapidly cycle through the channels.

To turn OFF channel scanning:

Press either the **ch/scan** ▲ or ▼ key.

Note: If you press either the **ch/scan** ▲ or ▼ key while the unit is pausing on a channel, scanning will resume.

Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold the **PTT** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon is displayed. To avoid cutting off the first part of your transmission, pause slightly after pressing the **PTT** button before you start talking.
- 2) When you are finished speaking, release the **PTT** button. You can now receive incoming calls. While receiving, the **rx** icon is displayed.

Transmitting a Call Alert Tone

Your GMR535-2 radio is equipped with a call tone that will be transmitted when the **call/lock** key is pressed.

To transmit the call tone, tap the **call/lock** key. The tone will be transmitted.

Auto Squelch Feature

The GMR535-2 is equipped with an automatic squelch system which shuts off weak transmissions and unwanted noise due to terrain conditions or if you have reached your range limit.

Monitor Mode Feature

Your GMR535-2 radio allows you to listen for weak signals on the current channel at the press of a key.

To turn ON monitor mode:

Press and hold the **vol/mon** ▲ or ▼ key. The **rx** icon will blink.

To turn OFF monitor mode:

Press the **vol/mon** ▲ or ▼ key. The **rx** icon will stop blinking and disappears.

Automatic Power Save Feature

Your GMR535-2 has a unique circuit designed to dramatically extend the life of the batteries. If there is neither a transmission nor an incoming call within 2 seconds, your radio switches to the Power Save mode. The radio is still able to receive transmissions in this mode.

KEYLOCK ON/OFF

Press and hold the **call/lock** key until the "L" appears. After 1 second, the LCD will return to the channel display.

To exit Keylock on mode, press and hold **call/lock** again.

Note: While in keylock on mode, it will still receive transmissions.

ROGER BEEP

Roger Beep is a BEEP that is sent automatically at the end of transmissions.

Roger Beep can be heard through the speaker when both Roger beep and Key Beep are set to ON. When Roger beep is set to ON and Key Beep OFF, Roger Beep will not be heard from the speaker but it will be transmitted to your party. When Roger Beep is set to OFF, Roger Beep neither be heard nor transmitted.

To turn OFF Roger Beep:

Press and hold the **ch/scan** ▲ key while turning ON the radio.

To turn ON Roger Beep:

Turn the radio OFF and ON again without pressing **ch/scan** ▲ key.

SPECIFICATIONS

Channels	15 GMRS / 7 FRS
Operating Frequency	UHF 462.5500-467.7125 MHz
Power Source	3 AAA Alkaline Batteries (not included)
Battery Life	20 Hours typical (5/5/90 duty cycle)

Frequency Chart

Ch.	Freq.	Ch.	Freq.
1	462.5625	12	467.6625
2	462.5875	13	467.6875
3	462.6125	14	467.7125
4	462.6375	15	462.5500
5	462.6625	16	462.5750
6	462.6875	17	462.6000
7	462.7125	18	462.6250
8	467.5625	19	462.6500
9	467.5875	20	462.6750
10	467.6125	21	462.7000
11	467.6375	22	462.7250

Please do not send products or other correspondence to this address.

039 Q

Uniden®

PRODUCT REGISTRATION DEPARTMENT
PO BOX 44486
DENVER CO 80201-4486
USA

Uniden®

 
PRODUCT REGISTRATION CARD

Complete the attached registration card and return today to receive these 3 important benefits:

- **CONFIRM YOUR WARRANTY:**
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- **PROTECT YOUR PRODUCT:**
We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- **HELP US DEVELOP NEW PRODUCTS:**
We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

THANK YOU
FOR PURCHASING A UNIDEN PRODUCT
CHECK OUT THE
LATEST ACCESSORIES
www.uniden.com



039 Q **Uniden®**

039 Q

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- (Examples: 01, 02, etc.) **Children** (18 and younger) **Adults**

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

1.	♣ Astrology	21.	♣ Gourmet food/cooking
2.	♣ Auto racing	22.	♣ Grandchildren
3.	♣ Automotive work	23.	♣ Home decorating
4.	♣ Books	24.	♣ Hunting/shooting
5.	♣ Camping/hiking	25.	♣ Investing
6.	♣ Casino gambling	26.	♣ Lottery/sweepstakes
7.	♣ Cigars	27.	♣ Pets-cats
8.	♣ Collecting	28.	♣ Pets-dogs
9.	♣ Computers/Internet	29.	♣ Pets-other
10.	♣ Cooking/recipes	30.	♣ Photography
11.	♣ Crafts/needlework	31.	♣ Play sports
12.	♣ Cultural art/events	32.	♣ Self improvement
13.	♣ Cycling	33.	♣ Skiing/snowboarding
14.	♣ Dieting/weight control	34.	♣ Travel-Foreign
15.	♣ Do-it-yourself	35.	♣ Travel-U.S.
16.	♣ Donating to charity	36.	♣ Vacation cruises
17.	♣ Fishing	37.	♣ Vitamins/natural foods
18.	♣ Fitness/exercise	38.	♣ Wines
19.	♣ Gardening	39.	♣ Woodworking
20.	♣ Golf	40.	♣ Worship/Bible

FCC RF EXPOSURE INFORMATION

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

FCC RF EXPOSURE INFORMATION


For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warrant

Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd., Fort Worth, TX 76155
(800) 297-1023, 7:00 a.m. to 7:00 p.m. CST,
Monday through Friday: 9:00 a.m. to 5:00 p.m. CST,
Saturday, Sunday and Holidays
(except Thanksgiving and Christmas).
www.uniden.com

4,684,870	4,734,049	5,203,015	5,214,789
5,491,745	5,497,508	5,517,677	5,557,606
5,574,994	5,610,946	5,613,201	5,625,870
5,627,876	5,628,059	5,634,196	5,634,205
5,678,176	5,697,096	5,717,312	5,722,070
5,787,345	5,901,341	6,021,326	6,084,861
6,163,691	6,195,415	6,353,730	6,839,550

 

Uniden®

© 2006 Uniden America Corporation
All rights reserved Printed in China
UTZZ01020ZZ(0)