

Shortcut:

You can also display the Page/Text In-Box from the main menu by pressing the Mouse Key left and pressing



Tip:

You can view the next page or Sprint PCS Wireless Web message by pressing the Mouse Key right or view the previous message by pressing the Mouse Key left.

Displaying Numeric Page and Sprint PCS Wireless Web Messages

To display a numeric page or Sprint PCS Wireless Web message from the Page/Text Message alert, highlight **Read** and press **OK**. (See "New Numeric Page or Sprint PCS Wireless Web Message Alerts" on page xx.)

To display a numeric page or Sprint PCS Wireless Web message from the main menu:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight the folder that contains your message and press **OK**. Messages are stored in the Inbox folder unless they are filtered or moved to another folder. A copy of all unread messages are stored in the All Unread folder. (See "Creating Folders and Filters for Page and Sprint PCS Wireless Web Messages" on page xx.)
4. Messages are displayed in the order they are received. A checkmark before a message means you have read it, an asterisk signifies it is new. Highlight the message you want to display and press **OK**. Press the Mouse Key down to display additional text.

Numeric Page Options

After you display a numeric page, press **OK** to display numeric page message options. To select an option, highlight it and press **OK**.

Call to dial the phone number in the page message.

View PB Entry to display the Internal Phone Book entry (if the sender's phone number is in your Phone Book). If the phone number is not in your Phone Book, the Save Phone # option is displayed.

Save Phone # to save the phone number if it is not already in your Internal Phone Book (if applicable).

Prepend to add numbers to the beginning of the the phone number. (See "Prepend Dialing" on page xx.)

Erase Message to delete the message.

Read to display the message again.

Move To to transfer the message to another folder (if you have created additional folders). (See "Moving Page/Sprint PCS Wireless Web Messages Between Folders" on page xx.)

Exit to return to the main menu. (You can also press **END**.)



Sprint PCS Wireless Web Message Options

After you display a Sprint PCS Wireless Web message, press **OK** to display Sprint PCS Wireless Web message options. To select an option, highlight it and press **OK**.

- **Call** to dial the phone number of the sender (if applicable).
- **View PB Entry** to display the Internal Phone Book entry (if the sender's phone number is in your Phone Book). If the phone number is not in your Phone Book, the Save Phone # option is displayed.
- **Save Phone #** to save the sender's phone number if it is not already in your Internal Phone Book (if applicable).
- **Extract #s** to extract phone numbers (if there are numbers contained in the text message). (See Extracting Phone Numbers from Sprint PCS Wireless Web Messages" on page xx.)
- **Prepend** to add numbers to the beginning of the the phone number (if applicable). (See "Prepend Dialing" on page xx.)
- **Erase Message** to delete the message.
- **Read** to display the message.

• **Move To** to transfer the message to another folder (if you have created additional folders). (See "Moving Page/Sprint PCS Wireless Web Messages Between Folders" on page xx.)

 
• **Exit** to return to the main menu. (You can also press **END**.)

Creating Folders for Page and Sprint PCS Wireless Web Messages

You can create up to ten folders to store your page and Sprint PCS Wireless Web messages.

To create a folder:

1. From the main menu, highlight **Messages** and press **OK**.
 2. Highlight **Page/Text** and press **OK**.
 3. Highlight **Add New Folder** and press **OK**.
 4. Enter a name for the folder and press **OK**.
 5. To select an option, highlight it and press **OK**.
- **Done** to create the folder.
 - **Set Max# Msg** to set a limit for messages stored in the folder. Highlight the number of messages and press **OK**.
 - **Filter** to automatically filter incoming messages, based on the text they contain, into the folder. Enter the text you want to filter messages by and press **OK**.



- **Rename** to change the name of the folder. Enter a new name and press **OK**.
- **Delete** to erase the folder. Press **OK** again to delete the folder.

Adding or Changing Filters for Page and Sprint PCS Wireless Web Messages

You can automatically filter your incoming page and Sprint PCS Wireless Web messages into specific folders. Filters search incoming messages and transfer the message into the appropriate folder when the message's text matches a filter.

To add or change a filter:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Edit Folder** and press **OK**.
4. Highlight the folder you want to add or change a filter for and press **OK**. (You cannot edit the Inbox or All Unread folder.)
5. Highlight **Change** and press **OK**.
6. Enter the text you want to filter messages by and press **OK**.

Deleting Page and Sprint PCS Wireless Web Message Folders

To remove a folder, its filter and all its messages:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Edit Folder** and press **OK**.
4. Highlight the folder you want to delete and press **OK**. (You cannot delete the Inbox or All Unread folder.)
5. Highlight **Delete Folder** and press **OK**.
6. To delete the folder, its filter and all its messages, press **OK**.

Renaming Page and Sprint PCS Wireless Web Folders

To rename a folder:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Edit Folder** and press **OK**.
4. Highlight the folder you want to rename and press **OK**. (You cannot rename the Inbox or All Unread folder.)
5. Highlight **Rename Folder** and press **OK**.
6. Enter a new name for the folder and press **OK**.

or stock quote.

Tip:

You can set a maximum number of messages for a folder to zero to eliminate unwanted emails. Or set the number of messages to one and store only the most recent weather report.

Setting or Changing the Maximum Number of Messages for Page and Sprint PCS Wireless Web Folders

Your phone can store up to a total of 200 page or Sprint PCS Wireless Web messages (in one or more folders).

To set or change the maximum number of messages stored in a folder:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Edit Folder** and press **OK**.
4. Highlight the folder you want to set the maximum number of messages for and press **OK**. (You cannot edit the Inbox or All Unread folder.)
5. Highlight **Set Max# Msgs** and press **OK**.
6. Highlight the maximum number of messages you want the folder to contain and press **OK**. When you receive additional messages, old message are deleted.

Creating or Changing Filters for Page and Sprint PCS Wireless Web Folders

When any text in an incoming message matches the text in a filter, the message is transferred into the designated folder.

To create or change a filter:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Edit Folder** and press **OK**.
4. Highlight the folder you want to create or change a filter for and press **OK**. (You cannot edit the Inbox or All Unread folder.)
5. Highlight **Filter** and press **OK**.
6. Highlight **Change** and press **OK**.
7. Enter the text you want to filter messages by and press **OK**.



Moving Page and Sprint PCS Wireless Web Messages between Folders

After you display a numeric page or Sprint PCS Wireless Web message, press **OK** to display message options.

To move the message into another folder:

1. Highlight **Move To** and press **OK**.
2. Highlight the folder you want to move the message to and press **OK**.

Extracting Phone Numbers from Sprint PCS Wireless Web Messages

After you display a Sprint PCS Wireless Web message, press **OK** to display message options.

To extract a phone number contained in the message:

1. Highlight **Extract #s** and press **OK**. All the phone numbers contained in the message are displayed. (If there are no phone numbers to extract from the message, the option does not display.)
2. Highlight the number you want to extract and press **OK**.

3. To select an option, highlight it and press

OK.

- **Call** to dial the phone number.
- **Next** to display the next phone number contained in the message (if applicable).
- **View Entry** to display the Internal Phone Book entry (if the sender's phone number is in your Phone Book). If the phone number is not in your Phone Book, the Save Phone # option is displayed.
- **Save Phone #** to save the sender's phone number if it is not already in your Internal Phone Book (if applicable).
- **Prepend** to add numbers to the beginning of the the phone number. (See "Prepend Dialing" on page xx.)

Erasing All Page or Text Messages

To erase all page/text messages:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
3. Highlight **Erase All Msgs** and press **OK**.
4. Highlight **Yes** and press **OK**.

 
9

Using your Internal Phone Book

In This Section

- Viewing Phone Numbers
- Saving Phone Numbers
- Punctuating Phone Book Entries
- Finding and Retrieving Numbers
- Erasing a Stored Phone Number
- Erasing Secret Phone Numbers
- Changing Stored Phone Numbers
- Using Different Dialing Methods
- Storing Special Numbers into the Phone Book

Now you know the basics and you've learned the advanced features that can help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more effectively when you're trying to connect with the important people in your life.



Tip:

Phone numbers labeled Fax or Data can only be dialed through a personal computer.

Saving Phone Numbers

Your Sprint PCS Phone can store up to 99 Internal Phone Book entries and 99 speed-dial numbers. Phone Book entries can store up to a total of 300 phone numbers and the entry's first and last name can contain ten characters. Your phone automatically sorts the Internal Phone Book entries alphabetically.

To **save numbers to your Phone Book**, follow these steps:

1. Enter a phone number.
2. Highlight **Save** and press **OK**.
3. Select a label by highlighting **Home, Work, Mobile, Pager, Fax, Data** or **No Label** and press **OK**.
4. Enter a first name for the entry, select an existing entry or highlight **Save w/o Name** and press **OK**. (See "Entering Characters by Tapping the Keypad" on page xx.)
5. Enter a last name for the entry or highlight **Save w/o Name** and press **OK**.
6. To add the number to your Speed Dial entries, press **OK**. If you do not want to add the phone number to your Speed Dial entries, highlight **No** and press **OK** (proceed to Step 8).

7. Press **OK** to save the phone number in the first available speed-dial location. (You can also enter the number of an empty location or highlight it and press **OK**.)
8. To add the number to your Voice Dial entries, press **OK** and follow the voice prompts. If you do not want to add the phone number to your Voice Dial entries, highlight **No** and press **OK**.

After you have saved the number, the new Internal Phone Book entry is displayed. (See "Phone Book Entry Options" on page xx.)

Tip:

In Standby mode, you can also access the Find Name feature for the All Entries folder by pressing the Mouse Key right.

Finding Phone Book Entries

There are several ways to access Phone Book entries in your Internal Phone Book. Follow the steps outlined in the sections below. Make sure your phone is in Standby mode.

Reviewing All Entries

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Highlight **Phone Book** and press **OK**.
2. Highlight **Find Name** and press **OK**.
3. If you have more than one folder (see "Adding a New Phone Book Folder" on page xx), highlight the folder you want to search and press **OK**. Phone Book entries are listed in alphabetical order by the entry's first or last name. (See "Sorting Phone Book Entries" on page xx).
4. Scroll through the folder's Phone Book entries with the Mouse Key (up/down). To find a specific entry, enter the first letter of the name or part of a name (such as "ave" for "Dave"). The more letters you enter, the more the search narrows.
5. To display an entry, highlight it and press **OK**.
6. To dial the first number you entered for the Phone Book entry, press and hold **OK**. To display additional entries, press the Mouse Key left or right.

Finding an Entry Using a Speed Dial Memory Location

To find a number by its Speed Dial memory location:

1. Highlight **Phone Book** and press **OK**.
2. Highlight **Find Speed Dial** and press **OK**.
3. Speed Dial entries are displayed in numerical order. Scroll through the Phone Book entries that contain the speed-dial numbers with the Mouse Key (up/down). You can also enter the number of a Speed Dial memory location.
4. To speed dial a number, highlight it and press and hold **OK**.
5. To display the Phone Book entry, highlight the entry and press **OK**.

Phone Book Entry Options

When you display a Phone Book entry, the following options are displayed. To select an option, highlight it and press **OK**.

- **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, select **Roam Call**. See "Call Guard" on page xx.)
- **[Additional Phone Numbers]** to display alternate phone numbers (if the entry has more than one phone number). Press and hold **OK** to dial the phone number.
- **Add Phone #** to add a phone number to the entry. (See "Adding Phone Numbers to a Phone Book Entry" on page xx.)
- **Edit** to change the Phone Book entry. (See "Changing a Phone Book Entry" on page xx.)
- **Call Alarm** to schedule a call alarm. (See "Adding Call Alarms from the Phone Book" on page xx.)

- **View Details** to display the Phone Book entry's street address and email address. (See "Changing a Phone Book Entry" on page xx.)

- **Erase Number** to delete a phone number. To delete the phone number, press **OK** again.

- **Erase Entry** to delete the entry. To delete the entry, press **OK** again.

- **Next** to display the next Phone Book entry.

- **Previous** to display the previous Phone Book entry.

Tip:

You can also view the next entry by pressing the **Mouse Key** right or view the previous entry by pressing the **Mouse Key** left.

Note:

Phone numbers labeled Fax or Data can only be dialed through a personal computer.

Adding a Phone Number to a Phone Book Entry

After you display a Phone Book entry, press **OK** to display message options.

To add a phone number to an entry:

1. Highlight **Add Phone Number** and press **OK**.
2. Enter the phone number and press **OK**.
3. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and press **OK**.
4. To add the number to your Speed Dial entries, press **OK**. If you do not want to add the phone number to your Speed Dial entries, highlight **No** and press **OK** (proceed to Step 6).
5. Press **OK** to save the phone number in the first available speed-dial location. (You can also enter the number of an empty location or highlight it and press **OK**.)
6. To add the number to your Voice Dial entries, press **OK** and follow the voice prompts. If you do not want to add the phone number to your Voice Dial entries, highlight **No** and press **OK**.

Adding Call Alarms from the Phone Book

After you display a Phone Book entry, press **OK** to display message options.

To add a call alarm:

1. Highlight **Call Alarm** and press **OK**.
2. Enter the time and date using your keypad. (Fields must be two digits, for example "07:46a 04/01/00.") To toggle between AM and PM, highlight **AM/PM** and press **OK**.
3. To schedule the call alarm, highlight **Done** and press **OK**. To repeat the alarm, highlight **Set Repeating** and press **OK**.
Set Repeating To repeat the call alarm, highlight, **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**. To schedule the call alarm, highlight **Done** and press **OK**.

After you have scheduled the call alarm, the day the alarm is scheduled for is displayed. (See "Viewing the Scheduler" on page xx.)

Call Alarm Alerts

There are several ways your Sprint PCS Phone alerts you of call alarms:

- By playing the assigned Ring Type.
- By illuminating the backlight.
- By flashing the LED red.
- By displaying the Phone Book entry name or phone number, the time and date of the alarm and the following menu options.

Call Alarm Menu

When your phone is turned on and you have a call alarm scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

OK to display the **Call** or **Roam Call** option.

To dial the number, press **OK** again. To dial an alternate phone number, highlight the number and press and hold **OK**.

Snooze to repeat the alarm in ten minutes.

Erase to delete the alarm (unless it is repeating).

Edit Time/Date to reschedule the time, date and frequency of the alarm.

Exit to erase the alarm and return to the main menu.

When your phone is turned off and you have a call alarm scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

- **OK** to acknowledge the alarm.
- **Snooze** to repeat the alarm in ten minutes.
- **Save & Pwr ON** to save the alarm and turn your phone on.
- **Erase & Pwr OFF** to erase the alarm (and all repeating instances) and turn your phone off.

Phone Book Entry Details

After you display a Phone Book entry, press **OK** to display message options.

To view the street and email address for an entry:

1. Highlight **View Details** and press **OK**.

(To enter a street and email address for a Phone Book entry, see "Changing a Phone Book Entry" on page xx.)

Changing a Phone Book Entry

To make changes to a phone book entry:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.

To select an option, highlight it and press **OK**.

- **Phone #** to change a phone number. (See “Changing Phone Book Entry Phone Numbers” on page xx.)
- **Move Speed Dial** to add or change a speed-dial location. Highlight the phone number you want to move to a speed-dial location and press **OK**. Press **OK** again to move the number to the first available speed-dial location. (You can also enter an entry number or highlight an empty location and press **OK**.)
- **Edit Voice Dial** to add or edit a Voice Dial entry. Highlight the number you want to add or edit and press **OK**. To hear an existing Voice Dial, highlight **Play Voice Dial** and press **OK**. To replace an existing Voice Dial, highlight **Change** and press **OK**. Then, follow the voice prompts to record a new Voice Dial. To add a new Voice Dial, highlight **Add Voice Dial** and press **OK**. Then, follow the voice prompts to record a Voice Dial.

- **Folder** to move the entry to another folder. Highlight the folder you want to move the entry to and press **OK**. (See “Adding a New Phone Book Folder” on page xx.)
- **Set ID Ringer** to assign an individual Ring Type to the entry. (See “Selecting an ID Ringer for a Phone Book Entry” on page xx.)
- **First Name** to change the entry's first name. Enter the new name and press **OK**. (See “Entering Characters by Tapping the Keypad” on page xx.)
- **Last Name** to change the entry's last name. Enter the new name and press **OK**. (See “Entering Characters by Tapping the Keypad” on page xx.)
- **Address** to save a street address for the entry. Enter the appropriate information and press **OK**.
- **Email** to save an email address for the entry. Highlight an email entry location and press **OK**. Then, enter an email address and press **OK**.
- **Secret Mode** to select the entry's Secret mode. (See “Secret Phone Book Entries” on page xx.)

Editing Phone Book Entry Phone Numbers

To make changes to a phone number:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Phone #** and press **OK**.
4. Highlight the number you want to edit and press **OK**.

To select an option, highlight it and press

OK.

Edit Number to change a phone number.

Enter a new number and press **OK**.

Add/Move Speed Dial to add or change a speed-dial location. Highlight the phone number you want to move to a speed-dial location and press **OK**. Press **OK** again to move the number to the first available speed-dial location. (You can also enter an entry number or highlight an empty location and press **OK**.)

Add/Edit Voice Dial to add or edit a Voice Dial entry. Highlight the number you want to add or edit and press **OK**. To hear an existing Voice Dial, highlight **Play Voice Dial** and press **OK**. To replace an existing Voice Dial, highlight **Change** and press **OK**. Then, follow the voice prompts to record a new Voice Dial. To add a new Voice Dial, highlight **Add Voice Dial** and press **OK**. Then, follow the voice prompts to record a Voice Dial.

Delete Speed Dial to erase a phone number from a speed-dial location (if you have a speed-dial location assigned). Press **OK** again to remove the number from your Speed Dial entries.

Delete Voice Dial to erase a phone number from a voice-dial location (if you have a voice-dial location assigned). Press **OK** again to remove the number from your Voice Dial.

Erase Number to erase the number. Press **OK** again to delete the number.

Selecting an ID Ringer

You can assign thirty ringer tones, including a vibrating ringer and three recordable ringers, to a Phone Book entry so you can identify the caller by the ring type. (See "Ring Types" on page xx.)

To select an ID Ringer:

1. Display a Phone Book entry.
2. Highlight **Set ID Ringer** and press **OK**.
3. Highlight a Ring Type and press **OK**.
(You will hear a preview of the Ring Type when you highlight it.)

Secret Phone Book Entries

You can hide an entry's phone number and require your lock code to change it by making the entry secret. The entry name is still displayed, but the number is replaced by "(Secret)."

To make a Phone Book entry secret:

 
1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Secret Mode** and press **OK**.
4. Highlight **Yes** and press **OK**.

To make a Phone Book entry not secret:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Enter your lock code.
4. Highlight **Secret Mode** and press **OK**.
5. Highlight **No** and press **OK**.

Tip:

If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).



Adding a New Phone Book Entry

To add a new entry:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Add New Entry** and press **OK**.
3. Enter a first name for the entry or highlight **Save w/o Name** and press **OK**. (See "Entering Characters by Tapping the Keypad" on page xx.)
4. Enter a last name for the entry or highlight **Save w/o Name** and press **OK**.
5. Enter a phone number and press **OK**.
6. Select a label by highlighting **Home, Work, Mobile, Pager, Fax, Data** or **No Label** and press **OK**.
7. To add the number to your Speed Dial entries, press **OK**. If you do not want to add the phone number to your Speed Dial entries, highlight **No** and press **OK**. (proceed to Step 9).
8. Press **OK** to save the phone number in the first available speed-dial location. (You can also enter the number of an empty location or highlight it and press **OK**.)

Note:

Calls labeled Data or Fax can only be dialed through a personal computer.

Tip:

If you save phone numbers with their area codes, you can still dial them from your Phone Book when you travel outside your Sprint PCS Home Service Area.

9. To add the number to your Voice Dial entries, press **OK** and follow the voice prompts. If you do not want to add the phone number to your Voice Dial entries, highlight **No** and press **OK**.

After you have created the new Phone Book entry, the entry is displayed. (See "Phone Book Entry Options" on page xx.)

Adding a New Phone Book Folder

You can organize Phone Book entries by storing them in separate folders. (See "Changing a Phone Book entry" on page xx.) A copy of all Phone Book entries are stored in and accessible from the All Entries folder.

 
To create a new folder:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Add New Folder** and press **OK**.
3. Enter the name of the folder and press **OK**.

Moving Phone Book Entries into Folders

To move an entry into a different folder:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Folder** and press **OK**.
4. Highlight the folder you want to move the entry to and press **OK**.



Tip:

You can use Ring Types to help screen calls, for example select None for your Work folder when you are at home.

Renaming Phone Book Folders

To rename a folder:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Edit Folder** and press **OK**.
3. Highlight the folder you want to rename and press **OK**.
4. Highlight **Rename Folder** and press **OK**.
5. Edit the folder's name and press **OK**.

Selecting Ring Types for Phone Book Folders From the Phone Book Menu

To select a Ring Type for an incoming call from a folder's Phone Book entry:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Edit Folder** and press **OK**.
3. Highlight the folder you want to select a Ring Type for and press **OK**.
4. Highlight **Ring Type** and press **OK**.
5. Highlight a Ring Type and press **OK**.

You can also assign a Ring Type to a Phone Book folder from the Settings menu (page xx).

Deleting Folders

To delete a folder:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Edit Folder** and press **OK**.
3. Highlight the folder you want to delete and press **OK**.
4. Highlight **Delete Folder** and press **OK**.
5. To delete the folder and move the folder's entries into the All Entries folder, highlight **Yes** and press **OK**.

Sorting Entries

To display entries alphabetically by their first or last name:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Sort Name** and press **OK**.
3. Select **First-Last** or **Last-First** and press **OK**.

Shortcut:

Press the Mouse
Key left in Standby
mode to display
your Sprint PCS
Phone Number.

Dialing Sprint PCS Services

You must be in Digital Mode to access
Sprint PCS Services.

To dial a service:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Services** and press **OK**.
3. Highlight **CustomerCare, Dir Assist, Prepaid or Road Assist** and press **OK**.
4. Highlight **Call** and press **OK**.

My Sprint PCS Phone Number

To display your phone number:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **My Phone Number** and press **OK**.

10

Changing your Phone's Display

In This Section

Changing the Backlight Time Length

Changing your Standby Mode Display Banner

Adding the Time and Date to your Phone's Display

This section describes how you can change your phone's display to best suit your viewing requirements. Every function and feature is displayed through your phone's menu. Take a few moments to review these options and adjust or add settings that are right for you.

Tip:

You can use the volume keys on the side of the phone to adjust the ring volume in Standby mode or the voice or speakerphone volume during a call.

Note:

When the phone is in Vibrate Mode and attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard Ring Type to alert you of incoming calls, alarms or messages

Changing the Headline

Your headline is also the name for the Current Setup (see "Selecting Personalities" on page xx). The greeting lets you customize the 12 characters of text displayed on the first line of your phone's display screen in Standby mode.

To change your headline:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Headline** and press **OK**.
3. Highlight **Change** and press **OK**.
4. Edit the name of the headline and press **OK**. The headline (and Current Setup) is displayed.

Adjusting the Volume

To adjust the ringer or key beep volume:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Volume** and press **OK**.
4. Highlight **Ringer** or **Key Beep** and press **OK**.
5. Highlight **High & Vibrate**, **High**, **Medium**, **Low**, **Off** or **Vibrate** for Ringer or **High**, **Medium**, **Low**, or **Off** for Keybeep and press **OK**.

Ring Types

Ring Types help you identify incoming calls and messages. You can assign Ring Types to individual Phone Book entries, folders, types of calls and types of messages.

- **Preprogrammed Ringers** include a variety of standard ring types and familiar music.
- **Custom Ringers** can be downloaded from web sites.
- **Recordable Ringers** can be composed of your voice or sounds you record. (See "Recording Ringers" on page xx.)

Selecting Ring Types for Voice Calls

To select a Ring Type for voice calls so you can tell what kind of call is coming in by the ringer:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Ring Type** and press **OK**.
4. Highlight **Voice Calls** and press **OK**.

Tip:

You can also assign ring types to Phone Book entries to identify individual callers. (See "Selecting an ID Ringer" on page xx.)

5. Highlight **With Caller ID, Phonebook Fldr, No Caller ID or Roaming** and press **OK**.

If you select Roaming, the ring type is used for all incoming roaming calls (overriding ring types assigned to Phone Book entries or folders).

6. Highlight a ring type and press **OK**. You will hear a preview of the ring type when you highlight it.

Selecting Ring Types for Messages

To select a ring type for messages:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Ring Type** and press **OK**.
4. Highlight **Messages** and press **OK**.
5. Highlight **Voicemail, Page/Text or Wireless Web** and press **OK**.
6. Highlight a ring type and press **OK**. You will hear a preview of the ring type when you highlight it.

Selecting Ring Types for Alarms, Data Calls and Fax Calls

To select a ring type for alarms, data calls and fax calls:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Ring Type** and press **OK**.
4. Highlight **Messages** and press **OK**.
5. Highlight **Alarms, Data Calls or Fax Calls** and press **OK**.
6. Highlight a ring type and press **OK**. You will hear a preview of the ring type when you highlight it.

Alert Notification

To enable or disable alert sounds:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Alerts** and press **OK**.
4. Highlight **Messages** and press **OK**.
5. Select an alert by highlighting it and pressing **OK**.

Service to alert you when you exit or enter PCS CDMA or cellular coverage.

Messages to alert you when you receive a voicemail, page/text or Web message.

Minute Minder to hear a beeps once a minute when you are on a call. (The beep is not audible to the other party.)

6. Highlight **On** or **Off** and press **OK**.

Selecting a Tone Length

Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.

To select a tone length:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Sounds** and press **OK**.
3. Highlight **Tone Length** and press **OK**.
4. Highlight **Short** or **Long** and press **OK**.

Changing the Backlight Time Length

The backlight setting lets you choose how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Display** and press **OK**.
3. Highlight **Backlight** and press **OK**.
4. Highlight **8 Seconds**, **15 Seconds**, **30 Seconds**, **Off** or **Always On** and press **OK**.

Changing the Contrast

To adjust the contrast on the phone's display:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Display** and press **OK**.
3. Highlight **Contrast** and press **OK**.
4. Highlight **Highest**, **High**, **Medium**, **Low** or **Lowest** and press **OK**. When you highlight an option, a preview of the Contrast setting is displayed.

Note:

The phone must be on a digital network to send or receive data and faxes.

Note:

The data cable must be connected to your phone to view Data/Fax menu options.

Note:

When your phone is in Data/Fax mode, you cannot make or receive

Setting the Alarm Mode

To enable or disable all of your phone's alerts:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Alarm Mode** and press **OK**.
3. Highlight **Disable** or **Enable** and press **OK**.

Data/Fax Mode

The Sprint PCS Wireless Web Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS Phone so you can send and receive data and faxes.

Receiving a Fax

To receive a fax with your phone:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Fax** and press **OK**.

Receiving Data

To receive data with your phone:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Data** and press **OK**.

Returning to Voice Mode

To return to Standby mode at the end of a data or fax transmission, highlight **Exit Data Mode** or **Exit Fax Mode** and press **OK**.

To return to Standby mode from Data/Fax mode:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Disable** and press **OK**.

Note:

The phone always powers up in Standby mode, even if it was powered down in Data/Fax mode. The phone also returns to Standby mode if the data cable is disconnected.

Shortcut:

You can also select a Current Setup from the main menu by pressing the Mouse Key left and pressing

1

Answering your Phone with a Hands-Free Car Kit

You can select different answering options when your phone is connected to the Installed or Portable Sprint PCS Hands-Free Car Kit.

To answer calls automatically or by pressing any key:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Car Use** and press **OK**.
3. Select an option by highlighting it and pressing **OK**.

Any Key Answer to answer calls by pressing any key (not including the **END** key, Mouse Key or volume keys).

Auto Answer to automatically answer incoming calls after five seconds.

4. Highlight **On** and press **OK**.

To disable an option, follow steps 1-3 and select **Off**.

Selecting the Current Setup

Your settings for headline, sounds, display, alarm mode and car use can be grouped together and saved as a Setup. (You can change the individual settings at any time.) That way you can use different settings for your phone when you're at home, work, on vacation or any place you prefer to use a customized setup. The name of the Setup is the headline.

To select a Setup:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **More...** and press **OK**.
3. Highlight **Select Setup** and press **OK**.
4. Highlight a Setup and press **OK**.

Copying your Personality Settings

To copy your settings over to a new personality:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **More...** and press **OK**.
3. Highlight **Copy Settings** and press **OK**.
4. Highlight the Setup you want to copy the settings from and press **OK**.
5. Highlight the Setup you want to copy the settings to and press **OK**.
6. Press **OK** again to copy the settings to the selected Setup.

Setting your Phone's Security

In This Section

Locking the Keypad

Unlocking the Keypad

Restricting your Calls

Changing your Keypad Lock Code

By using the security setting on your Sprint PCS Phone,TM you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Using Your KeyGuard

The KeyGuard feature helps avoid accidental key presses without blocking incoming calls or messages. Keyguard is disabled when you receive an incoming call and is reactivated when the call is complete.

1. To activate the KeyGuard, highlight **KeyGuard** in the main menu and press **OK**.

To disable KeyGuard, press and hold **CLR**.

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your Sprint PCS Phone Number or 0000.

To access the Security menu:

1. From the main menu, highlight **Security** and press **OK**.
2. Enter your lock code.

Locking your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers.

To lock your phone:

1. From the Security menu, highlight **Lock Phone** and press **OK**.
2. Highlight **Lock Now** or **On Power Up** and press **OK**. If you select **On Power Up**, the phone will be locked each time it powers up.

Unlocking your Phone

To unlock your phone:

1. Highlight **Unlock** and press **OK**.
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security menu, highlight **Change Lock** and press **OK**.
2. Enter your new lock code.
3. Reenter your new lock code.

Tip:

Restricted incoming calls are forwarded to voicemail

Restricting Calls

You can restrict which phone numbers you can receive calls from or dial. (The Restrict Calls setting does not apply to 911 or Sprint PCS Customer Care.)

To restrict calls:

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Outgoing** or **Incoming** and press **OK**.
3. Select an option by highlighting it and pressing **OK**.

Allow All to make all outgoing or receive all incoming calls.

Phone Book Only to only make or receive calls from special numbers or phone numbers stored in your Internal Phone Book.

Special # Only to only make or receive calls from special numbers. (See "Using Special Numbers" on page xx.)

Unrestricting Calls

To unrestrict all calls:

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Off** and press **OK**.

To unrestrict incoming or outgoing calls:

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Outgoing** or **Incoming** and press **OK**.
3. Highlight **Allow All** and press **OK**.

Using Special Numbers

You can save three special numbers in addition to your Internal Phone Book entries (they can be the same number). You can call and receive calls from special numbers even when your phone is locked. You can also restrict your phone to dial or receive calls from special numbers only. (See "Restricting Calls" on page XX.)

To add or replace a special number:

1. From the Security menu, highlight **Special #s** and press **OK**.
2. Highlight an entry location and press **OK**.
3. Enter or replace the phone number and press **OK**.

Note:

There are no speed-dialing options associated with special numbers.

Erasing the Phone Book

To erase all the names and phone numbers in your Internal Phone Book:

1. From the Security menu, highlight **Erase PhoneBook** and press **OK**.
2. If you are certain you want to erase the entire contents of the Internal Phone Book, highlight **Yes** and press **OK**.

Resetting your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Internal Phone Book, Call Logs, Scheduler, Messages and Call Alarms are not affected.

To reset your phone:

1. From the Security menu, highlight **Reset Phone** and press **OK**.
2. If you are certain you want to reset your phone, highlight **Yes** and press **OK**.

Personal Information Management

In This Section

Using the Calendar

Managing Contacts

Managing Schedules

Managing Call Alarms

Managing To Do Lists

Playing Games

Using the Calculator

Your Sprint PCS Phone™ has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level.

Shortcut:

You can also add an event from the main menu by pressing the Mouse Key left and pressing

**Note:**

Default alarm times are 10 minutes for Meetings, Events and Dining Appointments, 24 hours for Special Occasions and 0 minutes for Call Alarms.

Adding Meetings, Special Occasions, General Events and Dining Appointments

To add an event to your Scheduler:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Highlight the day you want to add an event to by pressing the Mouse Key left (previous day) or right (next day) and press **OK**.
3. Highlight **Add Event** and press **OK**.
4. Highlight **Meeting, Spcl Occasion, Event** or **Dining Appt.** and press **OK**.
5. Enter a description and press **OK**. (See "Entering Character Using T9 Text Input" on page xx.)
6. Enter the time, date and duration using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM/PM** and press **OK**.
7. To select an option, highlight it and press **OK**.
Done to schedule the event.
Edit Alarm to change the event's alarm. Enter the number of hours or minutes before the event you want be reminded of the event and press **OK**. If you do not want to be reminded, highlight **No Alarm** and press **OK**.

Edit Repeat to change the event's repeating frequency. Highlight **Daily, Weekly, Monthly** or **Yearly** and press **OK**.

Add New Memo to add a memo alert to the event. Record your memo and press **OK**.

Set End Time to change the event's end time (if it is longer than 99 hours 99 minutes). Enter the end time and date and press **OK**.

Edit Descript. to change the title of the event. Enter a new description and press **OK**.

Event Type Icons

When you highlight a day in the Scheduler calendar (Week View only), icons appear on the bottom of the display that indicate the type of event and in the order the event is scheduled for that day.

- Meeting
- Dining Event
- Call Alarm
- Special Occasion
- General Event

When you create or view events, icons are displayed that indicate event characteristics:

- Repeating Event or Call Alarm
- Alarm Scheduled (Events only)

Tip:

While displaying the calendar, press the Mouse Key up or down to scroll by week or the volume keys on the side of the phone to scroll by month

Viewing the Scheduler Calendar

To view your Scheduler calendar:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **View Week** or **View Month** and press **OK**. The setting is saved the next time you display the Scheduler calendar.

Viewing Events and Call Alarms

To view your scheduled events and call alarms:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. If you view the Scheduler calendar by week (see "Viewing the Scheduler Calendar" on page xx), an asterisk is displayed under days with events or Call Alarms scheduled. When you highlight a day with an asterisk, Event Type icons are displayed at the bottom of the screen. Icons are displayed in chronological order. (See "Event Type Icons" on page xx.)
3. To view an individual day, highlight the day by pressing the Mouse Key left (previous day) or right (next day) and press **OK**. If you have Call Alarms or events scheduled, they are displayed in chronological order.
4. To display a scheduled event or Call Alarm, highlight it and press **OK**. To view the next or previous day, press the Mouse Key left (previous) or right (next).

Shortcut:

You can also display Today's events from the main menu by pressing the Mouse Key left and pressing



Scheduled Event Alerts

There are several ways your Sprint PCS Phone alerts you of scheduled events when your phone is powered on:

- By playing the assigned Ring Type.
- By illuminating the backlight.
- By flashing the LED red.
- By displaying event's description, time and date.

Scheduled Event Alert Menu

When your phone is turned on and you have an event scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

Play Speaker to play a memo through the speaker (if applicable).

Play Private to play a memo through the earpiece (if applicable).

View Details to display the event's time, date, duration, description and minutes before a scheduled alarm.

Snooze to repeat the alarm in ten minutes.

Erase to delete the event (even if it is a repeating event).

Edit to edit the time, date, alarm, repeating status, memo, end time or description of the event.

Exit to save the event and return to the main menu (or press **END**).

When your phone is turned off and you have an event scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

Play Speaker to play a memo through the speaker (if applicable).

Play Private to play a memo through the earpiece (if applicable).

View Details to display the event.

Snooze to repeat the alarm in ten minutes.

Save & Pwr ON to save the event and power your phone on.

Save & Pwr OFF to save the event and power your phone off.

Tip:

You can also add a call alarm from the Phone Book menu. (See "Adding Call Alarms from the Phone Book" on page xx.)

Adding Call Alarms from the Scheduler

To add a call alarm from the Scheduler:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Highlight the day you want to add a call alarm to by pressing the Mouse Key left (previous day) or right (next day) and press **OK**.
3. Highlight **Add Event** and press **OK**.
4. Highlight **Call Alarm** and press **OK**.
5. Highlight the Internal Phone Book entry you want to be reminded to call or highlight **Number Only** and press **OK**.
If you select **Number Only**, enter the phone number and press **OK**.
6. Enter the time, date and duration using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM/PM** and press **OK**. To repeat the alarm, highlight **Set Repeating** and press **OK**.
Set Repeating to set the call alarm's repeating frequency. Highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**.
7. Highlight **Done** and press **OK**.

For call alarm alerts, see "Call Alarm Alerts" on page xx.

Going To Dates

To go directly to a day in the Scheduler calendar:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **Go To Date** and press **OK**.
4. Enter the date using your keypad. (Fields must be two digits, for example "02/17/00.")
5. Highlight **Go** and press **OK**. Press **OK** again to view the day's Scheduler menu.

Tip:

You can also display the Go To menu by pressing any digit when the month or week view is displayed.

Changing Events

To edit an event:

1. Highlight an event in the Scheduler menu and press **OK**. (See "Viewing Events and Call Alarms" on page xx.)
2. Press **OK** again to display event options.
3. Highlight **Erase** and press **OK** to delete the event. Highlight **Edit** and press **OK** to display additional options.
4. To select an option, highlight it and press **OK**.

Done to schedule the event.

Edit Alarm to change the event's alarm. Enter the number of hours or minutes before the event you want be reminded of the event and press **OK**. If you do not want to be reminded, highlight **No Alarm** and press **OK**.

Edit Repeat to change the event's repeating frequency. Highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**.

Add New Memo to add a memo alert to the event. Record your memo and press **OK**.

Set End Time to change the event's end time (if it is longer than 99 hours 99 minutes). Enter the end time and date and press **OK**.

Edit Descript. to change the title of the event. Enter a new description and press **OK**.

Changing Call Alarms

To edit a call alarm:

1. Highlight a call alarm in the Scheduler menu and press **OK**. The time, date and phone number (or Internal Phone Book entry) are displayed.)
2. Select an option by highlighting it and pressing **OK**.

Erase to delete the call alarm. To delete the call alarm, press **OK** again.

Edit Time/Date to edit the time, date and repeating frequency of the call alarm.

Next to display the next scheduled event or call alarm for the selected day.

Previous to display the previous scheduled event or call alarm for the selected day.

Exit to return to the Scheduler menu.

Tip:

You can also view the next or previous event or call alarm by pressing the **Mouse Key** left (previous) or right (next).

Shortcut:

You can also display the To Do List from the main menu by pressing the Mouse Key left and pressing **3**.

Adding To Do Items

Your phone can store and manage 20 To Do items.

To add an entry to your To Do List:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight **Add Item** and press **OK**.
5. Enter a description and press **OK**.
6. Highlight **Low** or **High** and press **OK**.
Low priority To Do items are indicated by an asterisk and high priority To Do items by an exclamation point. When you complete a To Do item, you can identify it as Done with a checkmark. (See "Changing To Do Items" on page xx).
7. Enter a due date using your keypad or highlight **No Due Date** and press **OK**.
(Due dates do not have alarms associated with them.)

Viewing To Do Items

To view your To Do List:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
Low priority To Do items are indicated by an asterisk, high priority To Do items by an exclamation point and completed To Do items by a checkmark. (See "Changing To Do Items" on page xx.)
4. To display a To Do item, highlight it and press **OK**.

Changing To Do Items

To change a To Do item:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight the To Do item and press **OK**.
5. Select an option by highlighting it and pressing **OK**.

Erase Item to delete the To Do item. To delete the item, press **OK** again.

Edit Priority to change the item's priority. Highlight the a priority and press **OK**.

Low priority To Do items are indicated by an asterisk, high priority To Do items by an exclamation point and completed To Do items by a checkmark

Edit Due Date to change the due date. Edit the due date or highlight **No Due Date** and press **OK**.

Edit Descript. to change the item's description. (See "Entering Characters Using T9 Text Input" on page xx).

Add to Scheduler to remove the item from the To Do List and make it a scheduled event. (See "Adding a To Do Item as an Event" on page xx).

Tip:

Labeling a To Do item as done still retains the To Do item in your memory. To delete the item, select Erase Item.

- **Next** to display the next To Do item.
- **Previous** to display the previous To Do item.
- **Exit** to return to the Scheduler menu.

Adding a To Do Item as an Event

To remove an item from the To Do List and schedule it as an event:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight the To Do item and press **OK**.
5. Highlight **Add to Schedule** and press **OK**.
6. Enter a time and date with your keypad.
7. Select an option by highlighting it and pressing **OK**.

Done to schedule the event.

AM/PM to toggle the event time between AM and PM.

Edit Alarm to change the event's alarm. Enter the number of hours or minutes before the event you want be reminded of the event and press **OK**. If you do not want to be reminded, highlight **No Alarm** and press **OK**.

Edit Repeat to change the event's repeating frequency. Highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press

OK.

Add New Memo to add a memo alert to the event. Record your memo and press

OK.

Set End Time to change the event's end time (if it is longer than 99 hours 99 minutes). Enter the end time and date and press

OK.

Edit Descript. to change the title of the event. Enter a new description and press

OK.

Exit to return to the Scheduler menu.

Deleting To Do Items

To erase individual To Do items, see "Changing To Do Items" on page xx.

To erase all To Do items:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight **Erase Item** and press **OK**.
5. Highlight **Yes** and press **OK**.

Viewing and Clearing Scheduler, Call Alarm or To Do List Memory

To view available and used Scheduler, Call Alarm or To Do List memory space:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **Memory** and press **OK**.
4. Highlight **View Details** and press **OK**.
5. Highlight **Scheduler, Call Alarm or To Do List** and press **OK**. Your used and available memory is displayed.
6. To erase old or all Scheduler events, highlight **Erase Old** or **Erase All** and press **OK**. To erase all call alarms, highlight **Erase All** and press **OK**. To erase done or all To Do items, highlight **Erase Done** or **Erase All** and press **OK**.
7. Highlight **Yes** and press **OK**.

Erasing Old Events or All Events, Call Alarms and To Do Items

To erase events, call alarms and To Do items:

1. From the main menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **Memory** and press **OK**.
4. Highlight **View Details** and press **OK**.
5. Highlight **Erase Old** to erase old Scheduler events or **Erase All** to erase all events, call alarms and To Do items and press **OK**.
6. Highlight **Yes** and press **OK**.

Using the Calculator

Your phone comes with a built-in calculator function. To use this tool, follow these easy steps:

1. From the main menu, highlight **Calculator** and press **OK**.
2. Enter numbers using your keypad. Press **OK** to insert a decimal point.
3. To select an arithmetic option, press **OK** (press **OK** again to scroll through options) or highlight the option and press **OK**.

Playing Games

To start a game:

1. From the main menu, highlight **Games** and press **OK**.
2. Enter numbers using your keypad. Press **OK** to insert a decimal point.
3. To select a game, highlight it and press **OK**.
 - **Blackjack**: Press **OK** to begin the game. You always wager \$10 and can **Double Down** with 10 or 11 points. Try and beat the Dealer's score by choosing **Hit** or **Stay** and pressing **OK**. A running dollar total keeps track of your winnings (or losses).
 - **Football**: Press **OK** to begin the game. Select Offensive and Defensive options by highlighting them and pressing **OK**. The score, time remaining and field position are displayed.
 - **Dice**: Press **OK** to begin the game. Try to remove all the digits (1-9) by highlighting combinations and pressing **OK**. Your score is the total of the remaining digits.

13

Experiencing Sprint PCS Wireless Web

In this Section

The Sprint PCS Wireless Web Browser

Launching the Sprint PCS Wireless Web Browser

Navigating the Sprint PCS Wireless Web

Using Special Features Within the Sprint PCS Wireless Web

Setting up a Sprint PCS Wireless Web Connection

Accessing Sprint PCS Wireless Web Updates

By now you've discovered the great features that come with your Sprint PCS Phone.TM Now it's time to experience the Sprint PCS Wireless Web. Let the adventure begin.

Sprint PCS
Wireless Web
13