

1、 Label Content



2、 Label Location



Note : External labels are pasted in the center of the front of the housing.