 
 
 
 


CQL1668-B Bluetooth Speaker
Instruction Manual (Read before proceeding)

Power:

- Please charge your Bluetooth speaker fully before its first use.
To charge the battery:
- Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located on the back of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.
- When your Bluetooth speaker is charging, the indicator light will turn red.
- Once your Bluetooth speaker is fully charged, the red light will turn off.

Playing Music via Bluetooth

- Turn your Bluetooth speaker on by long press the power switch  located on the side of the speaker. *There is NO Bluetooth LED indicator hole for this unit. The Bluetooth indicator light can NOT be seen from the product surface. Therefore, there is NO Bluetooth indicator flashing status. Please do not put it on manual.*
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named, " **CQL1668-B** ".
- Once you have selected the pair name, your device will pair without a password. (If your device prompts for a password, enter the password "0000".)
- Once your speaker is paired, a tone will be heard indicating the Bluetooth is connected. *There is no Bluetooth LED indicator hole for this unit. The Bluetooth indicator light can NOT be seen from the product surface. Therefore, there is NO Bluetooth indicator flashing status after the speaker is connected. Please do not put it on manual.*
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level. **Control play/pause** , **volume up(long press)/next track(quick press)**  and **volume down(long press)/previous track(quick press)**  either on your connected device .
- Turn off the unit when not in use.

Universal Speaker Operation

- For other music devices without Bluetooth, use Auxiliary input cable. Connect the included Auxiliary cable into the speaker's Auxiliary port and plug the other end into your device auxiliary port
- The device will switch to auxiliary mode automatically.
- All controls and functions are operated through your mobile device.
- Disconnect the Auxiliary cable when not in used.

Button Control:

 Button:

(Long Press)Power ON/OFF

(Quick Press)Play/pause, answer/end phone calls

(Double Press)Redial last number called

 Button:

(Long Press)Increase volume

(Quick Press)Skip to next track

 Button:

(Long Press)Decrease volume

(Quick Press)Skip to previous track

- Caution:
- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

NOTE:

**There is NO charging indicator hole for this unit. However, when the unit is being charged, there can be seen a red light from inside through the middle transparent ring. After the charging is full, the light will be off which can also be told from the middle transparent ring.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.