

# User's Guide



**TX-215**

## WELCOME

Thank you for choosing the up-to-date TX-215, our new model, developed by top researchers to support the CDMA2000 1X system through Qualcomm-manufactured MSM6050 chips and CDMA technologies. This product allows for high speed communication services, such as web browsing, data services, and a GUI animation menu.

T9 input mode makes it much easier to enter text, while VR (Voice Recognition) makes the TX-215 more user friendly. Other proven technologies include:

- Full graphic display of 9 text input lines and 1 icon line with variable font size.
- Easy to dial through the VR feature.
- Easy to enter letters through the T9 text input mode.
- Enhanced for web browsing & data services (i.e.; wireless internet access, UP browser)
- GUI & Animation display compliant with CDMA2000 1X.
- Full graphic - Main LCD : TFT260K color wide LCD/  
Sub LCD : CSTN 65K color LCD
- Navigation Key and 21 keys aligned for more convenience.
- Sophisticated features of speaker phone, and voice recognition.
- Mobile Camera (SXGA 1.3 Mega Pixel)
- Additional services of text messaging and Web browsing on top of authentication, call forwarding, call transfer, call waiting.

### IMPORTANT INFORMATION

This TX-215 user guide contains very important information about how to handle and use the product.

Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

## TABLE OF CONTENTS

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>CHAPTER 1. BEFORE USING YOUR PHONE .....</b>   | <b>5</b>  |
| INSIDE THE PACKAGE .....                          | 6         |
| HANDSET DESCRIPTION .....                         | 7         |
| THE FUNCTION KEYS .....                           | 8         |
| DISPLAY INDICATORS .....                          | 9         |
| <b>BATTERY USAGE .....</b>                        | <b>11</b> |
| BATTERY INSTALLATION .....                        | 11        |
| BATTERY REMOVAL .....                             | 11        |
| BATTERY CHARGING .....                            | 12        |
| POWER CONNECTION .....                            | 12        |
| PCS AND 1X BATTERY TIMES .....                    | 13        |
| BATTERY LIFE (FOR NEW BATTERY) .....              | 13        |
| <b>BATTERY HANDLING INFORMATION .....</b>         | <b>14</b> |
| DOS .....                                         | 14        |
| DON'Ts .....                                      | 14        |
| <b>CHAPTER 2. BASIC OPERATION .....</b>           | <b>15</b> |
| TURNING THE PHONE ON / OFF .....                  | 16        |
| TURNING THE PHONE ON .....                        | 16        |
| TURNING THE PHONE OFF .....                       | 16        |
| ACCESSING THE MENU .....                          | 17        |
| MENU SUMMARY .....                                | 18        |
| <b>BASIC FUNCTIONS .....</b>                      | <b>20</b> |
| MAKING A CALL .....                               | 20        |
| ANSWERING CALLS .....                             | 21        |
| SPEAKER PHONE .....                               | 21        |
| WAIT/PAUSE FEATURE .....                          | 22        |
| ANSWERING A CALL .....                            | 22        |
| 3-WAY CALLING .....                               | 23        |
| CALLER ID FUNCTION .....                          | 23        |
| CALL WAITING FUNCTION .....                       | 24        |
| ADJUSTING VOLUME .....                            | 24        |
| KEY GUARD .....                                   | 25        |
| <b>DURING A CALL .....</b>                        | <b>26</b> |
| MUTE (UNMUTE) .....                               | 26        |
| SEND TXT MSG .....                                | 26        |
| SEND PIX MSG .....                                | 26        |
| CONTACTS .....                                    | 26        |
| RECENT CALLS .....                                | 26        |
| SEND DTMF .....                                   | 27        |
| VOICE PRIVACY .....                               | 27        |
| LOCATION .....                                    | 27        |
| <b>MAKING AN EMERGENCY CALL .....</b>             | <b>28</b> |
| 911 IN LOCK MODE .....                            | 28        |
| 911 USING ANY AVAILABLE SYSTEM .....              | 28        |
| <b>CHAPTER 3. MEMORY FUNCTION .....</b>           | <b>29</b> |
| STORING A PHONE NUMBER .....                      | 30        |
| ENTERING LETTERS, NUMBERS & SYMBOLS .....         | 31        |
| STANDARD INPUT MODE .....                         | 32        |
| T9 INPUT MODE .....                               | 33        |
| NUMERIC MODE .....                                | 34        |
| SYMBOL MODE .....                                 | 34        |
| <b>MAKING A CALL THROUGH THE PHONE BOOK .....</b> | <b>35</b> |
| ONE-TOUCH/TWO-TOUCH DIALING .....                 | 35        |
| ONE-TOUCH DIALING: .....                          | 35        |
| TWO-TOUCH DIALING: .....                          | 35        |
| <b>CHAPTER 4. MENU FUNCTION .....</b>             | <b>37</b> |
| CONTACTS .....                                    | 38        |
| NEW CONTACT .....                                 | 38        |
| CONTACT LIST .....                                | 39        |
| GROUPS .....                                      | 40        |
| ADD NEW GROUP .....                               | 40        |

## TABLE OF CONTENTS

|                                    |    |
|------------------------------------|----|
| ASSIGN PHONE NUMBER TO GROUP ..... | 40 |
| CHANGE GROUP NAME .....            | 41 |
| SEND TXT MSG. GROUP .....          | 41 |
| SEND PIX MSG. GROUP .....          | 42 |
| ERASE GROUP .....                  | 42 |
| SPEED DIALS .....                  | 43 |
| RECENT CALLS .....                 | 44 |
| MISSED .....                       | 44 |
| RECEIVED .....                     | 45 |
| DIALED .....                       | 46 |
| ALL .....                          | 47 |
| VIEW TIMERS .....                  | 48 |
| SETTINGS .....                     | 49 |
| SOUNDS .....                       | 49 |
| MASTER VOLUME .....                | 49 |
| CALL SOUND .....                   | 50 |
| ALERT SOUNDS .....                 | 51 |
| KEYPAD VOLUME .....                | 53 |
| EARPIECE VOLUME .....              | 53 |
| SERVICE ALERTS .....               | 54 |
| POWER ON/OFF SOUNDS .....          | 55 |
| ALARM SOUNDS .....                 | 56 |
| DISPLAYS .....                     | 57 |
| BANNER .....                       | 57 |
| BACKLIGHT .....                    | 58 |
| CONTRAST .....                     | 59 |
| WALLPAPER .....                    | 59 |
| SCREENSAVER .....                  | 60 |
| DISPLAY THEMES .....               | 60 |
| FONTS .....                        | 60 |
| POWER ON/OFF ANIMATIONS .....      | 61 |
| SYSTEM .....                       | 62 |
| SYSTEM SELECT .....                | 62 |
| NAM SELECTION .....                | 63 |
| DEVICE INFO .....                  | 64 |
| LOCATION .....                     | 65 |
| SECURITY .....                     | 66 |
| LANGUAGE .....                     | 69 |
| SHORT CUT KEY .....                | 70 |
| CALL SETTINGS .....                | 71 |
| ANSWER OPTIONS .....               | 71 |
| AUTO RETRY .....                   | 72 |
| TTY .....                          | 72 |
| ONE TOUCH DIAL .....               | 73 |
| VOICE PRIVACY .....                | 73 |
| DATA SETTING .....                 | 73 |
| VOICE SERVICES .....               | 74 |
| DTMF TONES .....                   | 77 |
| CLOCK FORMAT .....                 | 78 |
| MAIN CLOCK .....                   | 78 |
| FRONT CLOCK .....                  | 78 |
| RINGER ID .....                    | 79 |
| PICTURE ID .....                   | 79 |
| TOOLS .....                        | 80 |
| CALENDAR .....                     | 80 |
| ALARM CLOCK .....                  | 82 |
| WORLD CLOCK .....                  | 83 |
| NOTEPAD .....                      | 84 |
| ADD MEMO .....                     | 84 |
| VIEW MEMO .....                    | 84 |
| CALCULATOR .....                   | 85 |
| STOP WATCH .....                   | 86 |

## TABLE OF CONTENTS

|                                                        |           |
|--------------------------------------------------------|-----------|
| <b>CHAPTER 5. GET IT NOW .....</b>                     | <b>87</b> |
| GET IT NOW .....                                       | 88        |
| GET TUNES & TONES .....                                | 88        |
| DOWNLOADING NEW TUNES & TONES .....                    | 88        |
| TO RECORDING NEW TONES .....                           | 88        |
| USING DOWNLOADED TUNES & TONES .....                   | 89        |
| GET FUN & GAMES .....                                  | 90        |
| DOWNLOADING NEW FUN & GAMES .....                      | 90        |
| PLAYING DOWNLOADED FUN & GAMES .....                   | 90        |
| GET PIX & FLIX .....                                   | 91        |
| TO TAKE PIX .....                                      | 91        |
| GALLERY .....                                          | 93        |
| PIX PLACE .....                                        | 94        |
| PIX SERVICES .....                                     | 94        |
| GET NEWS & INFO .....                                  | 95        |
| CONNECTING NEWS & INFO .....                           | 95        |
| GET GOING .....                                        | 96        |
| CONNECTING GET GOING .....                             | 96        |
| <b>CHAPTER 6. VOICE MAIL, TXT, PIX MESSAGING .....</b> | <b>97</b> |
| WHEN A NEW MESSAGE ARRIVES .....                       | 98        |
| VOICE MAIL .....                                       | 98        |
| NEW TXT MSG .....                                      | 99        |
| NEW PIX MSG .....                                      | 100       |
| INBOX .....                                            | 102       |
| REPLY WITH COPY .....                                  | 102       |
| FORWARD .....                                          | 103       |
| SAVE PICTURE .....                                     | 103       |
| SAVE SOUND .....                                       | 103       |
| SAVE QUICK TEXT .....                                  | 103       |
| ADD TO CONTACTS .....                                  | 103       |
| LOCK/UNLOCK .....                                      | 104       |
| MESSAGE INFO .....                                     | 104       |
| SENT .....                                             | 105       |
| FORWARD .....                                          | 105       |
| RESEND .....                                           | 106       |
| ERASE .....                                            | 106       |
| ADD TO CONTACTS .....                                  | 106       |
| LOCK/UNLOCK .....                                      | 106       |
| SAVE QUICK TEXT .....                                  | 106       |
| MESSAGE INFO .....                                     | 106       |
| DRAFTS .....                                           | 107       |
| SEND .....                                             | 107       |
| ADD TO CONTACTS .....                                  | 107       |
| LOCK/UNLOCK .....                                      | 107       |
| SAVE QUICK TEXT .....                                  | 107       |
| E-MAIL .....                                           | 108       |
| MOBILE IM .....                                        | 109       |
| CHAT .....                                             | 110       |
| ERASE ALL .....                                        | 111       |
| SETTINGS .....                                         | 112       |
| AUTO SAVE .....                                        | 112       |
| AUTO ERASE .....                                       | 112       |
| AUTO VIEW TXT .....                                    | 113       |
| AUTO RECEIVE .....                                     | 113       |
| SIGNATURE .....                                        | 114       |
| CALLBACK# .....                                        | 114       |
| VOICE MAIL# .....                                      | 115       |
| BLOCK/UNBLOCK .....                                    | 115       |
| ENTRY MODE .....                                       | 116       |
| QUICK TEXT .....                                       | 116       |
| FONT SIZE .....                                        | 117       |

## TABLE OF CONTENT

|                                                 |            |
|-------------------------------------------------|------------|
| <b>CHAPTER 7. MOBILE WEB 2.0</b>                | <b>119</b> |
| STARTING INTERNET BROWSER                       | 120        |
| ACCESS THE INTERNET                             | 120        |
| BROWSER MENU                                    | 120        |
| VZW HOME                                        | 120        |
| BACK                                            | 120        |
| FORWARD                                         | 120        |
| REFRESH                                         | 121        |
| HISTORY                                         | 121        |
| ADDRESS                                         | 121        |
| CLEAR MEMORY                                    | 121        |
| SETTINGS                                        | 122        |
| ADVANCED                                        | 122        |
| EXIT                                            | 122        |
| <b>CHAPTER 8. SAFETY AND WARRANTY</b>           | <b>123</b> |
| SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES | 124        |
| DRIVING SAFETY                                  | 125        |
| ELECTRONIC DEVICES                              | 126        |
| OTHER SAFETY GUIDELINES                         | 127        |
| PRECAUTIONS                                     | 128        |
| SAFETY INFORMATION FOR FCC RF EXPOSURE          | 129        |
| CAUTIONS                                        | 129        |
| SAR INFORMATION                                 | 130        |
| FDA CONSUMER UPDATE                             | 132        |
| PROTECT YOUR WARRANTY                           | 136        |
| 12 MONTH LIMITED WARRANTY                       | 137        |

# Chapter 1

## BEFORE USING YOUR PHONE

This chapter provides important information about using the TX-215 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

"Licensed by QUALCOMM Incorporated under one or more of the following Patents : U.S.Patent No. 4,901,307 U.S.Patent No. 5,056,109 U.S.Patent No. 5,099,204 U.S. Patent No. 5,101,501 U.S. Patent No. 5,103,459 U.S. Patent No. 5,107,225 U.S.Patent No. 5,109,390."

 
## INSIDE THE PACKAGE

IC  
1


This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.




Handset

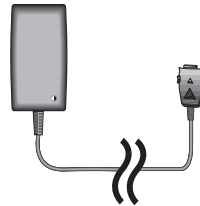

AC Travel Charger

 

User Manual

 

Handstrap



Standard Battery

6


## HANDSET DESCRIPTION

 The TX-215 weighs 3.7oz. The dimensions are 1.83" x 4.48" x 0.97".

IC  
1

7

## HANDSET DESCRIPTION

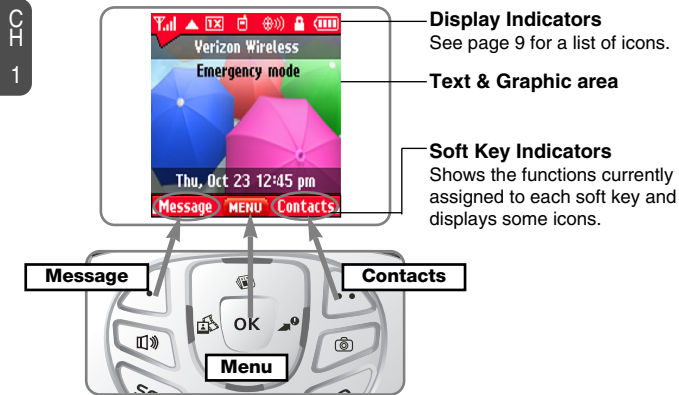

### THE FUNCTION KEYS



- Press to make or receive a call.
- Press to turn the phone on/off, to terminate a call or to return to the initial page.
- (Left Soft Key) Press to access the message menu or function displayed on bottom line.
- (Right Soft Key) Press to access contacts menu or function displayed on bottom line.
- Press to clear a digit from the display or to return to the previous page.
- Press and hold to enter etiquette mode.
- Press and hold to enter lock mode.

## HANDSET DESCRIPTION

### DISPLAY INDICATORS

- Signal Strength** - Current signal strength: the more lines, the stronger the signal.
- Roaming**  
Phone is out of home area.
- 1X**  
Phone is in the 1x service area.
- Digital mode**  
Phone is operating in digital mode.
- Voice Privacy**  
Indicates "Voice Privacy" mode.
- SSL**
- Dormant**  
Indicates your phone is in a dormant state during a data call. Your phone goes to Dormant mode when you have not had any activity on a page for some time - your connection is still active and now you can make and receive calls.
- No Service**  
Indicates the phone cannot receive a signal from the system.
- Voice**
- Data Active**
- TTY**  
Indicates your phone is in TTY mode is active.
- GPS Icon**  
Indicates the Location Service of your phone is disabled/enabled.
- Locked**  
Indicates your phone is locked.
- Battery**  
Battery charging level – the more blocks, the stronger the charge.

## HANDSET DESCRIPTION

 IC  
1


### Alarm Only

Phone will Alarm Only when call is received.



### Vibrate On

Phone will vibrate when call is received.



### All Off

Indicates the ringer volume is set to off.



### Missed Call



### Voice Mail

indicates you have voicemail messages.



### New Message

New TXT or voice message.



### Calendar Appointment

Indicates Event Alarm is active.



### Data Only

Receives an async. call as a voice call.



### Speaker Phone

Phone is in speaker phone mode.



### Auto Answer

 
Phone is in answering machine mode.

## BATTERY USAGE

### BATTERY INSTALLATION

1


① Place the battery on the back of the handset and slide into place. ② Push the battery down until it locks into place.

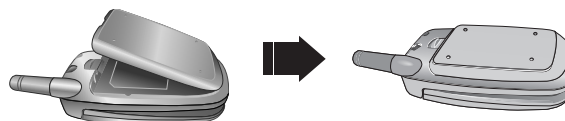

### BATTERY REMOVAL

1

 ① Pull down the release latch, lift up the battery and ② remove the battery from the handset.



If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.

 
BATTERY USAGE

IC  
1

BATTERY CHARGING

POWER CONNECTION

- 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed onto the phone.

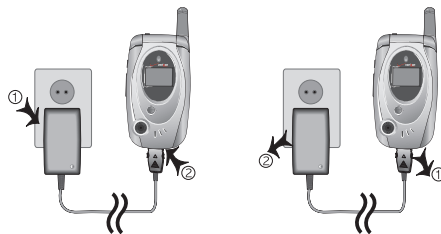

- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY USAGE

PCS AND 1X BATTERY TIMES

The operating time is subject to your handset usage and configuration.

| Battery Capacity | DCS         | PCS         |
|------------------|-------------|-------------|
| STD 1000 mAh     | Up to 162 m | Up to 160 m |
| EXT 1700 mAh     | Up to 282m  | Up to 270 m |

BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

| Battery Capacity | DCS       | PCS       |
|------------------|-----------|-----------|
| STD 1000 mAh     | 190 Hours | 172 Hours |
| EXT 1700 mAh     | 326 Hours | 293 Hours |



These times are for a new battery. Usage and Standby time may decrease over time.

## BATTERY HANDLING INFORMATION

IC  
1

### DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C ) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

### DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

## Chapter 2

### BASIC OPERATION

CH  
2

This chapter addresses and explains the basic features of your phone including:

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

## TURNING THE PHONE ON / OFF

### TURNING THE PHONE ON

- 1 Press and hold  until your "Power On" logo appears and the tone sounds.



- To select a logo, refer to page 59 for more details. (Settings>Display>Wallpaper) for more detail.
- If "Password" appears on the display enter your 4-digit password to unlock your phone.
- The default password is the last 4 digit of your phone number.

### TURNING THE PHONE OFF

 
- 1 Press and hold  until your "Power Off" logo appears.



- Immediately change or recharge the battery when "LOW BATTERY!! PHONE IS TURNING OFF!" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

## ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.

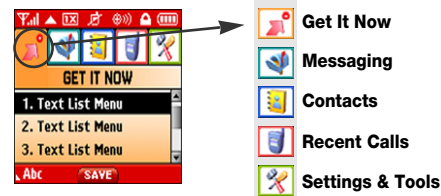

- 1 To access the menu in the idle mode, press  [MENU].
- 2 Use the Navigation Key to scroll through the menu.
  - To search through the menu in numerical order, press the Navigation Key.
- 3 To return to the previous page, press  . To exit the current menu and return to the idle mode, press  .
- 4 Press the Navigation Key to enter a function when its main page is displayed or press its assigned number to have direct access to the function.



#### Hotkey

In idle mode, move the Navigation Key as follows to access these functions:

- Upward movement : Web Browser
- Downward movement : Short Cut Key
- Rightward movement : Get It Now
- Leftward movement : Get Pix & Flix

## MENU SUMMARY

|                                                                                                               |                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Get It Now</i>            | <ol style="list-style-type: none"> <li>1. Get Tunes &amp; Tones</li> <li>2. Get Fun &amp; Games</li> <li>3. Get Pix &amp; Flix</li> <li>4. Get News &amp; Info</li> <li>5. Get Going</li> </ol>                                | <ol style="list-style-type: none"> <li>1. Get New</li> <li>2. Record New</li> <li>1. Take Pix</li> <li>2. Gallery</li> <li>3. Pix Place</li> <li>4. Pix Service</li> </ol>                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Messaging</i>             | <ol style="list-style-type: none"> <li>1. New Txt Msg</li> <li>2. New Pix Msg</li> <li>3. Inbox</li> <li>4. Sent</li> <li>5. Drafts</li> <li>6. Voicemail</li> <li>7. E-mail</li> <li>8. Mobile IM</li> <li>9. Chat</li> </ol> |                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Contacts</i>              | <ol style="list-style-type: none"> <li>1. New Contact</li> <li>2. Contact List</li> <li>3. Groups</li> <li>4. Speed Dials</li> </ol>                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Recent Calls</i>          | <ol style="list-style-type: none"> <li>1. Missed</li> <li>2. Received</li> <li>3. Dialed</li> <li>4. All</li> <li>5. View Timers</li> </ol>                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Settings &amp; Tools</i>  | <ol style="list-style-type: none"> <li>1. Tools</li> <li>2. Sounds</li> </ol>                                                                                                                                                  | <ol style="list-style-type: none"> <li>1. Calendar</li> <li>2. Alarm Clock</li> <li>3. World Clock</li> <li>4. Notepad</li> <li>5. Calculator</li> <li>6. Stop Watch</li> <li>1. Master Volume</li> <li>2. Call Sound</li> <li>3. Alert Sounds</li> <li>4. Keypad Volume</li> <li>5. Earpiece Volume</li> <li>6. Service Alerts</li> <li>7. Power On/Off Sounds</li> <li>8. Alarm Sounds</li> </ol> | <ol style="list-style-type: none"> <li>1. Alarm 1</li> <li>2. Alarm 2</li> <li>3. Alarm 3</li> <li>1. Call Ringtone</li> <li>2. Call Vibrate</li> <li>1. ERI Tones</li> <li>2. TXT Message</li> <li>3. Pix Message</li> <li>4. Voicemail Msg</li> <li>1. Service Change</li> <li>2. Minute Beep</li> <li>3. Call Connect</li> <li>1. Power On Sound</li> <li>2. Power Off Sound</li> <li>1. Alarm Tone</li> <li>2. Alarm Vibrate</li> </ol> |

## MENU SUMMARY

|  |                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ol style="list-style-type: none"> <li>3. Displays</li> <li>4. System</li> <li>5. Call Settings</li> <li>6. Clock Format</li> <li>7. Ringer ID</li> <li>8. Picture ID</li> </ol> | <ol style="list-style-type: none"> <li>1. Banner</li> <li>2. Backlight</li> <li>3. Contrast</li> <li>4. Wallpaper</li> <li>5. Screensaver</li> <li>6. Display Themes</li> <li>7. Fonts</li> <li>8. Power On/Off Animations</li> <li>1. System Select</li> <li>2. NAM Selection</li> <li>3. Device Info</li> <li>4. Location</li> <li>5. Security</li> <li>6. Language</li> <li>7. Short Cut Key</li> <li>1. Answer Options</li> <li>2. Auto Retry</li> <li>3. TTY</li> <li>4. One Touch Dial</li> <li>5. Voice Privacy</li> <li>6. Data Setting</li> <li>7. Voice Services</li> <li>8. DTMF Tones</li> <li>1. Main Clock</li> <li>2. Front Clock</li> </ol> | <ol style="list-style-type: none"> <li>1. Personal</li> <li>2. ERI Banner</li> <li>1. LCD</li> <li>2. Keypad</li> <li>1. Power On Animation</li> <li>2. Power Off Animation</li> <li>1. Auto NAM</li> <li>2. Change NAM</li> <li>1. My Number</li> <li>2. SW Version</li> <li>3. Icon Glossary</li> <li>1. Common Code</li> <li>2. Lock Mode</li> <li>3. Edit Code</li> <li>4. Special #'s</li> <li>5. Erase All</li> <li>6. Reset Phone</li> <li>1. Voice Dials</li> <li>2. Voice Setting</li> <li>3. Voice Memo</li> <li>4. Train Words</li> </ol> |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## BASIC FUNCTIONS

### MAKING A CALL

- 1 Enter a phone number.



#### To modify the phone number you have entered :

- To erase one digit at a time press .
- To erase the entire number, press and hold .

#### To find the phone number with you'r contact list :

- To enter a part of the phone number, then press [Options], select "Search".

#### Phone number display in contact list

If contact's name field empty, then highest priority phone number displayed. If any phone number and name is not exist then email address diplay. Referece "Contact display order".

All matching entries will be displayed. To call the selected number, press .

#### To send the txt or pix message with phone number :

- To enter a part of the phone number, then press [Options], select "Send Txt Msg or Send Pix Msg". Please refer to page 99 or page 100 for more details on "Send TXT Msg or Send Pix Msg".

- 2 Press .  
The indicator, , appears on the display.



- If "CALL FAILED" appears on the display or the line is busy, press or .
- If you activate the "AUTO RETRY" function, the phone will automatically retry for the number of times you have selected. (refer to page 72).
- When you place or receive a call from stored phone numbers, both the name or phone number will be displayed.
- There is another way to make a call through the VR mode, which is called "VAD (Voice Activated Dialing)". Please refer to page 74 (Voice Service) for more details.
- If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your phone.

- 3 To end a call, press .

## BASIC FUNCTIONS

### ANSWERING CALLS

- 1 When your phone rings or vibrates, press to answer the incoming call.  
(Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any digit key.)



To ignore incoming calls, press [Ignore].

- 2 To end a call, press .

### SPEAKER PHONE

The speaker phone feature lets you hear audio through the speaker and talk without holding the phone.

- 1 To activate the speaker phone in idle, answering or calling modes, press and hold .
- 2 The phone returns to normal (Speaker Phone Off) after ending a call or when the phone is turned off and back on.

## BASIC FUNCTIONS

### WAIT/PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.

- 1 To insert a wait/pause, enter a phone number then press  [OPTIONS]. Select either a Hard Pause ("P" appears) or a Wait ("W" appears).
- 2 Press  to dial or  to save.  
Please refer to page 30 for more details about storing a phone number.

### ANSWERING A CALL

- 1 To answer a call, press any key except , , , , ,  or .

- By pressing  [MENU] then select "Settings & Tools" menu, press  , you can select either "Flip Open", "Any Key" or "Send Only" to answer a call. If "Send Only" is selected, the phone can only be answered by pressing . See page 71 for more information.

- 2 To end the call, press .



*In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 71 for more details.*

## BASIC FUNCTIONS

### 3-WAY CALLING

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.

- 1 Enter a number you wish to call then press .
- 2 Once you have established the connection, enter the second number you wish to call then press .
- 3 When you're connected to the second party, press  again to begin your three-way call.



*If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.*

### CALLER ID FUNCTION

Identifies caller by displaying their phone number. If the caller's name and number are already stored in your phone book, they both will appear. The caller ID is stored in the call history.

## BASIC FUNCTIONS

### CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press again.



*Call Waiting is a system dependent feature. Please contact your service provider for details.*

### ADJUSTING VOLUME

Adjusts the volume of the ringer, key beep and speaker.

- 1 Press [MENU], then select "Settings & Tools" menu, press then select one of the following.

- **Master Volume** : Controls the ringer volume.
- **Keypad Volume** : Controls the keypad volume.
- **Earpiece Volume** : Controls the earpiece volume.

- 2 Adjust volume then press [OK] to save it.



- To adjust earpiece volume during a call, press the Navigation Key up or down.
- To adjust master volume, press short side up/ down key.
- **In Idle Mode:**  
Side Volume Up key Long Press: Volume key shall bring device out of silence.  
Side Volume Down key Long Press: Switch between on/off sound including alarm but except speaker.

## BASIC FUNCTIONS

### ENTER LOCK MODE

- 1 To lock the phone, press and hold .
- 2 To unlock the phone, press or [UNLOCK], then input your password, then press [OK].

- The lock feature will deactivate when the phone is powered off. Upon next power up, you will need to press to lock phone again.

## DURING A CALL

To display menu options during a call, press [Options].

### MUTE (UNMUTE)

The caller cannot hear you or any sounds from your side but you can still hear them.

**1** Press [Mute].

- To deactivate, press [UNMUTE].
- The phone will automatically un-mute in Emergency Call or Callback mode.

### SEND TXT MSG

Enables you to send a TXT message (SMS) during a call.

**1** Press [OPTIONS] .

### SEND PIX MSG

Enables you to send a Pix message (MMS) during a call.

**1** Press [OPTIONS] .

### CONTACTS

To select the phone number in your internal Contact List.

**1** Press [OPTIONS] .

### RECENT CALLS

To select the phone number in your recent calls List.

**1** Press [OPTIONS] .

## DURING A CALL

### SEND DTMF

Automatically transmits your phone number to a pager during a call. (Dependent on pager service)

**1** Press [OPTIONS] .

### VOICE PRIVACY

Increases security during a call.

**1** Press [OPTIONS] .

### LOCATION

Enables the network to locate your current location through Global Positioning System (GPS). (Refer to page 66 for more details.)

**1** Press [OPTIONS] .

## MAKING AN EMERGENCY CALL

The 911 feature puts the phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.

### 911 IN LOCK MODE

The 911 call service is available even in the lock mode.

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone exits the Lock Mode for 5 minutes.

- When the call ends, the phone returns to the Lock Mode.

### 911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone maintains the Emergency Mode for 5 minutes.

- The phone returns to the Lock Mode.
- While the phone is in the emergency mode for 5 minutes, the phone can receive an incoming call from any available system. However, it can't make a call.



The 911 call is not recorded in the recent call list.

## Chapter 3 MEMORY FUNCTION

This chapter addresses memory functions including:

- STORING A PHONE NUMBER
- ENTERING LETTERS, NUMBERS & SYMBOLS
- MAKING A CALL THROUGH THE PHONE BOOK

## STORING A PHONE NUMBER

 
The phone book stores up to 500 entries.

- 1 Enter phone # then press [SAVE] then choose "Create New" or "Update Existing". Press [OK] to select.
- 2 If "Create New" is selected, the phone number will appear above a list. Press the Navigation Key up or down to choose the type of number you're adding, as indicated by the icon. Press [OK] to select. If "Update Existing" is selected, your contact list is displayed. Choose the entry to add the phone number to, then press [OK]. You will then see the phone number listed about a list. Press [OK] to select.
- 3 Enter a name.  
Please refer to page 31 for more details on entering letters, numbers & symbols.  
To change the input mode, press [Abc]. Press the Navigation Key down to select other options (Mobile1.2, E-mail1.2, etc...).  
If entered phone number, press [OPTIONS] to select one of the following options:
  - Set Speed Dial
  - Set Voice Dial
  - Set As Default
  - Add Pause
- 4 To store the entry, press [SAVE].  
"CONTACT SAVED" will be displayed.

## ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 4 available modes ; Standard input mode (Abc), T9 input mode (T9Word), Numeric mode (123), and Symbol mode (Symbols).

The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 5 modes below, press [MODE], then enter letters and numbers.

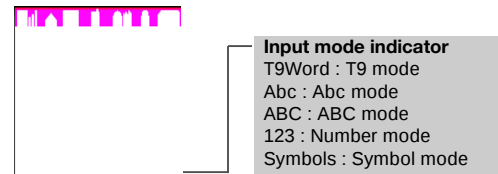

The following illustrates the function assigned to each key in the Alpha Editor.

| KEY       | FUNCTION                                                                                                                                                                                                                                             |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode      | Press to change mode.<br>[T9Word][Abc][ABC][123][Symbols]                                                                                                                                                                                            |
| Next      | Press to view the next matching word if the highlighted word is not the word you intended.                                                                                                                                                           |
| Space     | Press to accept a word and add a space.                                                                                                                                                                                                              |
| Caps Lock | Press to select a letter case of the standard text input or T9 text input mode.<br>[Abc], [ABC] and [abc] indicate the standard text input.<br>[T9Word], [T9WORD] and [T9word] indicate the predictive text input.<br>Press and hold to change mode. |
| Clear     | Press to delete a character to the left of the cursor.                                                                                                                                                                                               |
| Send      | Send the letters and numbers you enter.                                                                                                                                                                                                              |

## ENTERING LETTERS, NUMBERS & SYMBOLS

### STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

- 1 Enter letters using the key pad as follows:

| Key Pad | 1 Time | Repetitions 2 times | Repetitions 3 times | Repetitions 4 times | Repetitions 5 times |
|---------|--------|---------------------|---------------------|---------------------|---------------------|
| 1       | .      | @                   | ?                   | !                   | -                   |
| 2ABC    | A      | B                   | C                   | 2                   | A                   |
| 3DEF    | D      | E                   | F                   | 3                   | D                   |
| 4GHI    | G      | H                   | I                   | 4                   | G                   |
| :       | :      | :                   | :                   | :                   | :                   |
| 9WXYZ   | W      | X                   | Y                   | Z                   | 9                   |

To change the input mode, press [Abc].

- 2 To enter a space, press . The cursor will automatically move to the next column.
- 3 Repeat until letters are entered.  
There is a 16-letter limit.
- 4 To delete one digit, press . If you press and hold , it will delete letters word by word, and numbers in whole.
- 5 To change from lowercase to uppercase, press .



#### Select Abc mode by pressing [Abc].

When you select this mode, the Abc icon appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.
- Press it as many times as needed for the letter to appear on the screen.

- To enter the name "John":

Press [ ] J  
 Press [ ] [ ] [ ] o  
 Press [ ] [ ] h  
 Press [ ] [ ] n

## ENTERING LETTERS, NUMBERS & SYMBOLS

### T9 INPUT MODE

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- 1 Select the T9Word mode by pressing [Abc].
- 2 Press a digit key once to enter the character you want then enter all the characters to input the word you want.
- 3 To view the next matching word, press .
- 4 To accept the matching word then enter a space, press .



To enter a compound word:

- Enter the first part of the word then press to accept it.
- Enter the last part of the word then press to enter the word.



To enter "Fun fare" in the T9 input mode.

- After you enter the 1<sup>st</sup> letter, press [Abc] to select T9 mode and to choose the lower case (T9Word).

- Press and you will see "Fun" highlighted.  
Press to select it.

- Press and until you see "ease" highlighted.  
Press to select the next matching word, you will see "fare" then enter a space.

## ENTERING LETTERS, NUMBERS & SYMBOLS

### NUMERIC MODE

Allows you to enter numbers.

- 1 Press  [Abc] and scroll to the input mode to changes to "123 (Numeric mode)".
- 2 To enter a number, press a digit key.

### SYMBOL MODE

Allows you to enter symbols.

- 1 Press  [Abc] and scroll to the input mode to changes to "Symbols (Symbol mode)".
- 2 Select symbol you want to enter with the Navigation Key.

- Use the Navigation Key to view a different line of symbols.

Press [    ],

or

Press [  ].



## MAKING A CALL THROUGH THE PHONE BOOK

### ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows phone book entries to be dialed via the keypad with only one or two key presses.

#### ONE-TOUCH DIALING:

1-9 : Press and hold the corresponding memory number for more than 1 second.

#### TWO-TOUCH DIALING:

10-22/97-99 : Press the first digit and second digits of the memory number short and long respectively.



- If no phone number is stored in the location entered, "Unsigned location" will appear on the screen.

MEMO

CH  
3

## Chapter 4

### MENU FUNCTION

CH  
4

This chapter addresses accessing the menu and using its functions and features to customize your phone.

- CONTACTS
- RECENT CALLS
- SETTINGS
- TOOLS

## CONTACTS

Stores up to 500 entries, each of which can be assigned to a group. Entries can be retrieved by name or group.

### NEW CONTACT

Adds a new entry.

- 1 Press [MENU], then select "Contacts" menu, then press "New Contact".
- 2 To enter a name or number, use the Navigation Key to select the phone book field.

#### PHONE BOOK FIELDS :

- Name/Mobile1/Home/Work/E-Mail1/Group/Picture/Ringtone/Mobile2/Fax/E-Mail2.
- Under "Mobile 1" or "Mobile 2", input the phone number, then by press [OPTIONS], you can choose from the following:
  1. Set Speed Dial
  2. Set Voice Dial
  3. Set As Default
  4. Add Pause
- Under "Picture", to select image, then by press [SET]. (Please refer to page 93 "Pix Gallery" for more details.)
- Under "Ringtone", to select tone, then by press [SET]. (Please refer to page 50 "Call Sounds" for more details.)

Please refer to page 31 for more details on entering letters, numbers & symbols.

- 3.1 To save the entry, press [SAVE].

3.2 To return to the previous page, press .



- If user not input at least one field among number, e-mail then display "Please insert at least one of phone number or E-mail" in dialogue box.
- If name field is empty in edit contact but one of phone number field inserted then saved so display phone number in contacts list.

## CONTACTS

### CONTACT LIST

Retrieves an entry by name and calls by simply pressing . You can review all the entries stored in your phone book list or quickly find an entry by entering a name or its character string.

- 1 Press [MENU], then select "Contacts" menu, then press "Contact List" or press [CONTACTS].
- 2 The list of names in your phone book is displayed alphabetically.
- 3 Enter a name or its character string or scroll through the list with the Navigation Key. Please refer to page 31 for more details on entering letters, numbers & symbols.
- 4 To edit the entry, press [EDIT]. To show detail the entry, press [VIEW]. Press [OPTIONS] to 1. New Contact, 2. Erase, 3. Send Txt Msg, 4. Send Pix Msg or 5. Call.
- 5 To call the selected number, press [OPTIONS] then select "Call" or press .

## CONTACTS

### GROUPS

Allows you to classify phone entries into groups. Existing groups include FAMILY, WORK. A maximum of 30 groups is allowed. Predefined group that can't rename or Erase. User can add group max 28 group. Allows the user to add group up to 10 phone number. The user can add, change, and erase Group.

#### ADD NEW GROUP

- 1 Press [MENU], then select "Contacts" menu, then press "Groups".
- 2 To select "New", press [NEW].
- 3 Input a new group name.
- 4 To save it, press [SAVE].

#### ASSIGN PHONE NUMBER TO GROUP

- 1 To assign phone numbers to a Group, select "Add", press [OPTION].
- 2 "unassigned" locations appear. Select a location and press [OK]. Your phone book entries will be displayed in alphabetical order.
- 3 Select the contact for the group then press [DONE]. "Contact Added to (Group Name)" will be displayed. Repeat for each location for the Group.

## CONTACTS

### CHANGE GROUP NAME

- 1 Press [MENU], then select "Contacts" menu, then press "Groups".
- 2 Select an existing group name that you have added with the Navigation Key.
- 3 To select "Rename", press [OPTIONS].
- 4 Input a new group name.
- 5 To save it, press [SAVE].

### SEND TXT MSG. GROUP

- 1 Press [MENU], then select "Contacts" menu, then press "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send Txt Msg.", press [OPTIONS].
- 4 Input a "Message", press [OPTION] to select "Save as Drafts", "Priority Level" and "Call Back #".
- 5 5.1. To send the text message, press [SEND].  
5.2. To save the text message, press [OPTIONS] then select "Save as Drafts", then press [OK].

## CONTACTS

### SEND PIX MSG. GROUP

- 1 Press [MENU], then select "Contacts" menu, then press "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send Pix Msg", press [OPTIONS].
- 4 Input a "Text", "Picture", "Sound", "Subject", press [OPTION] to select "Preview", "Add Quick Text", "Save as Drafts" and "Priority Level".
- 5 5.1. To send the pix message, press [SEND].  
5.2. To save the pix message, press [OPTIONS] then select "Save as Drafts", then press [OK].

### ERASE GROUP

- 1 Press [MENU], then select "Contacts" menu, then press "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Erase", press [OPTIONS].
- 4 Select "Yes" to erase it, press [OK].

## CONTACTS

### SPEED DIALS

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number, then press and hold the second number.

- 1 Press [MENU], then select "Contacts" menu, then press "Speed Dials".
  - 2 To assign a phone number to a location, select the location then press [SET].
  - 3 Select the contact with the Navigation Key then press [OK].
- NOTE**

  - "Unassigned" appears if the location is available.
  - To call an assigned number, press & hold the last digit of the speed dial #.
- 4 "SPEED DIAL SET" will be displayed.

## RECENT CALLS

### MISSED

Displays information about the 20 most recently missed calls.  
Place a call to a missed call number by simply pressing .

- 1 To see a list of the 20 most recently missed calls, press  [MENU], then select "Recent Calls" menu, press  "Missed". If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view missed call details, press  [OPEN].



Call details include date, time and phone number.

- 3 Press  [OPTIONS] and select "SAVE" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : To view the caller's information.
- **Erase** : To erase a missed calls list.
- **Lock/Unlock** : To lock or unlock missed calls list.
- **Erase All** : To erase all missed calls list.
- **View Timers** : To display usage time.



- After 20 missed calls, the oldest call will automatically be erased from the history.
- Press  [MESSAGE], to send the Txt or Pix message.

## RECENT CALLS

### RECEIVED

Displays information about the 20 most recently answered calls.  
Place a call to a received call by simply pressing .

- 1 To see a list of the 20 most recently answered calls, press  [MENU], then select "Recent Calls" menu, press  "Received". If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view incoming call details, press  [OPEN].



Call details include date, time and phone number.

- 3 Press  [OPTIONS] and select "SAVE" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : To view the caller's information.
- **Erase** : To erase a received calls list.
- **Lock/Unlock** : To lock or unlock received calls list.
- **Erase All** : To erase all received calls list.
- **View Timers** : To display usage time.



- After 20 received calls, the oldest call will automatically be erased from the history.
- Press  [MESSAGE], to send the Txt or Pix message.

## RECENT CALLS

### DIALED

Displays information about the 20 most recently dialed numbers.  
Place a call to a dialed call by simply pressing .

- 1 To see a list of the 20 most recently dialed numbers, press [MENU], then select "Recent Calls" menu, press "Dialed".  
If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view dialed call details, press [OPEN].



Call details include type of call, date, time and phone number.

- 3 Press [OPTIONS] and select "SAVE" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : To view the caller's information.
- **Erase** : To erase a dialed calls list.
- **Lock/Unlock** : To lock or unlock dialed calls list.
- **Erase All** : To erase all dialed calls list.
- **View Timers** : To display usage time.



- After 20 dialed calls, the oldest call will automatically be erased from the history.
- Press [MESSAGE], to send the Txt or Pix message.

## RECENT CALLS

### ALL

Displays information about the most recent incoming, outgoing and missed calls.

- 1 To see a list of the 60 most recent incoming, outgoing and missed calls, press [MENU], then select "Recent Calls" menu, press "All".  
If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view details, press [OPEN].



Call details include type of call, date, time and phone number.

- 3 Press [OPTIONS] and select "SAVE" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : To view the caller's information.
- **Erase** : To erase a recent calls list.
- **Lock/Unlock** : To lock or unlock recent calls list.
- **Erase All** : To erase all recent calls list.
- **View Timers** : To display usage time.



- After the 20 received, dialed or missed calls, the oldest call will automatically be erased from the history.
- Press [MESSAGE], to send the Txt or Pix message.

## RECENT CALLS

### VIEW TIMERS

Checks the usage time and manages your calls within the limit you set. The 11 timers include (Last Call, All Calls, Received Calls, Dialed Calls, Roaming, Transmit Kilobytes, Received Kilobytes, Total Kilobytes, Last Reset, Lifetime Calls, Lifetime Data Counter):

- 1 Press  [MENU], then select "Recent Calls" menu, press  "View Timers".
- 2 To reset the timer, press  [RESET], then select "Yes", press  .  
To return to the previous page, press  [OK].

## SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

### SOUNDS

#### MASTER VOLUME

Controls the Ringer volume and alerts you to incoming calls in the modes listed in the gray box below.

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Master Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
 

- All Off
  - Alarm Only
  - Vibrate Only
  - Low, Med Low, Med, Med High, High.
  - Press  to play sound.
- 3 Select one of the available ring types.  
To confirm, press  [OK].

## SETTINGS

### CALL SOUND

To select a ringer type for incoming calls:

#### CALL RINGTONE

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Call Sound", press  "Call Ringtone".
- 2 Select your desired ringer type.
  - **Up or Down key** : Select "Ringer".
  - Press Play/Pause to Play/Pause the ringer.

- 3 Select one of the available ring types.  
To confirm, press  [OK].

#### CALL VIBRATE

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Call Sound", press  "Call Vibrate".
- 2 Select "On" or "Off" with the Navigation Key then press  [OK] to save it.

## SETTINGS

### ALERT SOUNDS

When selected, this setting alerts you to the following handset changes:

#### ERI TONES

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Alert Sounds", press  "ERI Tones".
- 2 Select "Beep", "Voice" or "Off" with the Navigation Key then press  [OK] to save it.

#### TXT MESSAGE

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Alert Sounds", press  "TXT Message".
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key then select one of the following options by pressing the Navigation Key.
  - **Tone** : Select your desired ringer type.
  - **Vibrate** : Select "On" or "Off".
  - **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".
- 3 To save, press  [OK].

## SETTINGS

### PIX MESSAGE

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Alert Sounds", press  "Pix Message".
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key then select one of the following options by pressing the Navigation Key.
  - **Tone** : Select your desired ringer type.
  - **Vibrate** : Select "On" or "Off".
  - **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".
- 3 To save, press  [OK].

### VOICEMAIL MSG

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Alert Sounds", press  "Voicemail Msg".
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key then select one of the following options by pressing the Navigation Key.
  - **Tone** : Select your desired ringer type.
  - **Vibrate** : Select "On" or "Off".
  - **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".
- 3 To save, press  [OK].

## SETTINGS

### KEYPAD VOLUME

To adjust key pad tone:

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Keypad Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
  - Off
  - Low, Med Low, Med, Med High, High
- 3 Select one of the available ring types.  
To confirm, press  [OK].

### EARPIECE VOLUME

To adjust earpiece volume:

- 1 Press  [MENU], then select "Settings & Tools" menu, press  "Sounds" then select  "Earpiece Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
  - Low, Med Low, Med, Med High, High
- 3 Select one of the available ring types.  
To confirm, press  [OK].

## SETTINGS

### SERVICE ALERTS

#### SERVICE CHANGE

Sounds an alert when leaving a service area and entering a roaming service area.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Service Alerts", press "Service Change".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

#### MINUTE BEEP

Sounds an alert every minute during a call.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Service Alerts", press "Minute Beep".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

#### CALL CONNECT

Notifies you that a call has been successfully placed.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Service Alerts", press "Call Connect".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

## SETTINGS

### POWER ON/OFF SOUNDS

#### POWER ON SOUND

Allows you to activate/deactivate the power on tones.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Power On/Off Sounds", press "Power On Sound".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

#### POWER OFF

Allows you to activate/deactivate the power off tones.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Power On/Off Sounds", press "Power Off Sound".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

## SETTINGS

### ALARM SOUNDS

To select a ringer type for alarm sound:

#### ALARM TONE

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Alarm Sounds", press "Alarm Tone".
- 2 Select your desired ringer type.

- **Up or Down key** : Select "Ringer".
- Press Play/Pause to Play/Pause the ringer.

- 3 Select one of the available ring types.  
To confirm, press [OK].

#### ALARM VIBRATE

- 1 Press [MENU], then select "Settings & Tools" menu, press "Sounds" then select "Alarm Sounds", press "Alarm Vibrate".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

## SETTINGS

### DISPLAYS

Allows you to customize the display.

#### BANNER

To input a personal/ERI banner greeting:

#### PERSONAL

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode.

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Banner", press "Personal".
- 2 Enter a new personal greeting.  
To change the input mode, press [Abc].  
To return to the previous page, press [CANCEL].
- 3 Press [OK] to save it.

#### ERI BANNER

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Banner", press "ERI Banner".
- 2 Select "On" or "Off" with the Navigation Key then press [OK] to save it.

## SETTINGS

### BACKLIGHT

Backlights the display and key pad and activates dimming for easy viewing in dark places.

#### LCD

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Backlight", press "LCD".
- 2 Select one of the following options with the Navigation Key.
  - Always On, Always Off, 5 Seconds, 15 Seconds, 30 Seconds.
- 3 Press [OK] to save it.

#### KEYPAD

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Backlight", press "Keypad".
- 2 Select one of the following options with the Navigation Key.
  - Always On, Always Off, 5 Seconds, 15 Seconds, 30 Seconds.
- 3 Press [OK] to save it.

## SETTINGS

### CONTRAST

To adjust the display contrast:

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Contrast".
- 2 Select "Main LCD" or "Sub LCD" then select one of the following options with the Navigation Key.
  - Leve 1 ~ Leve 5
- 3 Press [OK] to save it.

### WALLPAPER

- 1 Press [MENU], then select "Settings & Tools" menu, press "Displays" then select "Wallpaper".
- 2 Select Default to choose a pre-installed display, Downloads or Pix # to choose a display you have downloaded to your phone.  
To launch "BREW", press [GET NEW].  
To expand selected image, press [VIEW].
- 3 Select a display from the Animation and the Graphic list using the Navigation Key and press [SET] to save it.