

**MICROWAVE OVEN
INSTRUCTION MANUAL
EM134A2XC**

TOSHIBA



CONTENTS

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	EN-3
IMPORTANT SAFETY INSTRUCTIONS	EN-4
MATERIALS YOU CAN USE IN MICROWAVE OVEN	EN-8

PRODUCT INTRODUCTION

SETTING UP YOUR OVEN.....	EN-9
---------------------------	------

INSTRUCTION FOR USE

OPERATION INSTRUCTIONS.....	EN-12
-----------------------------	-------

MAINTENANCE

TROUBLE SHOOTING.....	EN-21
-----------------------	-------



BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allows soil or cleaner residue to accumulate on sealing surfaces.
- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Model:	EM134A2XC
Rated Voltage:	120V~60Hz
Rated Input Power (Microwave):	1500W
Rated Output Power (Microwave):	1100W

IMPORTANT SAFETY INSTRUCTIONS



When using electrical appliances basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Read all instructions before using the appliance.
- Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**" found on page 2.
- This appliance must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 6.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
- Do not immerse cord or plug in water.
- Keep cord away from heated surface.
- Do not let cord hang over edge of table or counter.
- When cleaning surfaces of door and oven that comes together on closing the

IMPORTANT SAFETY INSTRUCTIONS



door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

- To reduce the risk of fire in the oven cavity:
 - Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - Remove wire twist-ties from paper or plastic bag before placing bag in oven.
 - If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:
 - Do not overheat the liquid.
 - Stir the liquid both before and halfway through heating it.
 - Do not use straight-sided containers with narrow necks.
 - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - Use extreme care when inserting a spoon or other utensil into the container.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS



This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

DANGER

Electric Shock Hazard



Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard



Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1). Clean door and sealing surface of the oven
 - (2). Reorient the receiving antenna of radio or television.
 - (3). Relocate the microwave oven with respect to the receiver.
 - (4). Move the microwave oven away from the receiver.
 - (5). Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

This device complies with part 18 of the FCC Rules.

UTENSILS

CAUTION**Personal Injury Hazard** 

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

PRODUCT INTRODUCTION

 
SETTING UP YOUR OVEN

NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

- This illustration is for reference only. Some accessories are available only with certain models, depending on the appliance model, individual details may differ.

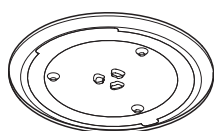

Glass Tray



 
Turntable Ring Assembly



Turntable Shaft



Instruction Manual

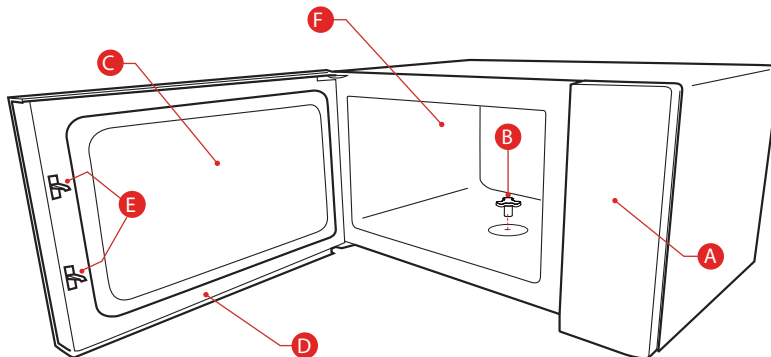


A) Control panel
B) Turntable shaft
C) Observation window

D) Door assembly
E) Safety interlock system
F) Oven cavity

SETTING UP YOUR OVEN


TURNTABLE INSTALLATION

 Cleaning the cooking compartment and putting the turntable in place.
For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

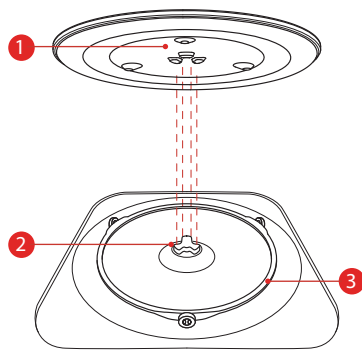

How to put the turntable in place:

 1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the centre of the cooking compartment floor. The rollers on the ③ should fit inside the turntable bottom ridge.

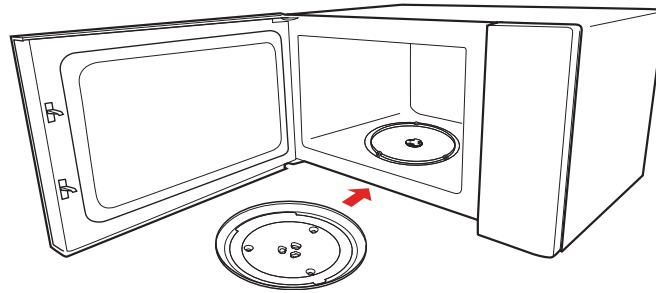

Note

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

PRODUCT INTRODUCTION

SETTING UP YOUR OVEN

 
COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

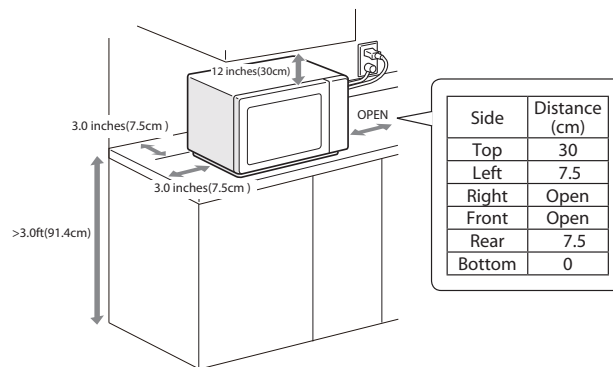

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open. The minimum installation height is 3.0ft (91.4cm).

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.
- (3) Blocking the intake and/or outlet openings can damage the oven.
- (4) Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

 
Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

INSTRUCTION FOR USE

OPERATION INSTRUCTIONS

CONTROL PANEL

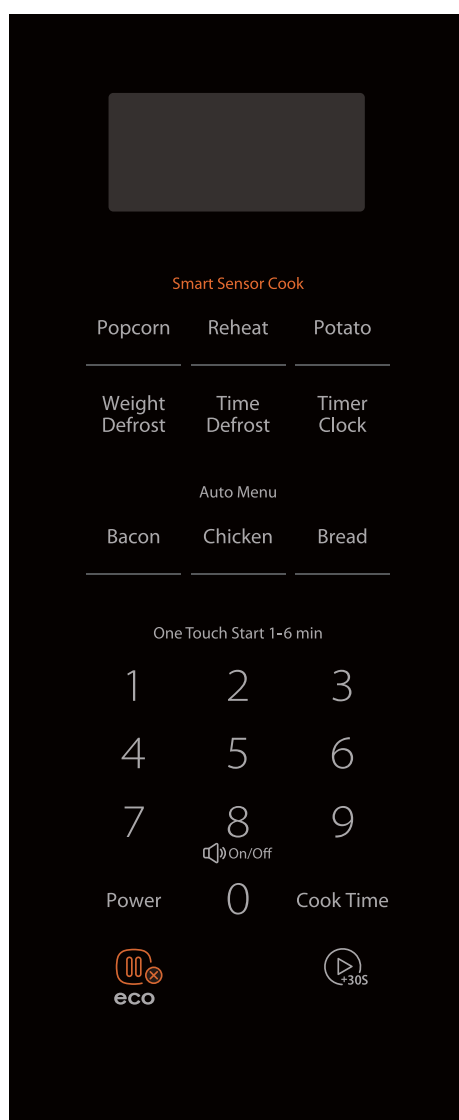

OPERATION INSTRUCTIONS

 
This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

1.CLOCK SETTING


- 1** In waiting state, **press** "Timer/Clock " once,
"0:00" displays. Hour figures flash.



- 2** **Press** number keys to enter the time.
Example: To set the clock to 12:10, please press
"1,2,1,0" in turn.

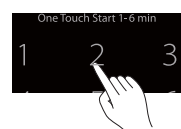

 - 3** **Press** "Timer/Clock " to confirm. The clock is set.

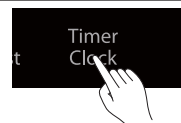

NOTE

- If the clock is not set, it would not function when powered.
- During the process of clock setting, if no operation in 1 minute, the oven will go back to the previous status automatically.
- If the entered number is not within the range of 1:00-12:59, the setting is invalid.
- To reset the clock, please repeat step 1 to step 3.

INSTRUCTION FOR USE

OPERATION INSTRUCTIONS

2. MICROWAVE COOKING


Microwave Power Chart

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0


- 1** Press the "Cook Time" key once,
"00:00" displays.



 - 2** Press number keys to enter the time.
The maximum time value is "99:99".

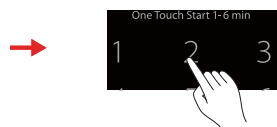

 - 3** Press "Power" for times or press number key to
adjust the power level. The 11 power levels are
available.

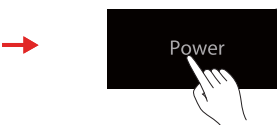

- 4** Press "▶30s" to start cooking.



NOTE

- If the clock is not set, it would not function when powered.
- During the process of clock setting, if no operation in 1 minute, the oven will go back to the previous status automatically.

 
OPERATION INSTRUCTIONS

3. CLOCK SETTING

- 1 In waiting state, **press** "Timer/Clock" twice, "0:00" displays.



- 2 **Press** number keys to enter the time. The maximum time value is "99:99".

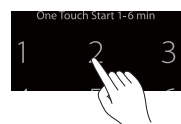

- 3 **Press** "⏮️" to confirm. The timer starts counting down.



NOTE

 
- The kitchen timer is a timer.
- During kitchen timer, any program cannot be set.

4. SPEEDY COOKING

- 1 In waiting state, **press** "⏮️" to cook food with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".



- 2 In waiting state, pressing number keys 1 to 6 let you quickly select a cooking time from 1 to 6 minutes. Then you can **press** "⏮️" to increase the cooking time. The maximum time value is "99:99".

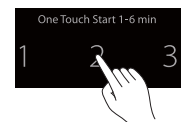

NOTE

- This function cannot work under defrost by weight and auto menu.

 
OPERATION INSTRUCTIONS


5. DEFROST BY WEIGHT

1 Press " Weight Defrost " and then the screen will display "dEF1".



2 Press number keys to enter the weight of food. The range of weight is 4-70 Oz.

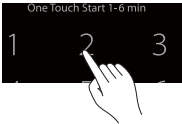

3 Press "  " to start defrosting.

 



6. DEFROST BY TIME

1 Press " Time Defrost " and then the screen will display "0:00".



2 Press number keys to set the desired defrost time. The maximum time value is "99:99".

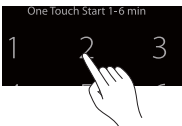

3 Press "  " to start defrosting.



NOTE

- When half of the time has passed, the buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working.

OPERATION INSTRUCTIONS


7. MULTI-STAGE COOKING

 
Two stages can be maximumly set. If one stage is defrosting, it will be put in the first stage automatically. The buzzer will ring once after each stage and the next stage will begin.


NOTE • Auto menu and preheating cannot be set as one of the multi-stage.


Example: If you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:


- 1 Press "Time Defrost" and then the screen will display "0:00".


- 2 Press "5", "0", "0" to set the desired defrost time of 5 minutes.

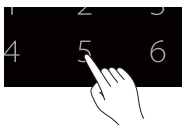
- 3 Press "Cook Time" and then press "7", "0", "0" to set the cooking time.


- 4 Press "Power" and then press "8" to set the power level.


- 5 Press "▶ 30S" to start cooking.

 


INSTRUCTION FOR USE

OPERATION INSTRUCTIONS

8. AUTO MENU

- 1** Press a menu key repeatedly to choose the weight you want to cook. For example, press " Popcorn " once and "2.75 Oz" will display.

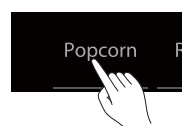

- 2** Press "  " to start cooking.




AUTO MENU CHART

Menu	Weight	Display
Popcorn	2.75 Oz	2.75 Oz
	3.2 Oz	3.2 Oz
Potato	1	1
	2	2
	3	3
	4	4
Bacon	1 slice	1
	2 slices	2
	3 slices	3
	4 slices	4
	5 slices	5
	6 slices	6
Chicken	8.81 Oz	8.81 Oz
	15.87 Oz	15.87 Oz
	22.92 Oz	22.92 Oz
Bread	1.76 Oz	1.76 Oz
	3.52 Oz	3.52 Oz
	5.29 Oz	5.29 Oz

OPERATION INSTRUCTIONS

9. SENSOR REHEAT

 - 1 In waiting state, **press** " Reheat ". The screen will display "SC01". When the oven senses, the screen displays the remaining time.

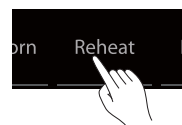

- 2 **Press** "  " to start cooking .

 


10. INQUIRING FUNCTION

- 1 If the clock has been set, the current time will display for three seconds by **pressing** " Timer/Clock " in the cooking state.




- 2 In the microwave cooking state, **press** " Power " to inquire the power level. It will display for three seconds.

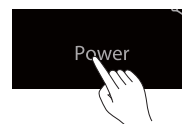


11. LOCK FUNCTION FOR CHILDREN

You can use this function to prevent children from accidentally turning the oven on.

- 1 To activate the lock: In waiting state, **press** and hold "  " for three seconds. A long beep sounds and the locked icon will display.



 
- 2 To deactivate the lock: In locked state, **press** and hold "  " for three seconds. A long beep sounds.




OPERATION INSTRUCTIONS

12. SILENT MODE


- 1 To activate the silent mode: In waiting state, **press** and hold "8" for 3 seconds. A long beep will sound. When you press the keys, it does not make a sound.

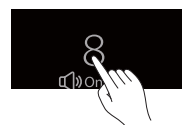

 - 2 To deactivate the silent mode: In silent mode, **press** and hold "8" for 3 seconds. A long beep will sound.

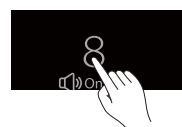

13. ECO FUNCTION

- 1 To enter ECO mode:
In waiting state, press "  ". The screen will turn off.



- 2 To cancel ECO mode:
In ECO mode, press any key to wake up the screen.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.

TROUBLE	Possible Cause	Possible Remedy
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food
Sensor cooked foods not properly cooked	a. Cover or lid on food not vented. b. Door opened before sensor-detected cooking time appears in display.	a. Cover or lid over food must contain vent hole for escaping steam. b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.