

Table of Contents

About DriverConnect	5
Terminology Important Note	
How Do I?	7
Common Functions in the DriverConnect Portal	7
User Dashboard	15
Mapping Truck and Breadcrumb Icons and Information	
Mapping Tools	
Draw Fence	
Find Nearest	
Send a Destination (Stop) to Driver	
Management Menu	42
Users Devices Asset Trackers Tractors Groups Terminal Workflow	42 51 53 55 55 57 63 70
Compliance Menu	79

Snapshot	
Hours of Service	
Vehicle Inspections	
Personal Conveyance	
HOS Violations	
Current Totals	
Driver Information	
Vehicle Information	
Unassigned Driving	
Trip Report	
ELD Events Output File	
Inspection Transfers	
Fuel Taxes Menu	
State Mileage	
State Crossings	
Fuel Purchase	115
Analytics Menu	
Metrics	
Events	
Vehicle Performance	
Vehicle Faults	
Asset Reports Menu	
Asset Events, Status, and Mileage Reports	
Asset Tracker User Guide	
Your Name	
Profile	126
Company Info	121
Terminal Info	122

DriverConnect Portal Help Subscription	141
Chat With Us	146
Sign Out	147
Messaging	148
Chats Tab	148
Contacts Tab	151
Workflow Tab	157
Page Results Options	163
Search Filters	163
Export a Report	166
Advanced Options	167
Formatting	168
Show/Hide Columns	172
Apply a Column Filter	173
Sorting	175
Contact Rand McNally Support	176

About DriverConnect



DriverConnect is an integrated platform that consists of the DriverConnect app installed on an Android[™]based device (a tablet or a smartphone), a cloudbased web portal, and a Rand McNally ELD.

The ELD automatically gathers driving data and

sends the data to an Android[™] device or tablet over Bluetooth[®]. DriverConnect uses an internet connection (cellular or Wi-Fi[™]) from the Android[™] device to store that data in a cloud-based online account. You can access this data through the DriverConnect portal.

The DriverConnect Portal:

- Automatically calculates drivers' Hours of Service (HOS).
- Displays work timers that tell you how long you have left in your driving session, shift, day, and work week.
- Displays break timers that calculate time left in your break, and how long until your work cycle restarts.
- Displays gauges with details about your engine's performance.
- Creates driving logs for Law Enforcement Officer (LEO) inspections.
- Allows messaging services between drivers and fleet managers.
- Stores more than 6 months of driving logs in the DriverConnect portal.
- Provides certifiable Driver-Vehicle Inspection Reports (DVIR).
- Automatically tracks your state-to-state driving for IFTA reporting.
- Allows you to take and store a photo of your fuel invoice.
- Provides forms-based workflows for completing common tasks.

Terminology

These terms are used throughout this guide:

- ELD is short for Electronic Logging Device. An ELD connects directly to your truck and send information over Bluetooth[®] to your Android[™] device or tablet. Your ELD refers to the specific Rand McNally ELD installed in your vehicle, such as the ELD 50 or DC 200 or DC 210.
- An Android[™] Device means the Android[™]-based smartphone or tablet on which you have installed and use the DriverConnect app.
- **HOS** means your Hours of Service. This is the amount of time spent On Duty, Driving, in the Sleeper Berth, and Off Duty.
- A DVIR is a Driver-Vehicle Inspection Report. You need to complete one before and after each driving session.
- IFTA is the International Fuel Tax Agreement. DriverConnect automatically tracks your state-to-state driving for easier IFTA reporting.
- The Fleet Manager is the individual at your organization who typically interacts with drivers by managing logs and reports, performing dispatch, etc.
- The DriverConnect app is the Android[™]-based component of DriverConnect that allows drivers to log HOS, create DVIRs, and use built-in messaging functions to communicate with other members of the fleet.

Important Note

This user manual includes instructions for all DriverConnect Portal functions. Images used in the following chapters are for example purposes only. Certain functions may not be applicable based on your subscription level.

How Do I ...?

Common Functions in the DriverConnect Portal

These questions provide a quick overview on how to do basic tasks in the DriverConnect portal.

Note: Some functions may not be available, depending on your company's subscription level and your individual access level.

All Users

How do I change my personal information, such as my name, email, or Driver ID?

Click your name in the menu bar, and select Profile (page 126). Make the changes you need and click **Update**.

How do I send messages?

Click the **Messaging** tab in the menu bar.

On the Chats Tab (page 148), click a contact's name or **New Chat** to open e messaging window. Or, on the **Contacts** tab, click a contact's name to open a new message.

Type a message and click the **Send** button.

How do I manage my contacts?

Manage contacts from the <u>Contacts Tab</u> (page 151). Contacts are uploaded automatically and include all drivers and managers in your terminal or fleet. You can create group contacts, where you can send and receive messages from multiple people at once. Use the **Contacts** tab and click **Create New Group** to get started.

How do I view my truck's location?

When you open the <u>Mapping</u> page (page 15), the map defaults to showing the last recorded location of your truck. The map also shows breadcrumbs (which mark the path you have driven) for the truck's movements over a defined time period.

How do I view my Hours of Service (HOS)?

To view a snapshot of current HOS values, click **Compliance** in the menu bar, and select **Snapshot**. The <u>Snapshot</u> page (page 79) displays HOS information for the last 8 days.

You can also select <u>Hours of Service</u> (page 83) from the **Compliance** menu. Enter a date range and click **Search**. The results show an overview of the HOS for each day. Click a row of the results table to display a detailed report that shows your HOS in a graphical format.

How do I view my driving events?

Click **Analytics** in the menu bar, and select Events (page 119). The **Events** page displays all events, including driving events.

How do I view a Driver-Vehicle Inspection Report (DVIR)?

In the **Compliance** menu, select Vehicle Inspections (page 83). Enter a date range and click **Search**. Click the text in a returned record to display the report.

How do I find information for IFTA reporting?

Note: You must have a subscription to the Core plan to access these functions.

In the Fuel Taxes menu, you can access the select State Mileage (page 110), State Crossings (page 113), and Fuel Purchase (page 115) menu options. The State Mileage page displays miles driven per state. The State Crossings page shows when state lines were crossed by each vehicle. The Fuel Purchase page displays fuel purchases logged in the DriverConnect app.

You can use the information from these pages to complete your IFTA reporting.

How do I format a report?

In a report, you can apply Formatting (page 168), Show/Hide Columns (page 172), use column Sorting (page 175), and/or Apply a Column Filter (page 173). Click in a column to access the Advanced Options menu (page 167). Choose an option and apply the changes.

When you format a report and then export it, the formatting changes you make on the screen are also exported.

How do I create a .PDF or Excel report?

To <u>Export a Report</u> (page 166), look for the PDF and Excel icons in the upper right corner (\square). Click an icon to create an exported report.

Note: The report will display exactly what appears on your screen, including the date range and all formatting options selected.

Terminal Managers

How do I change my terminal information?

Click your name in the menu bar, and select <u>Terminal Info</u> (page 138). Make the changes you need and click **Update**.

How do I view my drivers?

Click the **Management** link in the menu bar, then <u>Users</u> (page 42). Changes to user profiles must be made by the fleet manager.

How do I view my drivers' driving events?

Driving Events (page 119) are recorded duty status changes and unsafe driving conditions. Click **Analytics** in the menu bar and select Events. The **Events** page displays driving events.

How do I view my vehicles?

Click the **Management** link in the menu bar, then <u>Tractors</u> (page 55). This page displays all vehicle numbers recorded by drivers through the DriverConnect app.

How do I view ELDs registered to my terminal?

Click the **Management** link in the menu bar, then <u>Devices</u> (page 51).

How do I use driver and vehicle groups?

Use the <u>Groups</u> page (57) to add drivers or vehicles into a group for quick searches. Click **Management** in the menu bar and select Groups. Click **+ New Group** to create a new group or click on an existing group to edit. Select or deselect group members from the left column and click **Create** (or **Update**).

Fleet Managers

How do I change my subscription?

Click your name in the menu bar, and select <u>Subscription</u> (page 141). Click **Manage** to change your subscription level.

How do I add another ELD to my company?

Click your name in the menu bar, and select <u>Subscription</u> (page 141). Click **Add Device** to enter additional ELD serial numbers and add them to your fleet.

You can view the ELDs already registered to your fleet by clicking the **Management** link in the menu bar, then <u>Devices</u> (page 51).

How do I send destinations/ stops to a driver?

Use the Route function (Page 35) within the **Mapping link** to create multi-stop trips. You can then send a destination (or multiples) to a driver using the Messaging function.

How do I view my drivers' driving events?

Driving Events (page 119) are recorded duty status changes and unsafe driving conditions. Click **Analytics** in the menu bar and select Events. The **Events** page displays driving events.

How do I add a new driver or terminal manager?

Click the **Management** link in the menu bar, then <u>Users</u> (page 42). Click **+ New User**.

You can select **Driver** or **Terminal Manager** in the **Select Role** dropdown.

How do I view my vehicles?

Click the **Management** link in the menu bar, then <u>Tractors</u> (page 55). This page includes all vehicles (Tractor numbers) recorded by drivers through the DriverConnect app. Click a vehicle to assign it to a new terminal.

How do I manage my drivers and terminal managers?

Click the **Management** link in the menu bar, and select <u>Users</u> (page 42). Make the changes you need and click **Update**.

You can also click the - in a user's row to delete that user.

How do I assign a driver to a terminal?

Click the **Management** link in the menu bar, and select <u>Users</u> (page 42). Select a new terminal from the **Terminal** dropdown. Click **Update**.

How do I create and manage terminals?

Click **Management** in the menu bar, and select <u>Terminal</u> (page 63). Click **+ Terminal** to create a new one.

You can manage your terminal by clicking the text in a row. Make the changes you need and click **Update**.

You can also click the - in a row to delete that terminal.

How do I use driver and vehicle groups?

Use the <u>Groups</u> page (57) to add drivers or vehicles into a group for quick searches. Click **Management** in the menu bar and select Groups. Click **+ New Group** to create a new group or click on an existing group to edit. Select or deselect group members from the left column and click **Create** (or **Update**).

How do I create a new workflow?

Click the **Management** link in the menu bar, and select Workflow (page 63). Click + **Create New**.

How do I edit a workflow?

Click the **Management** link in the menu bar, and select Workflow (page 63). Click a row. In the **Action** dropdown menu, select **Edit**.

How do I send a form to a driver?

Click the **Messaging** tab in the menu bar, and click the Chats Tab (page 148). Click the paperclip icon, select **Form**, and choose a form to send from the dropdown menu.

How do I send a workflow to a driver?

Click the **Messaging** tab in the menu bar, and click the <u>Workflow Tab</u> (page 157). Click **+ New Workflow**. Select a driver and a workflow, enter completion times, and click **Send Workflow**.

How do I view the status of a workflow?

Click the **Messaging** tab in the menu bar, and click the <u>Workflow Tab</u> (page 157). The workflows in progress display, with statuses for each task and the workflow overall.

Click a workflow in progress to view information, including completed forms.

How do I change my company information?

Click your name in the menu bar, and select <u>Company Info</u> (page 131). Make the changes you need and click **Update**.

User Dashboard

The **Mapping** page displays upon login. This is your dashboard and allows you to track the location and movement of your truck(s).

Mapping

Mapping

The **Mapping** page is the first page you see when you log in to DriverConnect. This page displays a map showing the most recent location of each vehicle registered to you.

When connected to the internet, the DriverConnect app sends location information to the portal. This includes the truck's current (most recent) location, previous locations, HOS timers, and events. See below for more information.

- If you are a Driver: You will only see location information for the most recent truck you have used.
- If you are a Fleet Manager (FM): You will see the location and GPS information of all trucks registered to your fleet. You can view the most recent locations for each vehicle (going back 15 days). Select a driver to access driving in 7-day increments.
- If you are a Terminal Manager (TM): You will see location and GPS information of all trucks registered to your terminal. You can view the most recent locations for each vehicle (going back 15 days). Select a driver to access driving history in 7-day increments.



On the Tractor Mapping page, you can:

- 1. Select your filters from the dropdown menus and click **Search**. See how to use Search Filters (page 163). If you are a driver, only your information displays.
- Click a truck or breadcrumb icon to view more information about the vehicle, including tractor and driver information, current HOS statuses and timers, and events.

Selected trucks are outlined in yellow. Previous vehicle positions, shown as arrowheads (called "breadcrumbs"), are also clickable.

Information displays in the panel to the left of the map.

3. Click the + and – buttons to zoom in and out on the map.

You can also click and drag to move the map and use the mouse wheel to zoom in and out.

- 4. Click the **Choose view** icon in the lower right for additional mapping options.
- 5. Click a driver's name to open a Messaging screen and compose a message to the driver.
- 6. Search for a location by typing in the single-line search field. See below for details.

Notes:

- The default view for fleet and terminal managers shows locations of all trucks for the previous 15 days.
- Selecting an option from one menu may disable another menu. For example, selecting a driver disables the **Tractors** dropdown.
- Depending on your subscription level, you can select from the following menus: Drivers, POIs, Fences, Assets, and Tractors.

Truck and Breadcrumb I cons and Information



A truck's current location is displayed by the truck icon. Previous locations display along the route as arrowheads called **breadcrumbs**. A line of breadcrumbs provides a snapshot of the route traveled by the truck. Breadcrumbs only display when viewing the map for an individual driver.



Normal breadcrumbs display in green. The selected breadcrumb displays with a yellow outline. Breadcrumbs in red indicate a violation or an event.

Click a truck or breadcrumb icon to view additional information about

the truck, including:

Driver ID, Tractor and Trailer numbers, date and time the truck was at that location, plus any HOS violations in effect at that location and (if available) the vehicle's speed, odometer reading, and engine RPM.

Fleet and Terminal Managers: When viewing all drivers, only the truck icons display showing the locations of each truck in your fleet. The truck icon and breadcrumbs display once you select an individual driver to view.

Search Location

The search bar overlaying the map provides a single-line destination search. You can use this search bar to search for destinations by keyword. Keywords can be a company name, street address, city center, etc.

As you type, the closest matching possibilities display. if you do not immediately see the destination you are searching for, enter more information until it displays.



Location Details	R)	Q. Weigh Station, Bolingbrook	*	Market B
(5) 5er	ed as Destination			i la
Latitude	Longitude	Land Immigrate the	a analogue the	
41.672544	-04 0429112			The second second
Address Veigh Ballon, beilegb	enelli, H. 60442	Territoria di Antonio	3,	i
City:		2		1
Ballingbypail.			and Phan	0
Itale.	Postal Zip		Constanting of the second	9
L.	85441			
Country:		200		*
1010				
			et 1/2 -	

To search for a destination:

1. Begin typing in the search bar.

A list of matching locations displays.

- 2. Click the location you want to display.
- 3. The location displays on the map.
- 4. Details about the location display to the left.
- 5. Click **Send as Destination** to send the location to a driver as a navigable destination. See page 40.

Mapping Tools



On the **Mapping** page, you can choose to display tractors, points of interest, and geofences. You can also access tools to draw fences and place POIs. The **Display** checkboxes allow you to show or hide tractors, POIs, geofences, and assets on the map. The **Tools** slider shows options for additional mapping tools.

1. Select a checkbox to display an option on the map; de-select the checkbox to hide the option.

When you select a checkbox, the map will display all available icons for that type in the display area. You may need to zoom in or scroll on the map to see additional icons.

- 2. Select the Tools slider to display the Place POI, Draw Fence, Generate Report, Find Nearest, and Route tools.
- 3. Click the **Refresh** button to re-display the map.

On the map, tractors display as truck icons, POIs as orange markers, fences as shaded areas, and assets as blue icons. Selected icons display with a yellow circle:



Place POI

The **Place POI** functions allows you to add your own Points of Interests to the map. Points of Interest (POIs) are designated spots that may be valuable to your fleet. These can include any other location of interest to your drivers, such as rest stops, restaurants, weigh stations, etc. You can either place them manually or import POIs onto the map.

You can view your drivers' current position and breadcrumb path on the **Mapping** page to see when they are approaching a POI. You can communicate the upcoming POI to the driver with the messaging functions in the Chats Tab.

POIs can be placed manually, or you can import a .csv file with predefined POIs.

You can also export a .csv file with a list of your POIs.

Place a POI Manually



- 1. Click **Place POI** in the **Tools** section of the **Mapping** page.
- 2. As-you-go instructions display in the upper right corner of the map page.
- 3. Right-click on the map to place a POI. You can also left-click and drag the POI to move it to a new location.
- 4. Type a name for the POI and verify its location.
- 5. Click **Save** to save the POI. Or, click **Delete** to delete this POI and start again.
- 6. Click **Send as Destination** to send the location to a driver as a navigable destination. See page 40.

Import/ Export a list of POIs

enanth by territrial	innersty by driven	w search		06/20/2018 - 06/20/201	least
Crisplay: 🖸 Ruchary 🛃	Topis	() ennietti	Jens B	lavoras lopot - 🖉 Pestiau	rest 3,0 tinte
POI	Robert Room	- 10 ⁻¹	m q	Autor Madan	LA HU
24	ICH 201	Barran, 1	terilley 22	Aurora Napelville	They contract
	Stati:	1.740	anterit	Antes Augusta	
CA Dele	to All POL	distain.		Finiture Com	Fait Party Handand
Eq.	NAME POL	1	Am .	Queen fait Julies	Name and Street
Choose File	Theorem 1		a	- Annan	And Hangely Marca Street
Contrast Pilling	Sarryis CSV ori Procedure	Jithan		A COL	June 1
Contant Spin City In the series	wanted for farmer for PDIs to land. All	Salati	THE R.	1 and monorgan	1
Industries must be presided to the up that utilizers. The unbulks statements forward-barriest strengt into memory	dowa No wvier if the data is thenk for in not isaw kempilika (Names, ismin, powiałCiela latituda (ongituda)	C	2.00	Vin	(Martine
Dittes Those for to allert the	No company the PDI data to trunct.	1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.	la man		S
5) First the We, and ethnic stations to aslant the Die to presson for 140	(kuk it, so sample chick it and grows "Tapar" stati,	- State	6		Achiev
4) briest tapiped butter to start to validations will be performed on the	lin örgeri jalensa Bassi data 19 Uni	Long.	10		R
b) If the formal of the file and data created and presented. This response additional column: "Datas" The	i is accepted, their a "response" file is not the spinotes the PO-impact file with Status column planet if the state real	See.	Annul		

- 1. Click **Place POI** in the **Tools** section of the **Mapping** page.
- 2. Select **Import** in the **Select POI Placement** drop-down menu. Click **Export POI** to export a list of your POIs to a .csv file.
- 3. Click **Choose File** to select the .csv file to import from your computer.
- 4. Click **Upload** once you have selected the file.

Note: Click the **Sample CSV** link to view an example file, which shows how the file needs to be formatted.

Edit or delete a POI

Note: You can only edit the name of a POI after you save it. To change the address or coordinates, you need to delete the POI and create a new one instead.



- 1. In the Tools section, click Place POI.
- 2. Click the POI you want to edit or delete.

The selected POI displays in yellow, and the **POI** pane displays on the left side of the map. Other POIs display normally.

- 3. Type a new name.
- 4. Click Save to save the POI. Or, click Delete to delete the POI.

Draw Fence

Geofences (or "fences") are areas that you can define on the map that set boundaries for your drivers. On your **Company Information** page, you can set up email alerts when a driver crosses a fence. As the driver's ELD sends location information, the DriverConnect system compares the location reported by the ELD to the coordinates you define for a fence. This is useful for tracking activity in and out of certain areas.

You can use fences for these and other applications:

- Set up a fence around a city to be notified when your drivers enter in and out of the city's metro area.
- Draw a fence around an important customer's location.
- Draw a fence around an area you would like drivers to avoid.

After creating a fence, you can activate or de-activate it at any time.

Draw a fence



- 1. Click **Draw Fence** in the **Tools** section of the **Mapping** page.
- 2. As-you-go instructions display in the upper right corner of the map page.
- 3. Right-click on the map to place your first fence post.
- 4. Right-click again to place the next post.

Continue right-clicking on the map to place as many posts as you need for your map.

- 5. Click the + and buttons to zoom in and out for greater accuracy.
- 6. When you are finished placing posts, double-right-click to stop.

7. After your fence posts are set, click (left) and drag a fence post to change its location. You can also drag the whole fence by clicking inside the fence and dragging it.

You cannot change a fence post location or drag the fence after you save the fence.

- 8. Type a name for the fence and select the Active checkbox.
- 9. Click **Save** to save the fence. Or, click **Delete** to delete the fence and start again.

The **Fences** checkbox must be clicked to see the saved fence on the map.

Saved fences display as shaded green areas on the map:



Edit or delete a fence

Note: You can only edit the name and active status of a fence. You cannot add, change fence posts once you save a fence. To change posts, you need to delete and re-draw the fence.



- 1. In the Tools section, click Draw Fence.
- 2. Click the fence area you want to edit.

The selected fence is outlined in red, and the **Fence** pane displays on the left side of the map.

- 3. Type a new name or select/de-select the Active checkbox.
- 4. Click **Save** to save the fence. Or, click **Delete** to delete the fence.

Generate Report

Reports show information about all of the drivers, tractors, and assets located within the visible map area. The report displays the following information for each driver:

- Driver Name and ID
- Date and Time of the last recorded portal event
- Tractor and Trailer Numbers
- Driving direction
- Most recent recorded event
- Last address recorded
- Speed, Odometer, and Engine RPM recordings



- 1. Using the zoom buttons on the map and the mouse to move the frame, adjust the map to show the report area.
- 2. Click **Generate Report** in the **Tools** section of the **Mapping** page The report displays in a window to the left of the map.

- 3. Use the up/down and left/right scroll bars in the report sub-window to view all rows and columns. Use the next/previous page arrows to view different pages of the report.
- 4. Click on a row in the results table to center the map on and highlight the associated icon.

Find Nearest

The "Find Nearest" function shows you the location of the closest tractors, POIs, fences, and assets, in order, to a point within a radius that you specify. It also shows updated information about each tractor, POI, fence, or asset.



- 1. Click Find Nearest in the Tools section of the Mapping page.
- 2. Right-click a point on the map to set as the mid-point of your search area.

A circle displays on the map, with a radius (in miles) as set in the slider on the left.

- 3. Using the sliders to the left, set the radius (in miles) of the search area, and set the number of items nearest to your location to display.
- 4. Click **Reset** to restore the default values and remove the center point.
- 5. Click Search.

The nearest Tractors, POIs, Fences, and Assets to your location display in the left-side bar.

- 6. Click a header (Tractors, POIs, Fences, or Assets) to change views.
- 7. Click **Back** to conduct a new search.



Note: You cannot manually edit the latitude and longitude values. You must select a new point by right-clicking the map.

Route

The Route functions allow you to:

- Set vehicle preferences (such as height, Hazmat type, etc.) to create truck-safe routes
- Create routes with up to 10 destinations
- Reorder routes
- Calculate tolls in advance
- Generate turn-by-turn directions for each leg of the trip.
- Send single- or multi-stop trips to a driver

Create a Route



1. Click Route in the Tools section of the Mapping page.

- In the Route Points section, begin by clicking in the text box for Stop A.
- 3. Begin typing in the search box to use the single-line destination search. Select the matching address form the search results.
- 4. Alternatively, you can click in the search box, then immediately left click a point on the map to automatically enter the address of the point you click.
- 5. After selecting a destination, an additional search box displays. Repeat steps 3 and 4 to add up to 10 destinations.
- 6. Click **Get Route** to generate turn-by-turn directions that comply with your route preferences.

Edit a Route


To edit your route, click:

- 1. Clear all to delete all entered destinations.
- 2. **Show all** to zoom the map out to display all destinations in one view.
- 3. **Reverse** to reverse the order of all stops (the last stop will become the first stop, and so on).
- 4. The up arrow next to a destination to move it ahead in order
- 5. The down arrow to move it behind in order
- 6. The trash can icon to delete a destination
- 7. The white arrow to minimize the **Route Points** view.

View Route Details

After you click Get Route, the Route Details view displays, showing:

- A summary of the total mileage and estimated time for the trip
- Toll costs (or estimated cost ranges)
- Detailed turn-by-turn directions for each destination
- Mileage and time estimates for each step in the route, if applicable
- A map showing truck route connecting the destinations in order



In the Route Details view:



Each individual leg is broken out into different trips, with individual mileage and time calculations.

1. Click **Show all** to display the entire route on the map.

Click + Details to view the turn by turn directions for each leg.
 Click - Details to collapse the directions.

3. Click **Send Stops** to send the stop(s) to a driver. See page 40.

4. If the route contains tolls, the estimated toll costs display above the directions. A range of costs are typically provided to account for transponder discounts.

5. Use the scroll bar to scroll down and view additional stop details.



Set Route Preferences

Setting Route Preferences can ensure that the route generated is compatible with your vehicle(s). The routing tool will filter out roads that do not meet criteria you set. For example, if your truck is 162 inches tall, you can enter that height to get a route that your truck will be able to pass through safely.

Preferences enable you to:

- Set your truck's dimensions (width, height, weight)
- Select the number of axles and type of trailer
- Choose a Hazmat type
- Choose road features to avoid, such as tunnels, ferries, tolls, etc.

Route Prefere	nces	<i>8</i> 1
Units	English	ų
Route Type	Fastest	Y
Trailer	53ft	×
Height	162	ìn
Width	102	in
Weight	80,000	lbs
Axles	5	~
Hazmat Type	None	
Avoid	Please Choose:	

To set route preferences:

 In the text field of any preference, enter or select a new value.

2. In the **Avoid** drop-down, you can select multiple entries.

The route you generate after setting preferences will comply with the restrictions you define.

Note: in the **Route Type** dropdown, selecting **Fastest** will generate a route that will take the

least amount of time based on your other selections. Selecting **Shortest** will generate a route that covers the fewest number of miles. These two routes are often not the same.

Send a Destination (Stop) to Driver

The different Mapping tools provide several ways to send destinations, including multi-stop trips, to drivers or groups by using the DriverConnect messaging functions. In the portal, you can generate destinations, create routes, and send destinations to drivers.

Drivers can then navigate to the destination you send them by tapping on the message in the DriverConnect app. Rand McNally's Truck GPS app will open and automatically configure itself to navigate to the destination.





- 1. Click **Send as Destination** to send the location to a driver as a navigable destination. See page 40.
- 2. Click **OK**.
- 3. The destination displays in a message to the driver or group in the DriverConnect app.

The same process applies to multi-stop trips. You can send up to 10 stops. The **Send Stops** window displays the starting destination

(**Start**), additional destinations (**Destination**), and the final destination (**Finish**).

Send S	Stops	3
Select a driver or group window to send stops stops is limited to those McNally's truck C	p from the m s. Navigation e drivers hav SPS applicati	iessaging i to the ring Rand on.
A - Start 8414 N 2nd St, Maches United States	ney Park, TL	61115,
B - Destination Milwaukee, WI 53202, I	Julted States	2
C - Finish Skokle, IL 60077, Unite	d States	
		alar.

The Messaging function displays the final destination in the message, but still contains all stops.

Management Menu

The **Management** menu provides options for Fleet and Terminal Managers to manage drivers and portal users, terminals, and ELDs.

Management -

Users

On the **Users** page, you can view, edit, create, and delete user profiles. The default view shows all users in your organization.

Terminal Managers: The **Users** page is read-only. You cannot create, edit, or delete users.

Each driver in your fleet needs a user profile. Drivers use a unique Driver ID to log in to the DriverConnect app. As you add new drivers, you need to create their Driver IDs and passwords. Drivers can change these later.

Each Terminal Manager also needs a user profile. Terminal Managers do not have Driver IDs, and do not use the DriverConnect app. Instead, they are able to manage a select group of drivers within their own terminal. See the **Terminals** page for more information.

Drivers and Terminal Managers can also be activated and deactivated and deleted. Deactivated drivers are unable to log in to DriverConnect. However, all of the user's data will remain in the system. Deleting a user also deletes the user's data.

Solution and	U	a cite of the	-				(5)	ľ	7
- Fist Name	Lasthere	10	t Terminal	a Email	0 Drives 20	C Uver Role	E Last File Sync		•
Tret	Ortwer	DELI	701090	support grandmicrody com		Fleet Mar		8	
Test	Briver	DCLT LT Ditte Test	101090	melgalmutom	Stores.	Criver 6	21/2010 11:52 079		-
Terri	Driver	DCLT LT Beta Test	101490	email@atimes.com	DisertD	Driver 🧶	A/21/2018 05:46 pm	B)	-
Pest	Driver	OCLT LT Bets Test	7-01090	email@wdshiresi.com	Uspann	Drivet	88/29/2018 11:28 jm	8	
Dowing 51 to 58	of 54 entries.					Feit (1	2 2 4 2 6	,	144

To search for users:

1. Begin typing information about the user into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click **Search** to display all users.
- 3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

To manage users:

- 5. Click + New User to create a new user or Add multiple users to add more than one. See instructions below.
- 6. Click the text in a user's row to edit the user. See instructions below.
- 7. Click the sign to delete a user or check the box (☑) to activate or deactivate a user. See instructions below.

To activate and deactivate a user:



- 1. Click the checkbox to activate or deactivate.
- 2. Click Inactivate or Activate on the User Status Confirmation screen.

The User page displays again.

Create a New User

1	PROFILE INFO	0
First Name	First Name	G
Last Name	Last Name	
Role	Driver	4
Cirver ID	Driver ID	
Email	femal	
Shipping Document Number	F30334411707	
Password	Passwort	
Confirm Password	Password	
Company	RM-07706 (test)	3
Terminal	T-04126 (test)	*
Personal Conve Yard Moves	vance	-
DRIVI	ER'S LICENSE INFO	
Name on Liberae	Name on License	
License Number	License No.	
Licensing State	Itsuing State	1

The **New Driver** page is shown to the left, and the **New Terminal Manager** page to the right:

 On the Users page,
 click + New
 User.



The Add New User window displays.

Enter the information for the user.
 All fields are required.

Select the user role. You can select Driver or Terminal Manager:

3. **Driver:** Enter a Driver ID for the user. The driver will need the Company Code, Driver ID, and Password you create to log in to the DriverConnect app.

4. Terminal Manager: Select a

terminal for the Terminal Manager (TM). If you have not yet created a terminal, the only option will be your organization's base terminal. You can create and edit terminals from the **Terminals** page. Optional: You can set the terminal manager's email notification options (see below in **Edit a Fleet or Terminal Manager**) after you create the user profile. By default, the TM will not receive notifications. See page 49.

Driver: Select the **Permissions** sliders to grant specific permissions to the driver. These functions will only be available to the driver if they are enabled (green) in the user profile.

Optional: You can also enter the driver's license information. This will be visible to the driver in the DriverConnect app.

5. Click **Create** to create the new user or **Cancel** to close this page without creating a new user.

Add Multiple Users

You can add multiple users at once by uploading a CSV spreadsheet containing the users' data.

-	there the	
	Add multiple	e users .
Select Field	RM-011890	6
Uproad CSV File	Dentfit	thouse C
		A Sarrofe user CSV
		Generi Upbear

- 1. Click Add multiple users on the Users page.
- 2. Click **Browse** to locate your users file.

You can click the **Sample User CSV** link to download a sample CSV file container the proper formatting for data import.

3. Click **Upload** to upload the information to the database or **Cancel** to close this window without saving changes.

Edit a Driver

You can change an existing driver's first name, last name, email address, and terminal assignment. You can also update the driver's license information.



Edit a Fleet or Terminal Manager

You can change an existing fleet/terminal manager's first name, last name, email address, and terminal assignment. You can also set email notifications for the fleet/terminal manager.

First Name Fleet Last Name Manager Role Fleet Manager Driver ID Driver ID Driver ID Driver ID Company RM-07956 (Skokie Asset) Email fm1@skokieaset.com Email Notification Daily events occurs Get notified Daily events occurs Over Idling I Hard Braking I Diver Posted Speed I Limit I DVIR Defects I Battery Low I	E	uit Use	1
First Name Fleet Last Name Manager Role Fleet Manager Driver ID Driver ID Company RM-07956 (Skokie Asset) Email fm 1@skokieasset.com Email Notification Daily Every time events occurs Get notified Daily Every time events occurs Over Idling I Tractor Geofence I Speeding I Hard Braking I Over Posted Speed I Limit I DVIR Defects I HoS Violations I Battery Low I	PF	OFILE INFO	D III
Last Name Manager Role Fleet Manager Driver ID Driver ID Driver ID Driver ID Company RM-07956 (Skokie Asset) Email fm 1@skokieasset.com Email fm 1@skokieasset.com Email Daily Get notified for Daily Get notified for Daily Speeding I Hard Braking I Over Posted Speed Limit I DVIR Defects I HoS Violations I Battery Low I	First Name	Fleet	
Role Fleet Manager Driver ID Driver ID Company RM-07956 (Skokie Asset) Email fm1@skokieaset.com Email Notification Daily Every time events occurs Get notified for Daily Every time events occurs Over Idling I Tractor Geofence I Speeding I Hard Braking I Dvir Posted Speed I Limit I DVIR Defects I Hatery Low I	Last Name	Manager	2
Driver ID Driver ID Company RM-07956 (Skokie Asset) Email fm 1@skokieasset.com Email Notification Get notified Daily Seeding Hard Braking Diver Posted Speed Limit DVIR Defects Battery Low	Role	Fleet Manage	er.
CompanyRM-07956 (Skokie Asset)Emailfm1@skokieasset.comEmail NotificationDaily Every time events occursGet notified forDaily Every time events occursOver IdlingITractor GeofenceISpeedingIHard BrakingIOver Posted Speed LimitIDVIR DefectsIHos ViolationsIBattery LowI	Driver (D	Davia (D	
Emailfm1@skokieasset.comEmail NotificationDaily summaryGet notified forDaily summaryDver IdlingIDver IdlingITractor GeofenceISpeedingIHard BrakingIDver Posted SpeedIDVIR DefectsIHard BrakingIDVIR DefectsIHard BrakingIDVIR DefectsIImitIDVIR DefectsIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitIImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitImitI	Company	RM-07956 (S	kokie Asset)
Email NotificationDaily summaryEvery time events occursGet notified forDaily summaryEvery time events occursDver IdlingIITractor GeofenceIISpeedingIIHard BrakingIIDver Posted SpeedIIDVIR DefectsIIHoS ViolationsIIBattery LowII	Email	fm1@skokie	asset.com
Get notified for Daily summary Every time events occurs Dver Idling I Tractor Geofence I Speeding I Hard Braking I Dver Posted Speed I DVIR Defects I HoS Violations I	Email Notification		3) 🛶
Over Idling Tractor Geofence Speeding Hard Braking Over Posted Speed Limit DVIR Defects HoS Violations Battery Low	Get notified for	Daily summary	Every time events occurs
Tractor Geofence Speeding Hard Braking Over Posted Speed Limit DVIR Defects HoS Violations Battery Low	Over Idling		
Speeding Hard Braking Over Posted Speed Limit DVIR Defects HoS Violations Battery Low	Tractor Geofence		
Hard Braking Over Posted Speed Limit DVIR Defects HoS Violations Battery Low	Speeding		
Over Posted Speed Image: Constraint of the speed Limit Image: Constraint of the speed DVIR Defects Image: Constraint of the speed HoS Violations Image: Constraint of the speed Battery Low Image: Constraint of the speed	Hard Braking		
DVIR Defects	Over Posted Speed Limit		
HoS Violations	DVIR Defects		
Battery Low	HoS Violations		
	Battery Low		
Asset Tracker	Asset Tracker Geofence		

1. On the **Users** page, click the text in a row to edit the fleet or terminal manager.

The **Edit User** window displays.

2. Make changes to the fleet or terminal manager's profile.

Fields in dark gray cannot be edited.

3. Set the **Email Notifications** slider to ON (green) to enable notifications for the terminal manager.

Set the slider to OFF (gray) to disable all email notifications.

4. Select the checkboxes for the events and notification types you want the terminal manager to receive.

5. Click **Save** to save the changes or **Cancel** to close this window without saving changes.

Delete a User



- 1. On the **Users** page, click the Delete icon (**D**).
- On the Delete User window, click Delete to delete the user. Click Cancel to cancel the delete process and leave the user profile intact.

View Email Event Notifications

Email notifications are messages sent to fleet and terminal managers for specific driving events (such as speeding, hard braking, etc.). These emails can be sent individually for each occurrence, sent as a daily summary, both, or not sent at all. Each event can have different email settings.

Notifications are also sent when transferring a driver, tractor, or



asset form one terminal to another. These notifications occur automatically. You cannot turn off terminal transfer notifications.

Note: Geofence notifications are sent for tractors or assets both leaving and entering the fence area.

	Renally NeerConnect
Transfer	of Asset Tracker
The following Asset Tre	cher has been transferred between terminale :
Yaur company IOI	R84-07956
Tracker :	BT82E14183818234827
Asset Name	04001
Plant;	7-04463
Tec	1-04070
Effective Date:	10/06/2018
For support, visit Ran	e McNaly DiverCornell Support.

Devices

On the **Devices** page, you can all of the Electronic Logging Devices (ELDs) registered to your fleet or your terminal.

Any driver in your fleet can use any ELD. Drivers must pair their Android[™] device with an ELD before using it. Instructions for device pairing can be found in the DriverConnect app user guide. Each ELD is listed with the most recent driver to use it. The ELD serial number, type, and MAC address also display.

To search for devices:

evices (1	South	2			121 12
- First Name	= Last	C Driver ID	8 Device Type	© Device \$/%	2 Fermune Version	# App Version
Driver	Name	DrivertD	00 2006	0222P101726290220	0.1.13	Not available
Driver	Name	DriveriD	61.D 50	E50% 101621002532	0.0.52	Not available
Driver	Name	DriventD	0C 200	022210101705000520	0.0.32	4.0.1 - 10421
Driver	Name	DriverID	DC 200	D282P101707000581	0.1.11	4.9 - 10804
Driver	Name	OriverID	FLD 50	E50/1011723008253	0.1.7	1.8.1 - 179_1
libowing 61 to 65	of 65 writews			A		

1. Begin typing information about the device into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click **Search** to display all devices.
- 3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.

4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Asset Trackers

On the **Asset Trackers** page, you can view and edit information about all asset trackers in your fleet or terminal.

To search for	asset trackers:
---------------	-----------------

Please select filte	- Please soler	279e -	Bearth	2)		
- Arsel Name	© Company Code	3 Terminal Gode	E Tracker Type	+ Ferman	Titleker 5.14	2 Tracker IME
BWSD1	Revi-07952	7-04433	Solar	125	357991080371724	337541085371724 \$
STROL	RM-07952	104455	Solar	1.3.5	BT5ZE14163618034117	357591080219634
\$1962	#64-079/52	T-04455	Solar	133	BTDZETATRON MODAZON	357591080220176

1. Begin typing information about the device into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click **Search** to display all devices.
- 3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Edit a Tracker

You can change the name and terminal assignment of your asset trackers.

Update	e Tracker Details ×
Tracker S/N	BTSZE14183618034117
Asset Name	STS01
Terminal	T-04455 (Field Testing)
5	Cancel Save

1. On the **Asset Trackers** page, click the text in a row to edit the tracker.

The Update Tracker Details window displays.

2. Make changes asset name and/or terminal assignment.

Fields in dark gray cannot be edited.

3. Click **Save** to save the changes or **Cancel** to close this window without saving changes.

Tractors

The **Tractors** page displays a list of all tractors identified from the DriverConnect app. Tractors are added automatically when drivers add the tractor number on the app's **Trip Info** page.

Fleet Managers can manage their fleet's tractor list and assign an ELD to a tractor when the **Portal Side Tractor Management** switch is enabled. See the **DriverConnect Superfleet Guide** for details.

Tractors Contractors Local Trucka	· Search	
- Tracher sumbat	3 Company Code	E Terminal Code
34	RM-012500	Fc2299
43	RM-012500	102892
48	RM-012500	7-02892
99	RM-012500	F02290
Showing 1 to 4 of 4 entries		(1) North A 1 2 - 124

On this page, you can:

1. Select your filters from the dropdown menus and click **Search**. See how to use Search Filters (page 163).

The table displays the results of your search.

2. To find specific information within your search results, begin typing in the search field.

As you type, information that matches your search terms automatically displays in the table.

3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.

4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Edit a Tractor

You can change the information for an existing tractor at any time.

_		
E	dit Tractor	
Tractor number	00000	- 1
Company	RM-0182 (Mahesh)	
Terminal	T-01481 (PSTTerminal)	
2 Device	Search Device	1
	Cancel	Save
-	Tatata	

- 1. On the **Tractors** page, click the text in a row to edit the tractor. *The Edit Tractor window displays.*
- Make changes to the tractor information. In the **Device** dropdown menu, you can select an ELD to link to the tractor (if enabled).
 Fields in dark gray cannot be edited.
- 3. Click **Save** to save the changes or **Cancel** to close this window without saving changes.

Groups

The **Groups** page allows you to create groups to more easily manage drivers. You can create groups of drivers or vehicles.

Using a group is a way to view and manage information about a specific set of drivers or vehicles. On reporting and compliance pages, you can filter information to display information only from a specific group.

Some examples of using groups include:

- A Fleet Manager created a group made up only of older vehicles and searched the Vehicle Inspections page for DVIRs created just for that group.
- A terminal manager created a group for drivers that have previously been cited for moving violations. The manager searched for instances of sudden acceleration and deceleration in that group on the **Events** page to ensure the drivers were operating their vehicles safely.

Groups can be individual or global. Individual groups can only be viewed and used by the user who creates them. Global groups can be viewed and used by all non-driver users (Fleet Managers and Terminal Managers).

Groups	Search	2	6 New Group
- Name	C Type	# Created By	© Group Ix Glipbel
Local Tiucka	Vehicle	Reetingr@company.com	No 🔊
Text Drivers	Driver	flextmgn@company.com	Yes 🖉
Showing 3 to 2 of 2 er	ifries		the c 1 a L

To search for groups:

1. Begin typing information about the group into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click **Search** to display all groups.
- 3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

To manage group:

- 5. Click + New Group to create a new group. See instructions below.
- 6. Click the text in a group's row to edit the user. See instructions below.
- 7. Click the sign to delete a group. See instructions below.

Create a New Group

Group	Group Name)	
Select	RM-012500		
Select Group Type	Driver	3	
Select from	n list	Group of Driver	
8	DR02	DR02	
	TD2	DR002	
	DR002		
		Total 2	
Selected 2	of 3		

1. On the Users page, click + New Group.

The Create New Group window displays.

- 2. Enter a name for the group.
- 3. Select the group type:

- **Driver** allows you to select drivers to include in the group. Drivers are created by the Fleet Manager from the **Users** page.
- Vehicle allows you to select vehicle to include in the group. Vehicle numbers are created by drivers in the DriverConnect app. Drivers enter the Tractor Number in the **Trip Info** screen. Vehicle numbers that have not been used in the fleet before are stored as new vehicles.
- 4. Select or deselect drivers or vehicles from the list on the left to add or remove them from the group.

The list on the right updates automatically as you change the group membership.

5. Select the **make group global** checkbox to allow all managers in your fleet to view and use the group.

Global groups can be used by all fleet and terminal managers in the fleet, but not by drivers.

6. Click **Create** to create the new user or **Cancel** to close this page without creating a new group.

Edit a Group

You can change the name, membership, and global view of a group.

Group Name	Local Trucks	
For Fleet	RM-012500	
Group Type	Vehicle	
Select from	n list	Group of Vehicle
	48	48
	43	943
0	16	34
	15	99
10	null	
8	34	Total 4
0	7	
8	99	
Selected 4	of 8	

 On the Groups page, click the text in a user's row to edit the user. The Edit Group window displays. 2. Select or deselect drivers or vehicles from the list on the left to add or remove them from the group.

The list on the right updates automatically as you change the group membership.

Fields in dark gray cannot be edited.

- 3. Select or deselect the make group global checkbox.
- 4. Click **Update** to save the changes or **Cancel** to close this window without saving changes.

Delete a Group



- 1. On the **Groups** page, click the Delete icon (
- On the Delete Group window, click Delete to delete the group.
 Click Cancel to cancel the delete process and leave the group intact.

Terminal

On the **Terminal** page, you can create, edit, and delete terminals. A terminal is a subgroup of your fleet that is designed to make driver management simpler. Terminals can be regional offices, local branches, or satellite locations within your company.

Each company has a Fleet Manager who is responsible for the entire organization. The Fleet Manager can designate one or more Terminal Managers to manage a group of drivers. The Fleet Manager can access information for all Terminal Managers and drivers, regardless of terminal assignments. Terminal managers can only access information for drivers within their own terminals.

This chart shows how the fleet, terminals, and drivers are related:



Each Terminal Manager needs a user profile and must be created on the **Users** page. Terminal Managers do not have Driver IDs, and do

not use the DriverConnect app. Instead, they manage a select group of drivers within their own terminal from the portal.

By default, each company is created with a Home terminal. The Fleet Manager automatically manages this terminal. You cannot delete the Home terminal. You can assign a new Terminal manager to the Home terminal.



To search for terminals:

 Begin typing information about the terminal into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click **Search** to display all terminals.
- 3. Click the arrows next to a column header to sort the information in ascending or descending order on that column.
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

To manage your terminals:

- 5. Click + Terminal to create a new terminal. See instructions below.
- 6. Click the text in a row to edit the terminal. See instructions below.

Terminal Name	Terminal Name		
Select Feet	RM-011890 (DCLT LT Beta Test 👻		Ŷ
Terminal Address	Terriral Address		
Country	USA.		+
State	Select Province/Territory		9
City	City		
Postal Code	Portal Code		
Terminal Telephone	Terminal Telephone		
Vard Move- US Dnly	50		
Personal Conveyance US	50		
Personal Conveyance - Canada	47 miles - Canada		
Time Zone	Select timezone		4
	Daylight Saving Time	0	
Configuration	n		
Hant Braiking	d decreases		Lance
by		7	8.84
D lating		0	b-tilequi
ignition is Of speed is 0 fo	i and vehicle Ir more than	300	
		alere K	and version 3-300 mm
Speeding vehicle speeding	d is greater	85	mak
U.dr.		4774	ad value
Dver Posted	Speed Limit eds posted	10	
speed limit to	W		1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.

7. Click the – sign to delete a terminal. See instructions below.

Create a New Terminal

1. On the Terminals page, click + Terminal.

The **Create New Terminal** window displays.

2. Enter the information for the terminal. All fields are required.

Note: The numbers in the Yard Move and Personal Conveyance fields are the number of miles allowed by the terminal for these categories. You can set these here for all drivers within the terminal.

3. In the **Configuration** section, enter values for your terminal's driving information. See below for descriptions.

4. Click **Create** to create the new terminal or **Cancel** to close this window without creating a new user.

Terminal	DCLT LT Beta	a Test	
Name	_		_
Fleet	RM-011890		
Terminal Address	9855 Woods	Drive	
Country	USA		\sim
State	Illinois 🗸 🗸		~
City	Skokie		
Postal Code	60077		
Terminal Telephone	1847329632	3	
Yard Move - US Only	5		
Personal Conveyance - US	5		
Personal Conveyance - Canada	47 miles - G	anada	
Time Zone	CST		~
	🔽 Daylight Sa	ving Time	
Configuration			
() Hard Braking			
vehicle speed decreases by		5	mph in
		alfow (5mp	ed values h-10mph)
1 Idling			
vehicle speed is	nd O for	60	sec
more than		allow (C	ed values I-300 sec)
Speeding			
vehicle speed is than	greater	50	mph
		allow (3	ed values 5-85mph)
Over Posted Spe	eed		
Limit Vehicle exceeds	posted	5	mph
encod limit bu	-E-11-12-17//	100.00	THE REAL OF

Edit a Terminal

You can change the information for an existing terminal at any time.

1. On the **Terminals** page, click the text in a row to edit the terminal.

The **Update Terminal** window displays.

2. Make changes to the terminal information.

Fields in dark gray cannot be edited.

3. In the **Configuration** section, update values for your terminal's driving information. See below for descriptions.

4. Click **Update** to save the changes or **Cancel** to close this window without saving changes.

Configuration

You can configure aspects of your terminal's driving information in the **Configuration** section. Settings made in this section apply to all drivers in the selected terminal.



Hard Braking: The rate of decrease in speed a driver needs to reach in a sudden deceleration. This rate is measured in a decrease in miles per hour, per second (MPH/s). You can set this value between 5 and 10 MPH.

I dling: The number of second a vehicle is running (ignition on) before moving. You can set this value between 0 and 300 seconds (5 minutes).

Speeding: The speed (in miles per hour) a driver needs to reach to be considered speeding. You can set this value between 35 and 85 MPH.

Over Posted Speed Limit: The speed (in miles per hour) a driver is allowed to travel above the posted speed limit before an event is triggered. For example, if you set the Over Posted Speed Limit to 5 mph, you will receive events each time a driver exceeds the posted speed limit by 5 MPH or more. You can set this value between 1 and 15 MPH.

Delete a Terminal

When you delete a terminal, the user profile of the Terminal Manager is also deleted. Also, all drivers assigned to that terminal are automatically reassigned to the Home terminal.



- 1. On the **Terminal** page, click the Delete icon (**D**).
- 2. On the **Delete Terminal** window, click **Delete** to delete the terminal. Click **Cancel** to cancel the delete process and leave the terminal intact.

Workflow

On the **Workflow** page, you can create, edit, and delete workflows templates. Workflows are a series of forms that can be created by a Fleet Manager and sent to a driver. The workflow is a sequence of steps that a driver needs to follow. The status of each step is tracked. Managers can also assign completion times to the steps in a workflow to ensure that a driver completes a workflow on time.

Use the **WORKFLOW** tab in the **Messaging** window to:

- Send a workflow to a driver
- Assign estimated completion times
- Track progress, including actual completion times
- View completed forms

Q Enter text to s	earch		+ Create New
Workflow Title	Created On	Last Updated	
Destination	12/19/2016	12/19/2016	Action
Trailer Accident	12/20/2016	12/20/2016	Action Edit Delete

On the Workflow page, you can:

 Begin typing information about the workflow into the search box. You can type information from any column.

As you type, information that matches your search terms automatically displays in the table.

- 2. Click + Create New to create a new workflow.
- **3.** Click in a workflow row to access more options from the **Action** dropdown menu.
- 4. Select **Edit** to edit the workflow; **Delete** to delete it; or **Make a copy** to copy the workflow with a new name.

See below for full instructions.

Create a New Workflow

Workflows contain one or more tasks for the driver to complete. Each task contains one or more forms.

When you send a workflow to a driver, you can assign completion times for each task. Therefore, you should create workflows so that each task contains only forms that can be completed within the time frame you assign.

orkflow Name	Add a task
Vorkflow 001	
task 1	Delete
Task Name	Estimated Date Time
Enter Name	(These fields will be populated when the fleet manager sends a new workflow)
	mm/dd/yyyy hh.n
Forms	
Arrived Shipper	- Arrived Shipper ×
O Accident Report	5
D Arrived Consignee	
Arrived Shipper	Cancel Sav
D Arrived Stop	
Departed Shipper	
Depart Stop	
Empty Call	

1. Click + Create New on the Workflow page.

The Create New Workflow Template page displays.

- 2. Enter a name for the workflow in the **Workflow Name** field.
- 3. Enter a name for the task in the **Task Name** field.
- Select one or more forms to include in this task from the Forms dropdown menu.
5. After you select a form, it displays with a checkbox in the dropdown menu, and displays in the forms order section to the right.

Forms	Click and during the second the former
4 selected	Arrived Shipper
	Arrived Consignee 🗙
	to the second se
	Arrived Stop 🗙
	Load Information

6. If you select multiple forms, you can click and drag to move them into a different order.

The driver will need to complete the form on the top first before continuing down the list.

7. Click the X to the right of a form to remove it from the workflow.

orkflow Example	
ask 1	Delete
Task Name	Estimated Date Time
Arrival info	(These fields will be organized other the fleet manager and a new with first)
	mm/8d/yyyy httms
Forms	Class and drug to existing the forms
4 selected -	Arrived Consignee 🗙
	Arrived Shipper 🗙
	Arrived Stop 🗙
	Load Information ¥
ask 2	Delete
Task Name	Estimated Date Time
Fuel Request	(These fields will be provided when the faith manager and a new workflow)
	mm/dd/yyyy. hh:mn.
Forms	
Fuel Authorization, Request Fuel Stop	Fuel Authorization X
	Request Fuel Stop 🗙

- 8. Click Add a task to add another task to the workflow.
- 9. Click **Delete** in the top bar of a task to delete that task.

All forms contained in that task will also be removed from the workflow.

10. Click **Save** to save the workflow or click **Cancel** to exit without saving and return to the **Workflow** page.

Edit a Workflow

When editing a workflow, you can perform all of the same actions you did when creating a workflow.



1. On the **Workflow** page, select **Edit** from the **Actions** dropdown menu of the workflow you want to edit.

The **Edit Workflow** page displays.

- 2. Edit the workflow name in the Workflow Name field.
- 3. Edit the task name in the **Task Name** field.
- Select one or more forms to include in this task from the Forms dropdown menu.
- 5. Click and drag to move forms into a different order.

The driver will need to complete the form on the top first before continuing down the list.

- 6. Click Add a task to add another task to the workflow.
- 7. Click **Delete** in the top bar of a task to delete that task.

All forms contained in that task will also be removed from the workflow.

8. Click **Save** to save the workflow or click **Cancel** to exit without saving and return to the **Workflow** page.

Q Enter text to sear	ch.)			+ Greate New
Workflow Title	Created On	Last Updated		
Trailer Accident	12/20/2016	12/20/2016		
Destination	01/18/2017	01/18/2017	Action Action Edit Delete Make a copy	

Delete a Workflow

1. Click the row of the workflow you want to delete.

- 2. From the Action dropdown menu, select Delete.
- 3. The workflow is deleted immediately, and a confirmation message displays at the top of the page.

Workflow deleted successfully	3
-------------------------------	---

Make a Copy of a Workflow

Q Enter text to searc	h			+ Create New
Workflow Title	Created On	Last Updated		
Trailer Accident	12/20/2016	12/20/2016	Action Action Edit Delete Make a copy	

- 1. Click the row of the workflow you want to copy.
- 2. From the Action dropdown menu, select Make a copy.
- A new workflow is created, with the words "copy of" in the title.
 To change the title, see above for steps on editing the workflow.

Workflow Title	Created On	Last Updated	
Trailer Accident	12/20/201fi	12/20/2016	
copy of Trailer Accident	01/18/2017	01/18/2017	

Compliance Menu

The **Compliance** menu provides information on hours of service records and violations, vehicle inspections, and information about driving patterns and vehicle use.



Snapshot

The **Snapshot** page shows Hours of Service (HOS) and Driver-Vehicle Inspection Report (DVIR) information over the past eight days.

- If you are a Driver: You will only see HOS and DVIR information for yourself.
- If you are a Fleet Manager (FM) or a Terminal Manager (TM): You can select any of your drivers to view.

HOS categories include:

- Off Duty (**OFF**)
- Sleeper Berth (SB)
- Driving (**D**)
- On Duty (ON)

01/03/2017	01/04/2017	01/05/2017	01/06/2017	01/07/2017
24:00Hrs	24:00Hrs	24:00Hrs	24:00Hrs	24:00Hrs
13:15	19:12	14:35	GT 14:49	24:0
00:00	00:00	00:00	00:00	00:0
00:00	00:44	01:41	00:00	000
0 10:44	04:04	07:42	09:10	00:0
DVIR:	DVIR;	DVIR:	DVIR:	DVIR:
00	0 0	0	Ø	0 0
	01/08/2017	01/09/2017	01/10/2017	
2	24:00Hrs	24:00Hrs	17:58Hrs	
	24:00	24:00	17:58	
	00:00	00:00	00:00	
	00:00	00:00	00:00	
	1.2.5.5.0			
	00:00	00:00	00:00	

- 1. Select a driver from the dropdown menus and click **Search** (FMs and TMs only).
- 2. The previous eight days of HOS and DVIR information display in individual date blocks.



Each date block shows:

- 3. The date of service.
- 4. The total number of hours reported for that date.
- 5. A breakdown of the total time reported for each HOS category.
- 6. Two status icons for the day's DVIR.

DVIR status icons include:

Certified. This DVIR has been certified by a mechanic. DVIRs that are **NOT** OK to drive are required to be certified. No-Defect DVIRs and DVIRs with defects that are OK to drive are not required to be certified.



Not Certified. This DVIR has not been certified by a mechanic.



No Defects. No defects were reported on the DVIR.

Defects Reported, Tractor/ Trailer OK to Drive. Defects were reported on the DVIR, but the driver indicated that the tractor/trailer was still safe to drive.

Defects Reported, Tractor Trailer NOT OK to Drive. Defects were reported on the DVIR, and the driver indicated that the tractor/trailer is unsafe to drive. The defects must be repaired, and the DVIR must be certified be a mechanic.

Hours of Service

The **Hours of Service** page lets you view Hours of Service (HOS) information for drivers within a certain time range. Each entry contains a link to a graphic HOS display. You can search for HOS records for your entire fleet, or for an individual driver.

If you are a Driver: You will only see HOS information for yourself. If you are a Fleet Manager (FM) or a Terminal Manager (TM):

You can select any of your drivers to view.

and the		Treasure State							Brittle or with		
line .	line il	and Married					hanne	Minu	Contracting Stre	fartfail to	
Do to the	1444	-Hant		1000		-		integ	- And reaching	her summar	
benefit .	1444	Print .	144		-		(#2)		and the second	hi-south (de la destructura de
Automation of the local division of the loca	1444	iii aa	-	100	-	-	1.4	44	toda insee	No. Annual Inc.	And I Compared and Add
arrest.	100		1-	1.000	-		1.00	1.00	Statement of the	No. of Concession, Name	101020-010
	1848	inner V		100	10.00	-	1.4.1		torian a	for the second second	
~	1994	anamar.	1		-		1(#1)	- 10	Anderson (A)		-
	1000	inimize.			-				Automation Inc.	and the second second	
				100		- 14	1.0412		intern .		
	Constant of the spinster of									6	

1. Select your filters from the dropdown menus and click **Search**. See how to use Search Filters (page 163).

The report table displays the results of your search. The default view shows the newest HOS entries first.

- 2. Color-coded bars show the status of an edited log. See below.
- 3. Click a blank space in a column to display the Advanced Options menu bar. See using Advanced Options on page 167.
- 4. To view an individual HOS record, click the text in a row.

You can click the text in any column. The cursor changes to the finger icon. After clicking, the HOS record displays in a separate **Hours of Service Details** window (see below).

5. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).

The exported HOS report contains complete information about the driver's status and tractor information. The report contains all information for the selected duration.

6. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

View Hours of Service Details

The **Hours of Service Details** page shows the driver's HOS information, including: driver name, date of record, HOS graph, and individual HOS entries. This page also displays violations, if any.

Previous	of Servi	ce Detai	IS						Next da
Driver Na	me	/	Rule Set			14	rtify ;	dit Lane	[A
Shweta	Ashtake		US 8 days/70 hours (I	nterstate)				Const Constant	
Created [Date		Exemptions				6		1
Sat, Fel	bruary 8th		None						
Latest Log	gs History E	LD Events	5						
Accepted Accepted Accept Re	d by Shweta Ashta aason: tcutx	ke 02/14/2020 1	:30:01						
	M 1 2 3	4 5 6		N 1 2 3	4 5 6	7 B	01 9 11111111	11 M	
OFF	110 111 111					112 212 21	1 111 11	17	09
		-2010 (Col. 1941) - 1		with the second second second	C. 102, S. 102, S. 10	0.00 PT 10.00 PT 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	00	E.F.
SB						_			00
68 D	alian alia		un ale ale ale ale a			11/11/01	1.117-11	06	51
SB D ON						ale ale al		06	51 50
SP D ON Status	Time/Start	Duration (hh.mm)	Location	Tractor No	Trailer No	Trip	DOT #	Origin	51 50 Updated on
SB D ON Status DFF JUTY	Time/Start	Duration (hh:mm)	Location Not able to deter	Tractor No Not Available	Trailer No	Trip Name My trip	DOT #	Origin	ຢ ຍາ Updated on

This window displays:

- 1. The driver and date of the report.
- 2. A graph displaying the HOS record.
- 3. A detailed table showing each change of status entry, time, duration, and location and vehicle information, if available.

4. A table on the bottom of the page showing the HOS violation type (if any) and the time the violation occurred (not shown).

On this window, you can:

- 5. Click a tab header to view the Latest Logs, History, or ELD Events (shown below)
- 6. Click **Edit Logs** to edit the driver's HOS entries for the selected date.
- 7. Click the .PDF icon to export the report to a .PDF file. See how to Export a Report (page 166).
- 8. Click **Previous Day** to view the detail page for the previous day, or click **Next Day** to view the next day's detail page.
- 9. Click the X to close the Hours of Service Details page and return to the Hours of Service page.

Latest Logs History	ELD Events							
Status Time/Start	Duration (Mumm)	Location	Tractor No	Trailor No	Trip Name	007 #	Origin	Updated on

					Select eld eve	ents	*	
Status/Event Type	Time/Start	Location	Odometer	Eng. Hours	Driver Comments	Origin	Record Status	
Off Duty	12:00 am	Not able to determine locati on	0	0	Not Available	Auto	Active	

Edit Hours of Service Logs

The DriverConnect portal allows Fleet Managers to edit certified HOS logs on the **Edit Hours of Service** page, provided it is within the past 7 days. Logs that have not yet been certified by drivers cannot be edited. Note that this functionality is only for Fleet Managers. Drivers can certify and edit logs only on the driver app.

After editing, the updated log entry is sent to the driver. The driver must either accept or reject the edits in the DriverConnect app. Edited logs that have not been accepted/rejected display as "pending" in the app and portal.

Note: Even though a manager can update a driver's logs, *the driver is still responsible* for making sure the logs are updated and accurate.

Once you are in the **Hours of Service Detail** page, you can make edits. Logbook edits work by adding new duty status entries for a time frame you define. These new entries *overwrite and replace* existing entries.

Only On Duty, Off Duty, and Sleeper Berth time can be edited. You cannot edit (add new or overwrite existing) driving time.

Click Edit Logs on the Edit Hours of Service page to begin.

Hours	SOIS	erv	ice	Det	ans	ξį.															
	10.1	÷ 9	1	3	÷			H	10	6	1.1	2	4	9.3	1	0	1	10	31	iat.	
100	11112	C. T. L.	111	1011	1717	100	111 1	-	1.1	-	11		111	1777	111		112		1.1.1.	2111	
-	110	14		31 3	1.1	11	16.4	17	T	123	-1-	71	T	da.	11	111	1		1.440	-	
	H		H		1				1	t.										++=	
1214	-14-			1944	-	114	44.4	-	-	1	11	-1+1-	1		1	111	111		1+ +1+	-	
	linh	teluta.	hatak	aniu	alan	لمتدا	unda	alin	dun	im	Lui d	uit	(1)	11111	at.	14	AL AL	1	
														-							
ime																					
18:55				1	21:13																
uty Stat	us	_																			
OFF	9	ON	G		6	-)															
acation				N	Inte											à					
Vard	-	R		i i	Load	ng Tr	iidk									C	Ð				
		C	J			1010									-			-			
															1.481)(24		to de la	a loose b		net name
																		o the c	anver Tor	accept	ance The
																	- 12	1996	a rest the s	and so that	Acres and the

To edit a HOS log:

1. Use the sliders to select an updated time range.

The new time range displays in gray.

- 2. Click the new duty status icon.
- 3. Enter a location and a note, if applicable.
- 4. Click **Save** to save the edit or **Cancel** to exit without changing.

The **Hours of Service Detail** page displays again. Updated times are shown with a yellow tag.

- 5. Click **Edit Logs** again to add another edited time. You can make as many time edits as you need.
- 6. Click **Send edited logs to driver** to confirm your updates and send them to the driver. You cannot make further edits after sending the logs to the driver.

Hours of Serv Previous day	vice Details			Next day
Time 05:30 Duty Status	12:30			
Location	Note	3	Cancel	4
			to the dr helps to send the	ther for acceptance. This do all the changes and im together at once.

Oriver No	ime idtiver							5	Edit Loga
Greated	Date Wed,	September 3	12th						
Hos Tim	e Zone i CST								
Latest Lo	gs History i	ELD Events							
Edited (Not sent to dr	iver for acce	ptance yet) 19:25				6	Sand edited k	age to driver
	Linhinini Maria	Lului.	uluiliiliiliiliilii	1.1.1.1.1. 11 W	.1.1.1.1	मन्त्रम् । 	unio, lan	, 10, 11, 11, 11, 11, 11, 11, 11, 11, 11	l vent
18.1	da di contra da	di di che c	la illa illa illa illa il		+1+ +1+	+1+1+1+11	t the states in	ala el el el el el e	11.12
									8/25
	LA LA LA	1. K. L. K. M.	NAMES OF A DESCRIPTION OF A DESCRIPTION OF A DESCRIPTIONO	State Ale	1.1.1.1.1	1	1 X 1 X 1 X	A CONTRACTOR OF A CONTRACT OF	
-04								1 million	6476
-04	ate at at	litelatela		ماينياريد	ale ale	.1			6479
6		halada	dalala.lala	يانيان. ا			dalata		14.74
-04 Status	Time/Start	Duration (hh.mm)	Locution	Tructor	Trailor No	Trip	DOT #	Origin	Updated on
Status OFF DUTY	Time/Start	Dumtion (hhamm) 18:55	Locution	Tractor No 100	Trailbr No 128	Trip Name Nashville Trip	DOT #	Otioin Manager	09/28/2017 18:03
OFF DUTY ON DUTY	12:00 AM	Duration (hhamm) 18:55 02:17	Locuition note Yard	Triactor No 100	Trailor No 128 128	Trip Name Nashville Trip Nashville Trip	DOT # DCLT12345 DCLT12345	Origin Manager Manager	09/28/2017 09/28/2017 18:03 09/28/2017 18:03

Log Statuses

On the **Hours of Service** page, a log can display with one of the following statuses:

 Logs the driver has entered, but has not yet certified, display as "Not Certified."

- Logs certified by the driver display as "Certified."
- When you edit and save a log, the status changes to "Edited."
- When you send an edited log to the driver, the status changes to "Pending Acceptance."

The driver has the ability to either approve or reject an edited log.

- If the driver rejects the changes, the status displays as "Rejected."
- If the driver approves the changes, the status displays as "Approved."

Edited statuses also display with a color-coded bar:

- Green: Edit has been approved by the driver
- Red: Edit has been rejected by the driver
- Orange: Edit is pending acceptance
- Yellow: Edit has been made in the portal, but has not been sent to the driver

Vehicle Inspections

The **Vehicle Inspections** page displays Driver-Vehicle Inspection Reports (DVIRs) for each driver and tractor during a date range. You can export the list of DVIRs to a .PDF or Excel report. You can also view an individual DVIR and export it to a .PDF file.

The Fix Status column shows the status of the DVIR. See below for details on statuses.

If you are a Driver: You will only see DVIR information for yourself. If you are a Fleet Manager (FM) or a Terminal Manager (TM):



You can select any of your drivers to view.

1. Select your filters from the dropdown menus and click **Search**. See how to use Search Filters (page 163).

The report table displays the results of your search. The default view shows the newest DVIRs first.

2. The image icon (a) displays in a row if the driver uploaded pictures with the DVIR.

- 3. Click a blank space in a column to display the Advanced Options menu bar. See using Advanced Options on page 167.
- 4. To view an individual DVIR, click the text in a row.

You can click the text in any column. The cursor changes to the finger icon. After clicking, the DVIR displays in a separate **Daily Vehicle Inspection Report** window (see below).

- 5. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).
- 6. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Daily Vehicle Inspection Report

When you click to open a DVIR, the report displays in the **Daily Vehicle Inspection Report** window. This window displays the tractor and trailer defects listed on the report, the signature of the driver who reported them, and additional comments made by the driver.

Tractor Defects	Ť	Trailer Defects	
Tites		No defects reported	<u> </u>
Comments		Signature	
slight separation of wheel well cover		DRIVER	
inages 📀			Max no. of images

- 1. Click anywhere in a column to display the *Advanced Options* menu bar. See using Advanced Options on page 167.
- 2. Click the .PDF icon to export the report to a .PDF file. See how to Export a Report (page 166).
- 3. Pictures to support the DVIR display in the **Images** section.

You can click the X on a picture to delete it from the DVIR:



- 4. Click **Delete** to remove the image from the DVIR or **Cancel** to keep the image and return to the **Daily Vehicle Inspection Report** window.
- 5. You can upload additional pictures (up to 3 total per DVIR). Click
 + Upload.

Select a picture from your computer to upload and attach to the DVIR.

6. For defects listed as **Not Fixed** (that is, when the driver reports that the vehicle cannot be operated safely), the DVIR must be certified upon repair.

Once the repair has been made, type the name of the individual who certified the repair, and click **Certify Defects**.

All defects fixed	6 Certified
Mechanic Name	

The status changes to **Fixed**, and displays as Certified in the **Daily Vehicle Inspection Report** window

7. Click the X to close the Daily Vehicle Inspection Report window and return to the Vehicle Inspections page.

Fix Status

The Fix Status column lists the status of each DVIR.



These statuses include:

- Not Fixed: The DVIR lists defects that make the vehicle unsafe to operate. The vehicle or trailer needs to be repaired before operation, and the repair needs to be certified on the portal.
- Defects need not be corrected immediately: The DVIR lists defects, but the vehicle can still be operated safely. The vehicle or trailer still needs to be repaired, and the repair needs to be certified on the portal.
- Fixed on: (Date), Fixed by (Name): The defect has been repaired on the date listed, by the individual listed, and certified. The vehicle or trailer is now safe to operate.
- No defect DVIR: No defects were reported on the DVIR.

Personal Conveyance

The **Personal Conveyance** page provides a report on yard move and personal conveyance (or "Line 5") driving time.

ain an the log is		10 12	06/2010		eest (L'estatos ortes			
						B.7 + +			
Vehicle	Drivet	Date	Dist Time	End Time	Location	Duration(Hittmen)	Status Type	Trip Name	Comment
10	Test Trader	15/56/2017	10.15 PM	63:39 PW	Not Available		Personal Consequence	Test Title T	
1	Tem Thurier	12/22/2016	06.07 PM	06.40 PM	Not Available	m C	Yard Move	Nor-Available	
4	NameDriver	12/09/2016	10.00 AM	05-97794	padrep ht	36.0	Yard Move	Not Available	moving from Say 2 to 13
	Name Driver	12106/2016	11197 AM	12:00 AM	Not Realisting	3194	Text Move	No: Available	Next-Invalidable:

1. To begin, select your filters from the dropdown menus, and click **Search**. See how to use Search Filters (page 163).

- 2. Click anywhere in a column to display the *Advanced Options* menu bar. See using Advanced Options on page 167.
- 3. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

HOS Violations

The **HOS Violations** page lists a driver's Hours of Service violations, if available, along with the date and time the violation was logged.

Driver	Violation Type	
	CONTRACTOR DE LA CONTRACTOR	Log Date
Test Trucker	Driving Season	82/19/2017 08:02 PM
Test Truther	triveg bester	10/18/2017 04-40 PM
Test Trucker	Work Day	\$1/13/2017 04:36 PM

1. To begin, select your filters from the dropdown menus, and click **Search**. See how to use Search Filters (page 163).

- 2. Click anywhere in a column to display the *Advanced Options* menu bar. See using Advanced Options on page 167.
- 3. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Current Totals

The **Current Totals** page shows how much time each driver has left to drive and be on duty for the day/week.



1. To begin, select your filters from the dropdown menus, and click **Search**. See how to use Search Filters (page 163).

- 2. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).
- 3. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.

Driver Information

The **Driver Information** page shows information about each driver in your fleet or terminal. It also displays login activity, group and terminal memberships, time information, and information about the last truck the driver used.

S RAND MINAL	T DriverCorre	ŝ.		Ú.		et - Donalde	eet Polite	ani - Andyten -	Antiput	· Person	11 ×	
Driver Infor	mation Repo	These start film	-	1.00	6		-	l,		3	3)	00
Driver Market	Rebail Login 10	but	Last Bigs Dut.	dettes	Last Sign Is	Chen File Syrus Upskale	Baudel Type	Model Sector No.	-	Territol	Time Jone	Have Day!
Instal Select	104	and probability	2	100	NV94389481 EE29 MM	ptices pape bes. Material	erco .	R/A	innach Houghte, Househith, Househith, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseupon, Hitseu	Stania, fast	kitit	1ee
berrent	***	ent Straher un	PLAN THE REAL PLAN		17.02.000 mil. 17.12.00	11,000,00014 10 01,00,000	-	210	Hitping, her Minespecie Rit, test, prod /her, press, fair, press, fit	mana, bar	-	77
New York Law	APR .	investments of	NUMBER OF STREET	180	AN UNLINED OF	PUERDERSE. PUER-MAR	8100	16.04	Thistop	Swatt, Ball	107	144
territore.	1000	witholites en	00710999347344 946	-	STREET, STREET	10.09(2019)(0) 2710(A44)	(Included)	Notice and Addition	det	Yours, but (107	(99)
123 4441	ie .	au fighallona ann	1217-019-0-54-0- M	.10	TO TO THE B.	COLORING:	erca	5.0	-	A	117	100
		11 (10) produces and	1000000000335	184	Stational State	42/03/2014 12 2015/ AM	#100	-	summer V		107	-
-	-	Reseivance.	496-1003010-0+0125 AM	-10	10,70,0070,044	DOSIDERY 111 DOUT PM	910	20	No. in case	(hum, hat	DRY	Yes .

1. To begin, select your filters from the dropdown menus, and click **Search**. See how to use Search Filters (page 163).

- 2. Click anywhere in a column to display the *Advanced Options* menu bar. See using Advanced Options on page 167.
- 3. Click an export icon to export the report to a .PDF or an Excel file. See how to Export a Report (page 166).
- 4. If the information from your search spans multiple pages, click the pagination buttons to jump to a different page.