

PRODUCT INFORMATION

DES CRIPTION

Thankyou for purchasing Hollyland wireless HD video transmission system. Theproduct uses currently newest encode, decode and 5G wireless transmission technologies. And can achieve ultra-low latency video transmission. It transmits over 600FT with a clean line of sight (LOS), supports to 1080P 60Hz resolution, and in the end achieves Full HD HDMI video transmission.

KEY FEATURES

- 200m Transmission Range
- Less than 0.1s Latency
- HDMI Input & HDMI Loop Out, Dual HDMI Output
- Mounting Batteries for Both the Transmitter and Receiver
- 6~16V DC Power Input
- 1 Transmitter withMultiple Receivers
- Smart Terminal Monitoring
- Smart ChannelSelecting
- USB Firmware Upgrade
- OLED Display
- Stable & Reliable Industrial Metal Case

APPLICATIONS

- Filmmaking
- Live Broadcasting
- Sports Activities
- Education Recording
- Wedding Ceremonies
- Corporate Events

PACKING LIST





① Transmitter

x1

 $\mathbf{x1}$

x5

x1

- 2 Receiver
- ③ Antenna
- ④ Quick Guidex1
- ⑤ Cold Shoe
- 6 Expansion Accessory x1
- ⑦ DC Adapter x1
- (8) Type-C Converter x1



STANDARD SETUP



This wireless HD video transmission system uses the latest wireless communication technology, andtransmits ultra-low latency HD video transmission. The transmitter supports HDMI Input and HDMI loop out, while the receiver supports dual HDMI output. It is equipped with OLED display screen and supports Smart Terminal Monitoring.

🐼 HOLLYLAND

PRODUCT INTERFACES



A Transmitter

- ① Antenna Interface
- 2 HDMI Input
- ③ HDMI Loop Out
- ④ DC Input
- ⑤ OLED Display
- 6 Button Down
- ⑦ Button OK
- (8) Button UP
- (9) USB Upgrade Interface
- 10 Fan Air Outlet
- 1 Power Switch
- 1/4 Screw Hole

B Receiver

- ① Antenna Interface
- ② HDMI Output
- ③ DC Input
- ④ OLED Display
- ⑤ Button Down
- ⑥ Button OK
- ⑦ Button UP
- (8) USB Upgrade Interface
- 9 Fan Air Outlet
- 10 Power Switch
- 1/4 Screw Hole





- ① Install the antenna as demonstrated
- ② Mount and fixed the transmitter&receiver
- ③ Connect to a power supply
- ④ Turn on the device

Hollyland



- ① Device ID
- ② Scene Mode
- ③ USBDisk Detection Display
- ④ BatteryStatus
- 5 Signal Strength
- 6 ReceiverNumber
- ⑦ Channel Display
- ⑧ Video Format

- ① Device ID
- ② Scene Mode
- ③ USBDisk Detection Display
- ④ Battery Status
- **5** Signal Strength
- 6 Device Number
- ⑦ Channel Display
- 8 Video Format



- 1. When the devices are disconnected, a cross "x" will appear above the signal strength bars on both the transmitter and receiver. As shown in the above diagram, device 1 is on connected status, device 2 is on disconnected status.
- 2. As shown in the above diagram, "NO VIDEO" will appear on the screenif there is no video input detected, and the video format will appear if there is a video input detected.





- 3. The black and bold text on white background means that it is the DFS channel, while the white text on the black background is the non-DFS channel.
- 4. When the device detects the USB disk connected, the USB disk detection display lights up.
- 5. When the voltage is too low, the low battery alarm will be triggered and the icon will flash slowly.
- \diamond Caution
- 1. When the receiver is not connected, it will not display the hotpot number.
- 2. When the receiver is turned on, the channel number will not be displayed before the receiver is connected with transmitter.

CHANNEL CHANGE

Press the channel button "UP/DOW N" on the transmitter or receiver to change the current channel.

Press "OK" to confirm the channel, then the channel of the transmitter and receiver will be

automatically and synchronous ly changed.

DEVICE UPGRADE

- 1. Copy upgrade firmware to a USB stick.
- 2. Insert the USB stick into the OTG converter and connect it with the USB Type-C upgrade interface on the transmitter.
- 3. Reset the device, and enter into upgrade interface.
- 4. Once the upgrade is complete, it will display "upgrade successfully", and device will be automatically upgraded.
- ♦ Caution USB disk should be at FAT32 or exFAT format.

QUICK GUIDE Transmitter



- 1. Long press "OK" button for about 3 seconds, enteringintothe root menu interface, it includes scene mode, system setting, version information options.
- 2. Select "SCENE MODE", then click "OK" button, you can select "IMAGE MODE", "BALANCE MODE", "SPEED MODE".
- 3. Select "SYSYTEM SETTING", then clicking "OK" button, you can select "LANGUAGE (Chinese/English)", "PAIR", "RESET".

4. Select "VERSION INFO", thenclick "OK" button, you can check the version information. **Receiver**

🛞 HOLLYLAND



- 1. Press"OK" button for about 3 seconds, entering into the root menu interface which includes channel scan, system setting, version information options.
- 2. Select "CHANNEL SCAN", then click "OK" button, the device will scan and detect the current frequency environment, available " \checkmark ", unavailable " \asymp ".
- 3. Select "SYSTEM SETTING", then click "OK" button, you can select "Language (Chinese/English)", "PAIR", "RESET".
- 4. Select "VERSION INFO", thenclick "OK" button, you can check the version information.

SMART TERMINAL MONITORING

- Android system installation and use
- 1. The application name is "Holly View". It is available on Hollyland's official website and Android APP store.
- 2. No.1

Scan the device QR code, the APP will be automatically connected to the device.Enterthe main interface, you can monitor the video.

No.2

Input the device ID number, manually connect the device, enter the main interface, and you can monitor the video.

- IOS system installation and use
- 1. The applicationname is "Holly View". It is available at APP Store.
- 2. Using methods are the same as the above.



PARAMETERS

	Transmitter	Receiver
Interface	HDMI Input (Type A Female)	HDMI Output 1 (Type A Female)



	HDMI Loop Out (Type A Female)	HDM I Output 2 (Type A Female)
	2 Antenna Interfaces (RP-SMA	2 Antenna Interfaces (RP-SMA Male)
	Male)	DC Input, Type-C USB;
	DC Input, Type-C USB;	
Supply Power	6~16V DC	6~16V DC
Range		
Power	<10W	<6W
Consumption		
Net Weight	165g	165g
Size	(LxW xH) : 110*62*28mm	(LxWxH) : 110*62*28mm
	External antennas and battery plate	External antennas and battery plate
	excluded	excluded
Input Video	HDM I:	/
Format	480P60,576P50,720P50/60,	
	1080i50/60,1080P30/50/60	
Output Video	/	HDM I:
Format		480P60,576P50,720P50/60,
		1080i50/60,1080P30/50/60
Frequency	5GHz	5GHz
Modulation Mode	OFDM	OFDM
Transmission	Maximum 21dBm	/
Power		
Receiver	1	-80dBm
Sensitivity		
Transmission	Less than 0.1s	
Latency		
Bandwidth	20MHz	20MHz

FAQ

• Connection Issues

- 1. Please check and make surethe power supplies function well of the transmitter and receiver.
- 2. If the battery indication shows at its low battery, please replace the battery in time.
- 3. Please try to change to another channel and connect the devices again.
- 4. Please re-pair the devices.
- 5. Please check if the antennasonthe transmitter and receiver arecorrectlyinstalled.

• Display Issues

- 1. Please check if the video source is correctly connected with the HDMI IN interface.
- 2. Please check if the transmitter shows a video format. If not, please check if the HDMI cable is connected with transmitter and camera successfully and if there is a video output from camera.
- 3. Please check if the camera output video format is compatible with this device.

• Image Low Quality Issues

- 1. Please set "SCENE MODE" to "IMA GE MODE".
- 2. Please check HDMI (IN/OUT) cable is stably connected.
- 3. Please make surethe transmitter and receiver are installed at least 1.5m above the ground.
- 4. Please check the signal strength status. If it is with only 1 bar signal, it means that the signal strength is veryweak. In this case, please change the channel or shorten the device distance.



- APP Connecting Issues
- 1. For Android systems, pleasemake sureto selectNon DFS channel.
- 2. Please check the number of APP devices. One transmitter supports maximum 1 receiver and 4 App monitoring devices, or 1 transmitter with maximum 2 receivers, withno APP monitoring.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.