

User manual
Model: 230
Brand: JOO

1 Welcome

Thank you for purchasing the **Feature phone**. Your **Feature phone** is packaged with the following state of the art features:

- 0.08M Camera
- 2.4 Inch screen
- Music
- FM Radios
- Video player and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 32 GB)
- English / Arabic / French / Swahili Support

Important:

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

Table of Contents

1	Welcome	2
2	Know Your Phone	6
2.1	Insert SIM Card	7
2.2	Insert SIM Card	7
2.3	Insert Memory Card	7
3	Basic Operations	7
3.1	Switch Phone ON/OFF	7
3.2	Unlock the phone	8
3.3	Make a call	8
3.4	Choose User Profiles	8
4	Notable Features	9
4.1	Secure your Phone	9
4.2	Blacklist and Whitelist	9
4.3	Manage Your Files	9
4.4	Connect to Internet	10
5	Call logs	10
5.1	Missed calls	10
5.2	Dialed calls	10
5.3	Received calls	10
5.4	Rejected calls	11
5.5	Delete all	11
5.6	Call timers	11
5.7	GPRS counter	11
6	Contacts	11


User Guide

6.1New	11
6.2Delete multiple	12
6.3Import/Export	12
6.4Others	12
7 Music.....	12
8 Alarm clock.....	12
9 Internet	13
10 Messages.....	13
10.1Write message	13
10.2 Inbox	13
10.3 Outbox	13
10.4Drafts	13
10.5 sentbox	13
10.6Security inbox	14
10.6Templates	14
10.7Voice mail server	14
11 Radio	14
12 Games	15
13 Camera	16
13.1Camera	16
14 Photos	16
15 Videos	16
16 Settings	16
16.1Phone settings	17
16.2Display settings	17
16.3 Profiles	17

User Guide

16.4	Security settings	17
16.5	Call settings	17
16.6	Connections	18
17	Calendar	18
	Menu > Calendar	18
	Month Display	18
18	Calculator	19
19	Voice recorder	19
20	Extras	19
	20.1 Alarm	19
	20.2 Torch	19
	20.3 Bluetooth	19
21	My files	20
22	Taking Care of Your Device	20

2 Know Your Phone

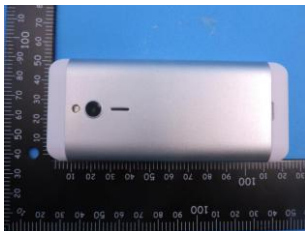

2.1 Insert SIM Card

The **device** is a Dual SIM mobile phone allowing you to use two SIM Cards.

Switch off the mobile phone and remove the rear cover and battery.

2.2 Insert SIM Card

1. Insert the SIM card correctly in the SIM slot(s).
2. Finally, insert the battery and replace the rear cover of the mobile phone.

2.3 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press any key to activate the screen.
2. Press **Left** key, and then press * key.

3.3 Make a call

You can make a call in the following ways:

Enter the desired number in standby mode and press the **Call key** to make the call.

Go to **Menu > Contacts** and then select and dial the desired number.

Just press the **Call key** to dial the contacts listed in Call logs.

You can also dial a contact from the messages.

3.4 Choose User Profiles

Menu>Profiles

You can choose your profile such as silent mode, Normal, Meeting, Outdoor, Earphone and so on.

4 Notable Features

4.1 Secure your Phone

Menu > Settings > Security > Phone Locked

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **1234**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

4.2 Blacklist and Whitelist

Menu > Settings > Security >Blacklist

Blacklist undesired SMS senders and caller so that you do not receive SMS and calling from them.

4.3 Manage Your Files

Menu >File Manager

You can view and manage your files available in the phone or memory card from the gallery. You can rename, view details, move, delete files and so on via the File manager

4.4 Connect to Internet

Menu > Settings>Connections

You can connect to the Internet via GPRS connection.

To identify network data automatically based on your SIM card.

5 Call logs

Menu > Call logs

Tip: Directly access the call History of by pressing the **Call** key in idle mode.

The Call History lists the calls you have recently dialed, received, missed for SIM1 and SIM 2

5.1 Missed calls

Menu>call logs>missed calls

5.2 Dialed calls

Menu>call logs>Dialed calls

5.3 Received calls

Menu>call logs> Received calls

5.4 Rejected calls

Menu>call logs>rejected calls

5.5 Delete all

Menu>call logs> Delete all

5.6 Call timers

Menu>call logs> Call timers

5.7 GPRS counter

Menu>call logs> GPRS counter

6 Contacts

Your Contacts stores all your saved contacts for anytime use. Your Contacts data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

6.1 New

Menu > Contacts> options > New

6.2 Delete multiple

Menu > Contacts > options > Delete multiple

In the Contacts list, select the entry you want to delete.

6.3 Import/Export

Menu > Contacts > options > Import/Export

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

6.4 Others

Speed dial

Set fast call with number 2# ~ 9#.

Own number

Memory status

Menu > Contacts > options > Memory status

7 Music

Menu > multimedia > music

8 Alarm clock

Entering alarm, choose Alarm, set time/Ringtone/Repeat mode

9 Internet

You can connect to the Internet via GPRS connection

10 Messages

10.1 Write message

Menu > Messages > Write message > New SMS

You can compose and send SMS . Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

10.2 Inbox

Menu > Messages >Inbox: Display received SMS

10.3 Outbox

Menu > Messages >outbox: Display sent out SMS

10.4 Drafts

Menu > Messages >drafts: Display save edit SMS

10.5 sentbox

Menu > Messages >sentbox: Save the information that has been sent

10.6 Security inbox

Menu > Messages > Security inbox: Enter password 1234 enter

10.6 Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

10.7 Voice mail server

Menu > Messages > Voice mail server

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number

11 Radio

Menu > FM radio

User Guide

Insert earphone. Your phone comes with an FM radio to let you listen to FM channels.

Go to Options> Auto Search and save

Options>Channel list: Display search channel

Options>Save: Save current channel

Options>Manual search: Manual input frequency

Options>Open speaker: Open the trumpet player

Options>Background play

Options>Record

Options>Timing record

Options>Record file list

Options>Storage: Select the recording save location

Press the number keys on your keypad in accordance to the channel list.

Press OK key to start/stop the radio.

Press the Up or Down key to increase/decrease the volume.

Press the Left key for various radio options

12 Games

Menu> Games

13 Camera

13.1 Camera

Menu> camera

14 Photos

Menu>Photos

Let you to view your saved images. You can also send the images via Bluetooth or use it as contact icon or wallpaper, etc.

15 Videos

Menu > Videos

Press the **OK** Key to start recording.

You can press **Options** switch to **Camera** and vice versa.

You can also press **Options** key to choose memory

Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

16 Settings

Choose various preferences to customize your handset according to your

requirements. You can set:

16.1 Phone settings

Menu>settings>phone settings: You can set date & time; language settings; shortcut settings; auto power on/off; restore factory settings.

16.2 Display settings

Menu>settings>display: You can settings wallpaper; idle display; contrast; keypad back light time; auto keypad lock.

16.3 Profiles

Menu> Settings>profiles: You can settings normal/silent/meeting/indoor/outdoor/earphone/Bluetooth.

16.4 Security settings

Menu>settings>security: You can settings PIN; modify PIN2; phone locked; modify the phone password; privacy; lock screen by end-key; guardlock; fixed dialing; blacklist.

16.5 Call settings

Menu>settings>call settings: You can operate Dual-SIM/Call divert/Call waiting/Call barring/Hide ID/Others

Others: You can operate IP prefix; call time minute reminder; auto redial; vibration when connected; reply SMS after reject; auto record voice; any-

key answer.

16.6Connections

Menu>settings>connections: You can settings network account/GPRS service/data connection settings/network selection/internet.

Internet:

You can use the network-related services with this function

17 Calendar

Menu > Calendar

Month Display

On month display of Calendar, slide the screen up and down to view the previous and the next month calendar. Display option menu, perform the following:

Day: Touch this option to switch into Day display.

Week: Touch this option to switch into Week display.

Month: Touch this option to switch into Month display.

Agenda: Touch this option to switch into Agenda list.

Today: On Month calendar, touch this option, highlight the system date;

On Agenda list, touch this option to browse today's agenda records.

More: Include New event, Select Date, Calendars to display, Settings, Delete all events.

18 Calculator

Menu > calculator

19 Voice recorder

Menu > Voice recorder

You can record surrounding sounds using this feature

20 Extras

20.1 Alarm

Entering alarm, choose Alarm, set time/Ringtone/Repeat mode

20.2 Torch

Menu > extras > torch

You can open on/off the light.

20.3 Bluetooth

Menu > extras > bluetooth

Bluetooth headset to listen to music or talk

21 My files

Menu>My files

Option Menu

On files or folders directory interface, press [Options] to display option menu, perform the following:

New folder: Display options menu of New, including: File, Folder, Search.

Delete: Delete this file or folder.

Details: View the properties of this file or folder.

Rename: Rename this file or folder.

Copy: Copy this file or folder

Sort: Sort by Name/Time/SIZE/Type

Mark: Mark to select the file or folder

Memory status: See phone memory capacity and memory card capacity, or format phone memory and format memory card.

22 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

User Guide

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room

User Guide

temperature range.

- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Feature phone will not be held responsible for user's safety when using unapproved accessories or supplies.

▪ Recycle Your H



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment.

User Guide

Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. Feature phone keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Feature phone is strictly prohibited.

User Guide

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User Guide

Specific Absorption Rate (SAR) information:

This Feature phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: 230 (FCC ID: 2AI8M23) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.753W/kg and when properly worn on the body is 0.704W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

User Guide

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.