


onn.TM


Portable FM Boombox
Quick Start Guide

What's in the Box? Check to make sure you have everything below

- 1 USB-C power cable
1 Quick Start Guide
1 Portable FM Boombox

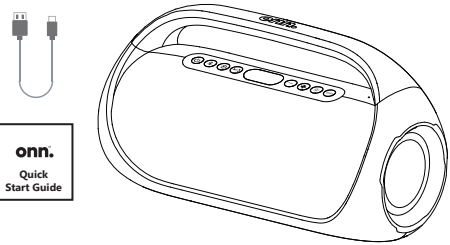

Get to Know Your Boombox

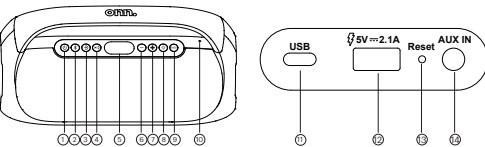


- | | |
|--------------------------------|---------------------------------------|
| 1. Power | 8. Light |
| 2. Bluetooth | 9. Bass boost |
| 3. Source | 10. Microphone |
| 4. Play/Pause | 11. USB-C charging port |
| 5. LED display | 12. USB Emergency power charging port |
| 6. Volume down/ Previous track | 13. Reset |
| 7. Volume up/ Next track | 14. 3.5 mm AUX input |

Let's Get Started!

01

Press & hold to power on/off the speaker.

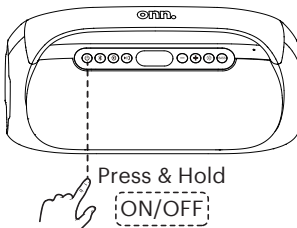


Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place. Recommend to charge it at least one time for every half year, in order to keep the battery performing well. Empty battery too long may result in fewer hours of usage between charges.

Built-in Rechargeable Li-ion Battery: 7.4V 4000mAh

Connect Your Boombox

02

Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Boombox".

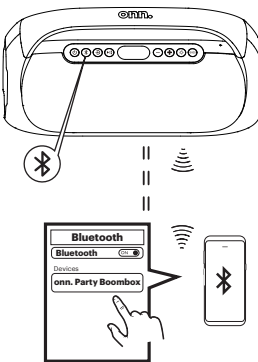

We'd love to hear from you. Scan with your Walmart app and let us know what you think.




Need help? We're here for you every day 7 a.m. - 9 p.m. CST. 1-888-516-2630 Give us a call!

Want Your Party to the Next Level?

03


1. Power on both speakers, press & hold of each speaker to enter Party Sync Mode.
2. When two speakers paired, you will hear "left channel, right channel". The left channel is the master.
3. Use your mobile device to pair with the master speaker by Bluetooth pairing method.
4. Press & hold again to disconnect Party Sync Mode.

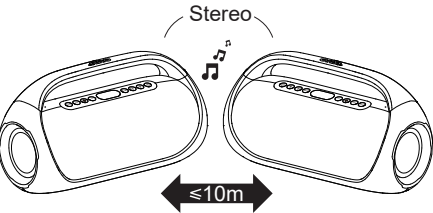

Wired Use? Yes!

04


1. Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source.
 2. Press Play on your audio source device and adjust the volume on the speaker.
- * In AUX mode, can't be used, you can ONLY control it by your audio source device.

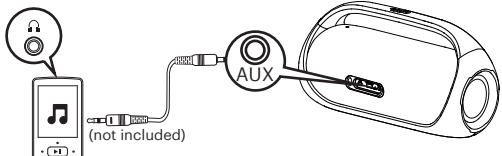

Listen to Your Favorite Radios

05

1. Press to select FM mode.
2. Press or to scan and select FM stations step by step.
3. Press & hold or to scan and seek (jump to the next available station).
4. In FM Mode, press and hold to assign the current station to a preset number, the LED screen will show "SAV" to show the station has been saved. The preset number can be changed by pressing and .
5. In FM Mode, press repeatedly to select a saved radio station.

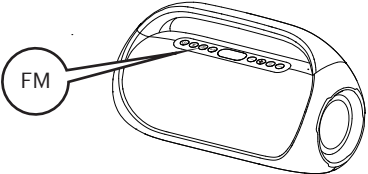


Take a Phone Call

06

1. Press once to answer an incoming call, press again to hang up the call.
2. Press & hold to reject an incoming call.


* Press twice to wake up the voice assistant of your device.

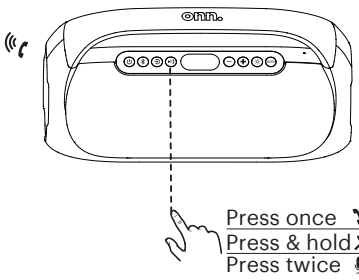


Want More Lighting Effects?

07

1. Press & hold to turn on/off the light.
2. Quick press to switch 6 between different multicolor LED lightings.

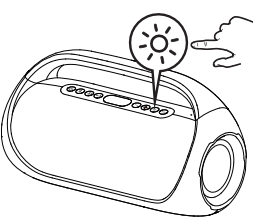

 
More tips:
- Always keep the charging port dry before connecting power.
- To ensure it is waterproof, always close the protective cover securely.



Charge Your Boombox

08

1. USB-A charging port with emergency power can charge your other smart devices (5V=2.1A output), when this Boombox is powered on.
2. Connect USB-C to 5V power adapter. Recommend to use the in-box power cable to charge your Boombox.
3. The battery icon will flash when charging, and all battery segments will be lit and remain solid white once fully charged.

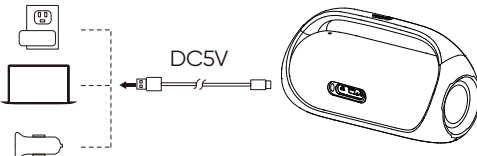

November 23, 2022_V1

ICE



Black



VERMILLION



封面

