

标识	版本号	处数	修改内容	日期
1	A1	1	修改了FCC认证信息	2021/01/05
2	A2	1	删除电池容量	2021/01/21
3				

正面

②

126 mm

480 mm

①

96 mm

05. Search Print master on App Store or Google Play to Get the App

1.Search "Print master"on APP Store or Google Play to get the app.

2.Or please scan the QR Code to download the App.

Google Play

App Store

Print master

Three Steps to Connect App

①

Open the APP

Printer

+

②

Choose Printer Model

M110Series

M110

③

Click "Unconnected" Button to Connect Bluetooth

Print Master

Unconnected

Click to enter content

Note:Please select the correct print template to match the label size before edit.

06. Installing the Paper Roll

①

Hold the printer and lift the paper cover

②

Take out the adjustable plate and remove the left panel

③

Put in the paper roll (The print side should be below) and push it to the right (Dividing ruler should be above; Note the position of the paper roll device as shown)

④

Aim the adjustable plate at both slots and slowly put into the paper bin.

⑤

Pull out the paper (Raise the paper out of the paper bin by approximately 15mm) and close the paper cover. Connect to the App, start to use it.

⑥

Press Power button for 2 sec to turn on the printer, press feed button to push one piece of plate. Connect to the App, start to use it.

07. Product Warranty Description

Thank you for choosing the label printer products produced by our company.

① We will provide customers with reliable "replacement/return" support during the one-year warranty period from the date of purchase.

② Please keep the warranty card in a safe place so that you can read it when needed.

08. FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

09. Warranty/Maintenance Card

☐ Replace

☐ Return

User Information

Name: Gender: Phone:

Address:

Product Information

Date of purchase:

Product order number:

Product serial number:

Reason for Return:

Product defect

Request Replacement

Fault description:

User Manual

Please read this manual carefully before using this product and store it properly.

背面

01. Inside Box

Printer *1

User manual *1

USB data wire *1

Adjustable plate *1

If anything is missing, please contact the supplier.

02. Product Description

① Paper Exit

② Screen

③ Power Button

④ Feed Button

⑤ Rope Hole

⑥ USB

⑦ Reset Hole

①

②

③

④

⑤

⑥

⑦

Turn On/Off

(1) Press Power Button⏻ for 2 seconds to turn on the printer.

(2) To turn it off, please press the Power Button⏻ for 2 seconds.

Feed

(1) Label paper: Press Feed Button⏻ to feed the tape to the proper place and get ready for printing next tape.

(2) Continuous paper: Press Feed Button⏻ to keep paper feeding, it will stop when you let go of the button.

System Setting

(1) Press Power Button⏻ for 1 second to switch to the setting interface.

(2) Press Feed Button⏻ for 1 second, scroll option list and select by pressing Power Button.

(3) Press Power Button⏻ for 2 seconds to go back to the main page.

03. Screen Information

Bluetooth

Setting/Transfer

Cover Opening

Paper Condition

Print Situation

External Electricity

Charging Battery

Logo guidance

When printer connects to Bluetooth, this logo will be light up. This logo will flash when the data is transferring.

Setting/Transfer @

When you are using USB wire, this logo will be shown as🔌. If you press Power Button for a short time, it will be switched to Setting Mode, the logo will be shown as Setting Mode⚙️.

Cover Opening⚠️

It indicates that the paper cover is opened or not closed correctly. A message will appear, stating that the paper cover is opened.

Paper Condition⚠️

If the paper roll is not installed correctly, or there is insufficient paper, this logo will light up. A message will appear, stating that there is no paper. When the paper is detected, it will give you a confirmation so that you are able to proceed.

Print Condition ⚠️

It will light up while the printer is printing or feeding.

External Electricity ⚠️

It will light up when the printer is connected to a power source.

Charging Battery 🔋

Please charge your printer when the power display begins to flash.

Text Area

This area shows related text information.

Screen setting

Options	Parameter
Language	English, Chinese, Japanese, Korean, Polish, Italian, Arabic, German, French, Portuguese, Spanish
Print concentration	1(Lightest), 2, 3, 4(Light), 5, 6(Normal), 7, 8, 9, 10(Thick), 11, 12, 13, 14, 15(Thickest)
Print speed	1(Slowest), 2(Slow), 3(Normal), 4(Fast), 5(Fastest)
Paper type	Continuous paper, Interstitial paper,Black mark label.
Automatic shutdown	5min, 15min, 30min, 1h, 2h, 4h, 8h, 24h, No shutdown
Restore settings	Press power button to restore
Firmware version	Display Firmware version
Device address	Display device address

Screen hint

Content	Condition
Shutdown...	Battery lower than 1%
Printing...	Printing regularly
Feeding...	Press Feed button
Overheated, please wait...	Print head is overheated
No paper detected...	No paper in the bin or paper is installed incorrectly
Cover opened...	The paper cover is opened

04. Device Parameters

Hardware

Name:

Smart label printer

Model:

M110

Print technology:

Direct Thermal

Maximum print width:

26.50mm

Types of tape:

Continuous paper, interstitial paper,Black mark label.

Label size:

57mm Xg50mm (Max width X Max diameter)

Print speed:

20-45mm/s (switchable, level 1-5)

Print concentration:

switchable, level 1-15

Print resolution:

203 dpi

Life of print head:

50KM

Connection type:

Bluetooth 4.0

Printer size:

4.5 X 3.4 X 2.5in.

Input:

5V= 2A

Power supply mode:

Micro USB

Operating system:

Android

IOS

Operating Information

Recondition set:

ES-CR205

Bar code:

1D bar code & 2D bar code

Operating temperature:

0°C - 50°C

Storage temperature:

-20°C-60°C

Operating humidity:

20%-85%

Storage humidity:

5% - 95%(Non condensation)

除非另有说明，否则公差按下表：				产品型号		<div><div><div><div>ZEGUAN泽冠</div><div>珠海泽冠科技有限公司</div></div></div><div>128g双铜版纸</div></div>															
尺寸标注	CLASS A	CLASS B	CLASS C	M110-外贸中性 英文版																	
<6.0	±0.5	±1	±2																		
6.0~30.0	±0.5	±1	±2																		
30~120	±0.5	±1	±2																		
120~400	±0.5	±1	±2																		
400~1000	±0.5	±1	±2																		
设计	乐晓凯20210121			名称	说明书		材料	128g双铜版纸													
确认	乐星20210121			料号	30400300227		颜色														
审核	彭理艳20210121			版本号	A2		比例	1:1		单位	mm		图幅								
				第三角度投影				第 1 张 共 1 张													