






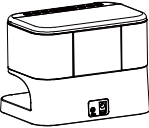





Bluetooth® Setup	White Noise	FM Radio	AUX	Specifications	FCC	Need Help?	
<div></div> <div>1. Press the Input button until you enter Bluetooth® setup.</div> <div></div> <div>2. On your smartphone or tablet, search for the Bluetooth® device named "Harmony" and tap to connect.</div> <div></div> <div>3. A prompt will play once pairing is successful. The LED light will pulse blue when in Bluetooth® mode. <small>Note: Press and hold the Input button if you wish to exit Bluetooth® mode.</small></div>	<div></div> <div>1. Press the Input button until you enter White Noise mode.</div> <div></div> <div>2. Press the ▲/+ buttons to cycle between 4 different white noise options.</div> <div><small>Note: Press and hold the Input button if you wish to exit White Noise mode.</small></div>	<div></div> <div>1. Press the Input button until you enter FM Radio mode.</div> <div></div> <div>2. Press and hold the Pause/Play button to scan radio stations 87-108. Stations with good reception strength will automatically save. Press again to stop on your desired station.</div> <div><small>Press the ▲/+ buttons to decrease or increase volume. Press and hold the ▲/+ buttons to access up to 21 saved radio stations.</small></div> <div><small>Note: Press and hold the Input button if you wish to exit FM Radio mode.</small></div>	<div>1. Insert an AUX cable (not included) to start playing music from your device.</div> <div></div> <div></div> <div>2. Press the Input button to switch between modes.</div> <div><small>Note: Press and hold the Input button if you wish to exit AUX mode.</small></div>	<div><ul style="list-style-type: none">• Horn output power: 2*3W RMS• 5W Qi wireless charger• Bluetooth® wireless technology• Night light• White noise• Snooze• FM radio• Aux-In• DC 9V/1.5A UL adapter</div> <div>Reset</div> <div><small>If Harmony is not operating properly, you may reset it. To do so, power off Harmony. Then, press and hold the Power button for 8 seconds until Harmony powers on, then off, and then back on again. Be sure to continue pressing and holding the Power button throughout this process. The device should now operate as usual.</small></div>	<div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div> <div>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div> <div>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.</div> <div>To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm from the radiator your body. Use only the supplied antenna.</div>	<div>Email us at support@pdaudiovideo.zendesk.com or call us at 1-833-907-6273</div> <div>We are available Monday - Friday, 9am - 5pm PST, except major holidays.</div> <div>Please email your inquiry prior to calling, as this will enable us to better assist you. Make sure to note the model number and a description of your inquiry.</div> <div>For information on recycling, please visit http://www.corenewestronics.com/support/</div>	<div></div> <div> FCC ID: 2AVRPT18M100</div>