 


DIGITAL PIANO USER MANUAL

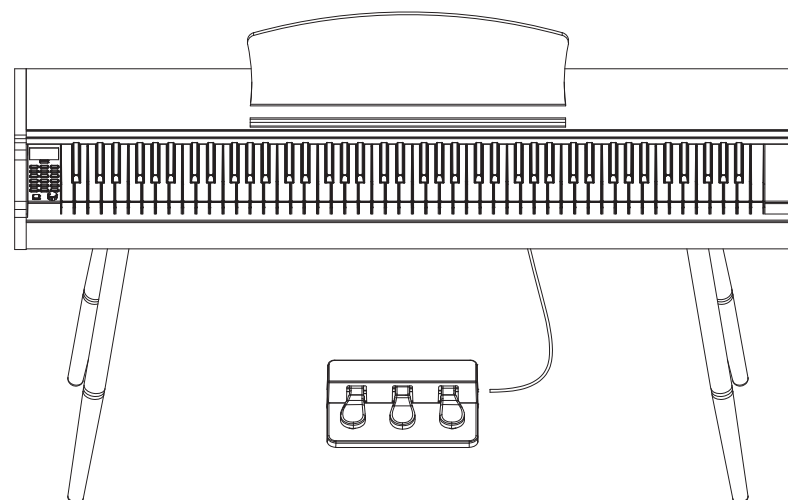

First connection of bluetooth, initial password:1688

This product is subject to change without prior notice



Warranty Card

Warranty provisions

1. Normal use of the product and the occurrence of failure, from the date of purchase can enjoy _____ Days, free warranty service.
2. The warranty period occurred during the failure, repair must present this warranty card and purchase invoices.
3. The following circumstances will not provide free warranty.
 - A. Damage caused by improper use by the user.
 - B. Failure caused by fire, flood, earthquake, lightning strike and other irresistible factors.
 - C. Failure caused by disassembly without permission.
4. After the warranty period, the company is responsible for the repair, the discretionary cost.

Repair point.: _____

Address : _____

Tel. : _____

	Product Certificate of Conformity
	Product Name: <u>Digital Piano</u>
	Model Number. _____
	Date of manufacture. _____
	Examiner. _____

Safety Precautions

Do not burn down this product

Do not put this product in the fire. Otherwise, it will lead to the burning of wood products and the explosion of internal electronic components, which will cause fire and personnel injury.



Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations should be performed immediately.



1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.

Don't dismantle and transform

Do not dismantle or transform this product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.



Fall or impact

This product is in danger of fire and electric shock after falling or being damaged by strong impact. In case of the above situation the following operations should be performed immediately.



1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.

Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Do not climb piano or bracket

Climbing on the piano body or its support is dangerous of overturning or damage. Families with young children should pay special attention to it.



Placing products

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Move this product

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to wire damage, fire and electric shock.



Clean this product

Before cleaning this product, you must unplug the power cord plug from the wall outlet otherwise there is a risk of fire and electric shock.



Socket connection

Only designated devices and devices can be connected to the sockets of this product. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



Location selection

Avoid placing this product in the following places. Otherwise there is a danger of fire and electric shock. High temperature or dusty places. Kitchen or other place with lampblack. Where the product is exposed to direct sunlight or any other place where the product will produce high temperature.



Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy objects

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Heavy objects

The incorrect installation of the bracket will cause the product to fall over, and there is a risk of injury to the personnel. Therefore, it must be assembled in accordance with the instructions attached to the instructions to ensure that the product is properly mounted on its bracket.



Fuse replacement

If the fuse is blown, there is a possibility of short circuit inside the product or voltage instability, need to be professional judgment and replacement, otherwise there is a risk of fire and electric shock.



Function introduction

Thank you for choosing this digital piano from our company.

This elegant and exquisite product is a perfect combination of contemporary

• brand-new electronic technology and traditional musical instruments.

You must read this instruction manual carefully before using this instrument.

Musical instrument parameters.

Piano keys: 88 keys weight step by step.	Pitch: < 3 minutes.
Voice range: A2~C5.	Output power: 8Ω/20Wx2.
Style: desk piano.	Power parameter: AC100-240V-50/60HZ 1.5A. DC 15V/3A

- Sound control, recording, playback.
- Jack: USB, audio input, audio output (headset output).
- Demonstration song: 128.
- Rhythm: 128.
- Tone: 380.
- 3 pedal function.
- Bluetooth dual-mode receiving and transmission

Note!

- This product is an electronic instrument product. It is a normal phenomenon that there is a little current sound in the loudspeaker or headset after being electrified. Please stay away from all RF interference sources such as radios, televisions, antenna receivers, routers, refrigerators, televisions, electrical appliances with motors, etc.

Catalogue.

Brief introduction of function.-----	1
Catalogue.-----	2
Installation Guide.-----	3
The rear side panel of the piano is illustrated.-----	4
Functional operation instructions.-----	5
Timbre table.-----	6
Rhythm table.-----	11
Demonstration song.-----	12
Product maintenance.-----	14
Safety precautions.-----	14
Warranty card-----	17

Safety Precautions

WARNING

Smoke, odor, overheating:

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately.

1. turn off the power.
2. Pull the plug out of the power outlet.
3. Contact your dealer

Power cord:

Improper use of power cord may cause fire and electric shock. The following precautions must be observed.

The special power cord designated for this product must be used.

The AC power supply with output voltage within the rated voltage range for household use must be used.

Do not overload power sockets and extension lines.

The improper treatment of power line will lead to damage or breakage, which will lead to fire and electric shock hazards.

The following precautions must be observed.

Do not place or heat heavy objects on power lines.

Do not attempt to alter or bend the power cord too much.

Do not twist or pull the power cord. If the power cord or plug is damaged please replace the same type of power cord.

Do not touch the power cord and plug with wet hands otherwise there is a danger of electric shock.



Please use the power cord where it won't splash. Water is in danger of causing fire and electric shock. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock. Do not allow minors to unplug and touch power lines or connection boards, minors do not have electricity safety common sense, there is a risk of electric shock.



BE CAREFUL

Improper use of power cord may cause fire and electric shock. The following precautions must be observed.

Do not put the power cord near the furnace or other heat source. Do not pull the power cord when unplugging the power socket, but must grasp the plug body.

The power cord plug must be inserted in the socket to the end. Make sure the power supply is off before connecting or disconnecting it.

When thunderstorms occur or before traveling or other long-term departure disconnect the power cord from the wall outlet.

Remove the power cord from the wall outlet at least once a year and clean the dust accumulated around the plug.



Product Care

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing failure.

1 AVOID HEATING,DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight or place it near air condition or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO.

This product may cause video or audio interference to the reception of TV and radio. If this happens,the product should be removed from the TV or radio.

3 NO PAINT,DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE,AVOID COLLISION

 
When moving,the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

Safety Precautions

POWER SUPPLY

This product can be powered by standard indoor wall sockets.Please only use the power cord specified in this product.When not in use,please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

220V AC outlet

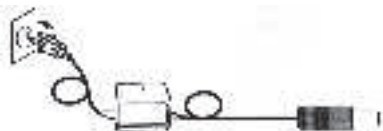

MARKING MAP

To ensure that you use this product safely and correctly,to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs.The various signs and their meanings are as follows:

WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO

This triangle sign(Δ)indicates what users should pay attention to.(The left picture shows a cautious electric shock)

 
A circular sign(C)with an oblique line indicates prohibitions.The icons in or beside the logo indicate the contents specifically prohibited.(No disassembly is allowed on the left)

Black dots(·)indicate what must be observed.The diagrams in this sign indicate the contents of the specific matters that must be observed.(The left picture shows that the power plug must be pulled out of the socket)

Installation Guide.

Note !


- In order for you to use this equipment correctly, please install it according to the installation guide and carefully read the "Safety precautions" in the user's Manual before using it.
- This product needs to be installed by adults, do not let minors install independently!

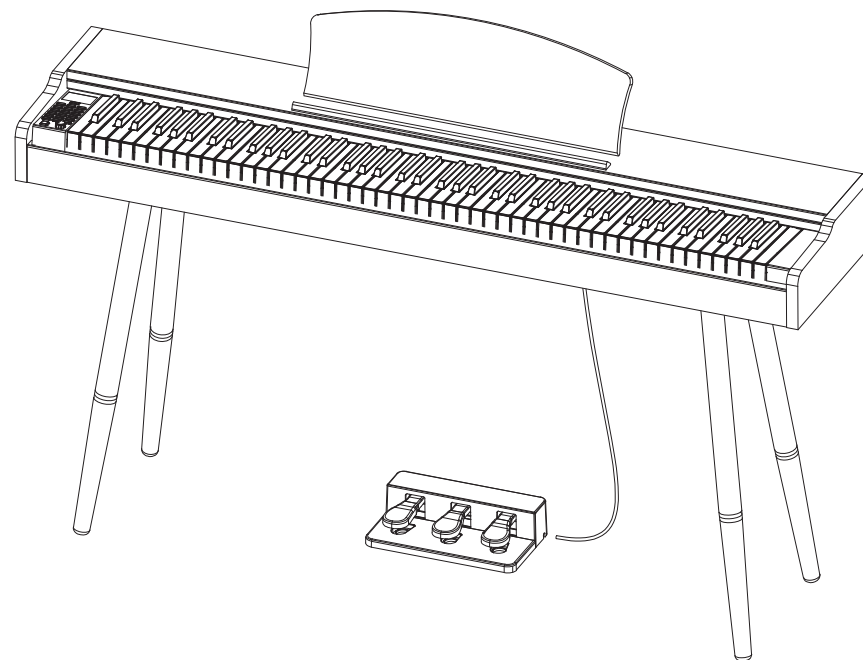

① Screws (M6x12=16)

Illustration of the rear side panel of the piano

 Jack panel

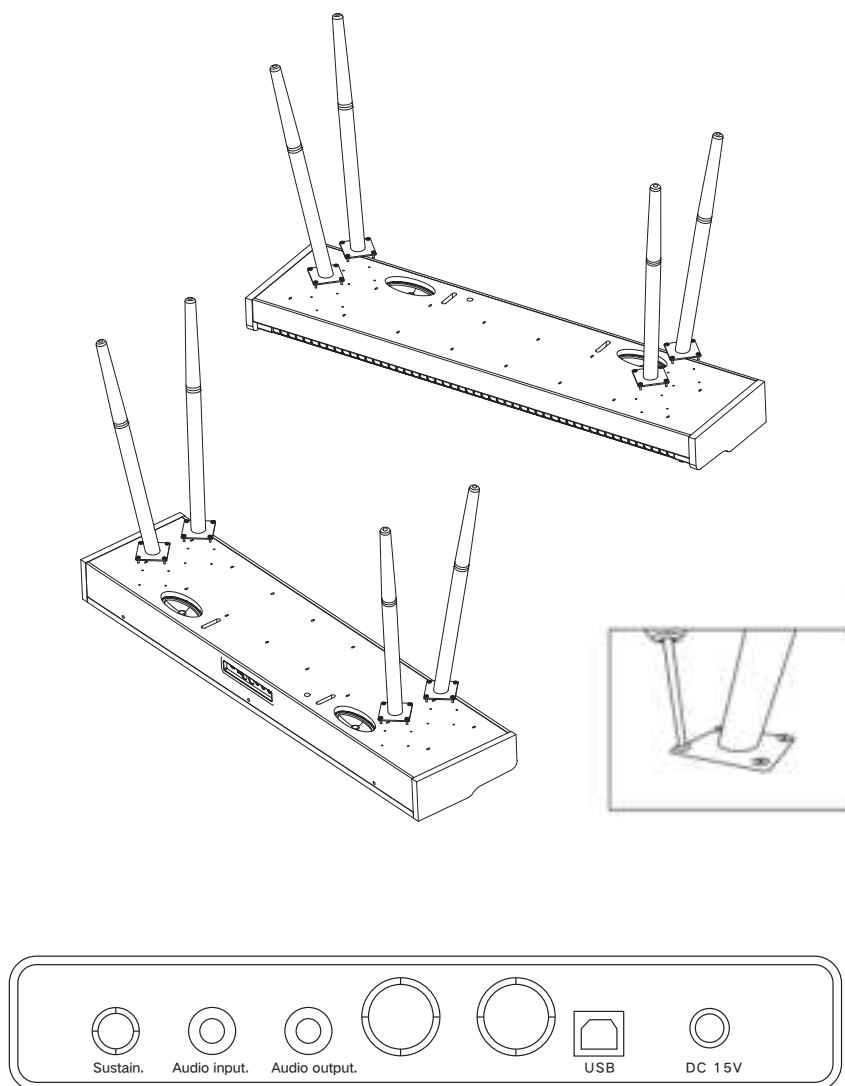

Appendix

48	LandThen	89	Solace2
49	KeroLado	90	Stoptime2
50	Spring	91	Tango2
51	Massas	92	Enrttanr2
52	Manger	93	Valse3
53	Auldlang	94	Valse4
54	Tingle .B	95	Verntian2
55	Tango	96	Waltz G2
56	Radetzky	97	Hornpipe2
57	Swans	98	S.Night2
58	CL.polka	99	A-lilang2
59	Basket	100	Duck2
60	Jasmine	101	Bullfigh2
61	P.Bamboo	102	DannyBoy2
62	Youth	103	Swanlake2
63	Ocean	104	Saints2
64	Goatherd	105	SoloRive2
65	Bamboo	106	Edelueis2
66	Hawthorn	107	Hungaria2
67	Yoo	108	Eruperor2
68	River	109	Santalu2
69	Moutain	110	Patrol2
70	LiuYang	111	Sorrento2
71	Prayer2	112	Ribbon2
72	AndaLuza2	113	Joy2
73	Cuckoo2	114	Block Joe2
74	FutElise2	115	Texas2
75	Gavotte2	116	Danube2
76	Gipsy2	117	Menuet.G2
77	Humores2	118	LandThen2
78	Tanzstu2	119	KeroLado2
79	VioLette2	120	Spring2
80	Petits2	121	Massas2
81	Licher2	122	Manger2
82	WildRose2	123	Auldlang2
83	M.L.rag2	124	Tingle .B2
84	Nocturne2	125	Tango2
85	P.L. rag2	126	Radetzky2
86	P.rag2	127	Swans2
87	Romance2	128	CL.polka2
88	Scweizer2		

Appendix

076	Trot	103	POP3A
077	Polk	104	POP4A
078	fox	105	POP5A
079	March--1	106	POP6A
080	March--2	107	POP7A
081	China1	108	POP8A
082	China2	109	8Beat1A
083	China3	110	8Beat2A
084	China4	111	8Beat3A
085	China5	112	8Beat4A
086	China6	113	8Beat5A
087	PopBossa	114	8Beat6A
088	Bolero Dance	115	16 Beat1A
089	RumBa1	116	16 Beat2A
090	Beguine	117	16 Beat3A
091	MamBo	118	16 Beat4A
092	ChaCha	119	16 Beat5A
093	Samba1	120	16 Beat6A
094	BossaDnc	121	16 Beat7A
095	Rag1	122	16 Beat8A
096	Tango1	123	16 Beat9A
097	Tango2	124	16 Beat10A
098	TrdWaltz	125	8BeatRK1A
099	Waltz1	126	8BeatRK2A
100	Waltz2	127	60ROCK1A
101	POP1A	128	60ROCK2A
102	POP2A		
SONE:			
NO.	ENGLISH		Valse2
1	prayer	25	Verntian
2	AndaLuza	26	Waltz G
3	Cuckoo	27	Hornpipe
4	FutElise	28	S.Night
5	Gavotte	29	A-lilang
6	Gipsy	30	Duck
7	Humores	31	Bullfigh
8	Tanzstu	32	DannyBoy
9	VioLette	33	Swanlake
10	Petits	34	Saints
11	Licher	35	SoloRive
12	WildRose	36	Edelueis
13	M.L.rag	37	Hungaria
14	Nocturne	38	Eruperor
15	P.L. rag	39	Santalu
16	P.rag	40	Patrol
17	Romance	41	Sorrento
18	Scweizer	42	Ribbon
19	Solace	43	Joy
20	Stoptime	44	Block Joe
21	Tango	45	Texas
22	Enrttanr	46	Danube
23	Valse1	47	Menuet.G

Functional Operation Instructions

Function Instruction:

- [timbre / keyboard drum]: default timbre selection after power on. When playing, you can use the function [Select +] or function [Select -] key to select one of the 380 timbre. Press the [timbre / keyboard drum] key for 2 seconds to release: the keyboard drum is on, and each key of the keyboard will correspond to a percussion sound effect. Pressing the key for a long time will turn off the keyboard drum mode and return to the tone adjustment mode.
- [rhythm / insert]: press the [start / stop] button and there will be a default rhythm music. When playing rhythm music, press the function [Select +] or function [Select -] button to select one of 128 rhythms to play. To select the rhythm speed, press the [Speed] key, and then press the function [Select +] or [Select -] key to adjust the rhythm speed.
Pressing [start / stop] again will stop the playing, and when playing the rhythm, you can also press the [Rhythm / insert] key for 2 seconds to release it, and you will hear a short pass door insert drum music.
- [demonstration song]: press the demonstration key to play the current song, or you can use the function [Select +] or function [Select -] key to select one of the 128 songs in the playlist. After the song is played, the next song is played automatically. Press the key again when you exit to stop the playing.
- [metronome]: press this key to turn on the metronome function, and you will hear the default beat sound. To change the beat length, press this key, and then use the function [Select +] or function [Select -] key to change another beat. There are seven beat choices. When playing the beat, press the [Speed] key, then press the function [Select +] or [Select -] key to select the beat speed, and then press the key when exiting the beat mode.
- [synchronization]: press the key to turn on the synchronization mode. When you press the key A1~F#4, the key will start the rhythm playing. Press the key again to exit the synchronization mode.
- [synthetic chord]: press the key to start the chord function, press the A1~F#4 interval key and the accompaniment comes out, and the tone of the chord changes with the pitch of the key, press the key again to exit the chord mode.
- [double Keyboard]: pressing to start this function will automatically divide the keyboard into two left and right keyboard timbre, the left keyboard is a chord timbre, the pitch of the first key on the left becomes A2, and the scales and timbre of the right keyboard remains the same, but you can choose other timbre through the timbre, and press again to exit the function.
- [dual timbre]: press to start the function, and then use the function [Select +] or function [Select -] to select the second timbre of the keyboard, then the timbre emitted when playing the keys will be pronounced with two timbre at the same time. Click again to exit the function.
- [recording] [playback]: press the [recording] key to get ready for recording. After playing a repertoire on the keyboard, press the [playback] key to play out the track you just recorded, and press the [recording] key the second time. It will erase the previous recording and start a new recording.
- [shift]: press the key and then use the function [Select +] or function [Select -] key to select the scale. There are 25 segments to choose from.
- [speed]: press the key when playing the metronome or rhythm, and then use the function [Select +] or function [Select -] key to adjust the tempo or rhythm playing speed.
- [start / stop]: press the key to play the rhythm by default. To change or stop other functional modes, you can press the button again to stop.
- USB DISK function: plug directly into the USB drive and automatically play songs in MP3 format. When playing tracks, you can use the function to select [previous] or [next] to select songs to play, long press [previous] or [next] keys to change the volume, short press [play / pause] button to pause or start, long press [play / pause] to change receive Bluetooth mode.
- Bluetooth function: plug default Bluetooth audio / MIDI mode, search Bluetooth name to connect audio playback, or interact with the bomb software APP using Bluetooth connection.
- Other functions: audio input: external input sound source to enlarge the playing sound inside the piano. Audio output: can connect headphones or external audio equipment, USB/MIDI: computer or tablet or phone download APP software, use square data cable connection to interact, pedal function: three pedal, extension pedal: step on the right side of the sound pedal, will prolong the sound, press the continuous sound pedal will prolong the current sound, step on the soft pedal will weaken the sound.

Appendix

Tone:			
NO.	ENGLISH		
001	GrandPno	038	SlapBas2
002	BritePno	039	SynBasst
003	EGrand	040	SynBass2
004	HnkyTonk	041	Volin
005	EPianol	042	Viola
006	EPiano2	043	Cello
007	Harpsich	044	Contrabs
008	Cavi	045	Trem.Str
009	Celesta	046	PlazStr
010	Glocken	047	Harp
011	Musichox	048	Timpani
012	Vbes	49	Strings1
013	Marimba	50	Srings2
014	Xylophon	51	SynStrl
015	Tubul Bel	52	Syn Str2
016	Dulcimer	53	ChoirAah
017	DrawOrgn	54	Voice Ooh
018	Percorgn	55	SynVoice
019	RockOrgn	56	OrchHit
020	Chrcorgn	57	Trumpet
021	Reed Orgn	58	Trombone
022	Acordion	59	Tuba
023	Harmnica	60	Mate Trp
024	Tangoacd	61	Fr.Horn
025	NylonGtr	62	BrasSect
026	SeelGtr	63	SynBras1
027	Jarz Gtr	64	SynBras2
028	Cean Gtr	65	SprnoSax
029	Mute Gtr	66	Alto Sax
030	Ovrdrve	67	TenorSax
031	Dist Gtr	68	Bari Sax
032	Gtr Harmo	69	Oboe
033	Aco.Bass	70	EngHorn
034	FngrBass	71	Bassoon
035	PickBass	72	Clarinet
036	Fretless	73	Piccolo
037	SlapBas1	74	Fute
		75	Recorder

Appendix

RHYTHM:			
序号	英文		
001	POP1	038	Techno
002	POP2	039	70 Disc1
003	POP3	040	20 Disc2
004	POP4	041	Pp Ballad
005	POP5	042	Soul
006	POP6	043	R&B
007	POP7	044	MD R&B
008	POP8	045	Funk Pp
009	8Beat1	046	RAP
010	8Beat2	047	MG Dance
011	8Beat3	048	R&G Dance
012	8Beat4	049	Blues shl
013	8Beat5	050	Gosple shl
014	8Beat6	051	Gosple
015	16 Beat1	052	4/6 Blues
016	16 Beat2	053	6/8 Blues
017	16 Beat3	054	Twist1
018	16 Beat4	055	Shuffle
019	16 Beat5	056	Devil
020	16 Beat6	057	Boogie
021	16 Beat7	058	Swing JZ
022	16 Beat8	059	BigBand
023	16 Beat9	060	Blues
024	16 Beat10	061	Jz Band
025	8BeatRK1	062	CowBoy D
026	8BeatRK2	063	Dixie
027	60ROCK1	064	Swing1
028	60ROCK2	065	Shuffle
029	8Beat POP	066	Cntry Swing
030	8Beat RK	067	CntryShuffle1
031	ROCK1	068	CntryShuffle2
032	ROCK2	069	Two Step
033	SlowRock1	070	CntryBLD
034	SlowRock2	071	CntryWZ
035	Dance	072	CntryPop
036	Dance1	073	CntryDance
037	Dance2	074	Cntry1
		075	Rag Time

Appendix

304	Std Drum1	342	Fretless2
305	Oriental1	343	SlapBas22
306	Effects1	344	SlapBas22
307	GrandPno2	345	SynBasst2
308	BritePno2	346	SynBass22
309	EGrand2	347	Volin2
310	HnkyTonk2	348	Viola2
311	EPiano12	349	Cello2
312	EPiano22	350	Contrabs2
313	Harpsich2	351	Trem.Str2
314	Cavi2	352	PlazStr2
315	Celesta2	353	Harp2
316	Glocken2	354	Timpani2
317	Musichox2	355	Strings22
318	Vbes2	356	Srings2 2
319	Marimba2	357	SynStr12
320	Xylophon2	358	Syn Str22
321	Tubul Bel2	359	ChoirAah 2
322	Dulcimer2	360	Voice Ooh2
323	DrawOrgn2	361	SynVoice 2
324	Percorgn2	362	OrchHit 2
325	RockOrgn2	363	Trumpet 2
326	Chrcorgn2	364	Trombone 2
327	Reed Orgn2	365	Tuba 2
328	Acordion2	366	Mate Trp 2
329	Harmnica2	367	Fr.Horn 2
330	Tangoacd2	368	BrasSect 2
331	NylonGtr2	369	SynBras2 2
332	SeelGtr2	370	SynBras2 2
333	Jarz Gtr2	371	SprnoSax 2
334	Cean Gtr2	372	Alto Sax 2
335	Mute Gtr2	373	TenorSax 2
336	Ovrdrve2	374	Bari Sax 2
337	Dist Gtr2	375	Oboe 2
338	Gtr Harmo2	376	EngHorn 2
339	Aco.Bass2	377	Bassoon 2
340	FngrBass2	378	Clarinet 2
341	PickBass2	379	Plccolo 2
		380	Fute 2

Appendix

76	PanFute	114	Agogo
77	Bottle	115	Steel Drm
78	Shathchi	116	WoodBlok
79	Whistle	117	TaikoDrm
80	Ocarina	118	MelodTom
81	Squareld	119	SynthTom
82	Sawlead	120	RevCymb1
83	CaliopLd	121	FretNoiz
84	Cheiff Ld	122	BrthNo
85	CharanLd	123	Seashore
86	VoiceLd	124	Tweet
87	Fifth Ld	125	Telephone
88	Bas&Ld	126	Helicptr
89	NewagePd	127	Applause
90	Warm Pad	128	Gunshot
91	PolySyPd	129	Gao Hu
92	Choir Pd	130	Er Hu
93	Bowed Pad	131	Zhong Hu
94	MetalPad	132	XiPiJingHu
95	Halo Pad	133	ZuiHu
96	Sweep Pd	134	BanHu
97	Rain	135	Pipa
98	SoundTrk	136	Liu Qin
99	Crystal	137	Da Ruan
100	Almosphr	138	Zhong Ruan
101	Bright	139	San Xian
102	Goblins	140	Gu Zheng
103	Echoes	141	Yang Qin
104	Sci-Fi	142	Jianshen
105	Sitar	143	LuShen1
106	Banjo	144	LuShen2
107	Shamisen	145	Ba Wu
108	Koto	146	Bang Di
109	Kalimba	147	Qu Di
110	Bagpipe	148	Hu Lu Si
111	Fiddle	149	Xiao
112	Shanai	150	Hi-Suona
113	TnklDell	151	Std Drum

Appendix

152	Oriental	190	SlapBas11
153	Effects	191	SlapBas21
154	GrandPno1	192	SynBasst1
155	BritePno1	193	SynBass21
156	EGrand1	194	Volin1
157	HnkyTonk1	195	Viola1
158	EPiano1	196	Cello1
159	EPiano21	197	Contrabs1
160	Harpsich1	198	Trem.Str1
161	Cavi1	199	PlazStr1
162	Celesta1	200	Harp1
163	Glocken1	201	Timpani1
164	Musichox1	202	Strings11
165	Vbes1	203	Srings2 1
166	Marimba1	204	SynStr11
167	Xylophon1	205	Syn Str21
168	Tubul Bel1	206	ChoirAah 1
169	Dulcimer1	207	Voice Ooh1
170	DrawOrgn1	208	SynVoice 1
171	Percorgn1	209	OrchHit 1
172	RockOrgn1	210	Trumpet 1
173	Chrcorgn1	211	Trombone 1
174	Reed Orgn1	212	Tuba 1
175	Acordion1	213	Mate Trp 1
176	Harmnica1	214	Fr.Horn 1
177	Tangoacd1	215	BrasSect 1
178	NylonGtr1	216	SynBras1 1
179	SeelGtr1	217	SynBras2 1
180	Jarz Gtr1	218	SprnoSax 1
181	Cean Gtr1	219	Alto Sax 1
182	Mute Gtr1	220	TenorSax 1
183	Ovrdrve1	221	Bari Sax 1
184	Dist Gtr1	222	Oboe 1
185	Gtr Harmo1	223	EngHorn 1
186	Aco.Bass1	224	Bassoon 1
187	FngrBass1	225	Clarinet 1
188	PickBass1	226	Plccolo 1
189	Fretless1	227	Fute 1

Appendix

228	Recorder1	266	TnkIDell 1
229	PanFute 1	267	Agogo 1
230	Bottle 1	268	Steel Drm 1
231	Shathchi 1	269	WoodBlok 1
232	Whistle 1	270	TaikoDrm 1
233	Ocarina 1	271	MelodTom 1
234	Squareld1	272	SynthTom 1
235	Sawlead1	273	RevCymb1 1
236	CaliopLd 1	274	FretNoiz 1
237	Cheiff Ld 1	275	BrthNo 1
238	CharanLd 1	276	Seashore1
239	VoiceLd 1	277	Tweet 1
240	Fifth Ld 1	278	Telephone 1
241	Bas&Ld 1	279	Helicptr1
242	NewagePd 1	280	Applause 1
243	Warm Pad1	281	Gunshot 1
244	PolySyPd 1	282	Gao Hul
245	Choir Pd 1	283	Er Hul
246	Bowed Pad 1	284	Zhong Hul
247	MetalPad 1	285	XiPiJingHul
248	Halo Pad 1	286	ZuiHul1
249	Sweep Pd 1	287	BanHul1
250	Rain 1	288	Pipall
251	SoundTrk 1	289	Liu Qin11
252	Crystal 1	290	Da Ruan11
253	Almosphr 1	291	Zhong Ruan1
254	Bright 1	292	San Xian1
255	Goblins 1	293	Gu Zheng1
256	Echoes 1	294	Yang Qin1
257	Sci-Fi 1	295	Jianshen1
258	Sitar 1	296	LuShen11
259	Banjo 1	297	LuShen21
260	Shamisen 1	298	Ba Wu1
261	Koto 1	299	Bang Di1
262	Kalimba 1	300	Qu Di1
263	Bagpipe 1	301	Hu Lu Si1
264	Fiddle 1	302	Xiao1
265	Shanai 1	303	Hi-Suonal

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.