


T532A Assembly Manual
Treadmill

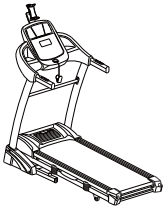

Your satisfaction is very important to us. PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US: sales@kristinart.com (We will reply you within 24 hours.)

⚠ WARNING

Please read all precautions and instructions in this manual in detail before using this equipment. Save this manual for future reference.

CONTENTS

SAFETY CAUTIONS.....	2
PRODUCT SKETCH.....	4
TECHNICAL PARAMETER.....	5
PACKING INSTRUCTIONS.....	6
ASSEMBLY INSTRUCTION.....	8
HOW TO FOLD AND MOVE.....	10
HOW TO USE THE EXTRA PAD HOLDER.....	12
OPERATION GUIDE.....	12
MAINTENANCE GUIDE.....	25
TROUBLE SHOOTING.....	27

Dear customer

Thank you for choosing Farristar

We cherish your order and take you as our iD customer

If you have any question after receiving your package, please feel free to contact us and leave us the message with your order number. Our professional engineering team and customer service team will resolve it well. They are friendly and hassle-free.

Customer Service E-mail: sales@amstar.com; Any email from our customers, we will reply you as soon as possible. Please patiently wait for us to offer you a satisfactory solution, usually needs 24 to 48 hours, up to 72 hours nearly weekends.

Customer Service Phone Number: 1-833-777-8263; Monday to Thursday Working Time: 5:00am to 8:00pm PST, 9:00am to 5:00pm PST, 7:00pm to 10:00pm PST; Friday Working Time: 5:00am to 8:00pm PST, 9:00am to 1:00pm PST. **Please send us an email, if you cannot reach us by phone.**

Best Regards,
Farrister Office

NOTE: Our treadmills are customized with high-quality. However, it's unavoidable that electrical items can more possibly have issues than other ordinary items. It can happen that the treadmill does not work as expected due to some reasons like rule transportation of the carrier, your incorrect operation, etc, but please don't worry, just send us email to sales@treadmill@amazon.com and we will help you to resolve it with

• SAFETY CAUTIONS

⚠ WARNING

Before starting any exercise program, it is recommended that you should consult a professional doctor, especially if you are over 35 years old, or you ever have health problems. We are not responsible for any resulting injuries.

▲ WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons, please carefully read and understand all important precautions and instructions in this manual and all warnings on your treadmills before using your treadmill. Fennistar assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

⚠ WARNING

To reduce the risk of electrical shock or unsupervised usage of the equipment, always unplug the power cord from the wall outlet and/or the machine and wait 5 minutes before cleaning, maintaining or repairing the machine. Place the power cord in a secure location.

Precautions

1. Ensure the safety straps are attached to the clothing or belts before using the treadmill.
2. Please do not insert any items to any part of the equipment, which would damage the equipment.
3. Do not walk on the roller, belt or surface. Do not place the treadmill on thick carpet as it may interfere with proper ventilation. Do not place the treadmill near water or outdoors.
4. Do not use the treadmill when you are standing on the walking belt. After turning the power on and adjusting the speed control, there may be a pause before the walking belt begins to move, always stand on the foot rails on the sides of the frame until the belt is moving.
5. Do not use loose fitting clothing that may be caught in the treadmill. Always wear running or aerobic shoes with rubber soles.
6. Keep the children and pets away from the treadmill while starting workout.
7. Do not use the treadmill if you are pregnant.
8. The equipment is suitable for adults. Minors must be accompanied by adults while workout.
9. You must hold the handrail until you become comfortable and familiar with the treadmill when you use the treadmill at your first time.

15. **Treadmill** is an indoor-exercise machine, not outdoor-use for walking, dancing, etc. Please do not use, trip and injury. Please do not modify for other purposes, use for recreation.
16. **Power** to the treadmill is dedicated. If the power cord is damaged, **do not** plug it into the **dealer** or contact your company dealer.
17. **Electrical** must be supplied by a qualified electrician. Do not use a fuse or a time switch. **Do not** tamper with the safety lock. **Do not** open the safety lock from the console immediately so that the treadmill **will** come to a sudden stop to ensure your safety.
18. **Do not** touch the power cord. **Do not** touch the power cord where the plug is in the cable plug; do not pull any heavy things on cable or pull the cable near the hand station, forced using socket with several holes, these may cause fire or people may be hurt.
19. **Do not** touch the power supply when the treadmill is not used for a long time. When cutting off the power, do **not** pull the power cord, you must grasp the power plug and pull it out. **Do not** touch the power cord where the plug is in the cable plug, do not pull with the safety ground circuit. The power cord of the treadmill is dedicated, **do not** connect it as the power cord is damaged.
20. **Do not** touch the power cord.

Grounding Instructions:

The products must be grounded first. If malfunction or breakdown occurs, grounding will provide a path of least resistance for electric current to reduce the risk of electric shock. The product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


Danger

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the products are properly grounded. Do not modify the plug provided with the product — if it will not fit the outlet, have a proper outlet installed by a qualified electrician. The products are for use on AC 110-120V and has a grounding plug that looks like the plug illustrated in the figure. Make sure that the product is connected to an outlet having the same configuration as the plug. There is no need to use any adapter for this product.

Grounding Methods



• **PRODUCT SKETCH**

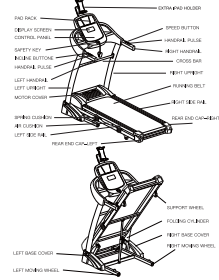

Fantecor

TECHNICAL PARAMETER

MAIN TECHNICAL PARAMETER		
NO.	ITEM	DATA
1	MODEL	T330A
2	INPUT VOLTAGE	AC 110-120V/50/60Hz
3	MOTOR POWER	4.3HP
4	FORWARD SPEED	17.8"/MIN
5	INTELL	150-2000
6	INCLINE	0-10% (0-3%)
7	CHARGER	5.0V/1.5A
8	MAX USER WEIGHT	300lbs
9	ASSEMBLY SIZE	54"x59"x49"

6

6

Fantecor

PACKING INSTRUCTION

OPEN THE BOX YOU CAN FIND ALL PARTS AS BELOW.

PARTS LIST		
NO.	DESCRIPTION	QTY
1	MAIN FRAME	1 pc
2	LEFT UPRIGHT	1 pc
3	RIGHT UPRIGHT	1 pc

6

6

Fantecor

PARTS LIST

NO.	DESCRIPTION	QTY
4	CONSOLE	1 pc
5	LEFT BASE COVER	1 pc
6	RIGHT BASE COVER	1 pc
7	CROSS BAR	1 pc
8	UPPER COVER	2 pcs
9	BOLT M10*55	2 pcs
10	BOLT M10*55	2 pcs
11	BOLT M10*15	8 pcs
12	SCREW M8*15	8 pcs
13	FLAT WASHER M8	4 pcs
14	FLAT WASHER M8	4 pcs
15	SAFETY KEY	1 pc
16	SELF-TAPPING SCREW M6*15	4 pcs
17	EXTRA LONG BOLDS	1 pc
18	SE WRENCH	1 pc
19	SE WRENCH	1 pc
20	SCREWDRIVER	1 pc
21	USER MANUAL	1 pc
22	POWER CORD	1 pc
23	USER MANUAL	1 pc

NOTE: When assembling the instructed treadmill, you will need to use the WRENCH and SCREWDRIVER, we provide these tools together with the screw kit.

7

7

Fantecor

ASSEMBLY INSTRUCTION

Step 1

1. Please note that this treadmill needs at least 2 people to install correctly.
2. Open the carton box and take out all the protective foam and assemble parts.
3. 2 people take out the running deck on the console from the box. Be sure use the 2 tools, also there are options to cut the cable tie that bound on the left and right upright.

Step 2

1. Lift up the left upright.
2. Use the self-tapping screw (M6*15) to connect the left upright to the main frame with the bolt (M10*55) and flat washer (M8).
3. Use the self-tapping screw (M6*15) to connect the left upright to the main frame with the bolt (M10*55) and flat washer (M8).
4. Use the extra long bolt to fix the right upright at the left upright.

Step 3

1. Use the self-tapping screw (M6*15) to remove the pre-assembled base (M10*15) and the bolt (M10*55) from the left upright.
2. Use the self-tapping screw (M6*15) to connect the left upright to the main frame with the bolt (M10*55) and flat washer (M8).
3. Use the self-tapping screw (M6*15) to connect the left upright to the main frame with the bolt (M10*55) and flat washer (M8).
4. Use the extra long bolt to fix the right upright at the left upright.

8

8

Fantecor

ASSEMBLY INSTRUCTION

Step 4

1. Connect the signal cable that comes out from the right upright (2) to the signal cable that comes out from the right side of console (1).
2. Pay attention to the connection of the cable, wrong connection will cause damage of the connector.
3. Insert the signal cable into the left and right upright (2), with the cable (M10*15) and screw the motor (M10*15) by the self-tapping screw (M6*15).

Step 5

1. Insert the left base cover (1) and right base cover (2) into the left and right upright (2) with the bolt (M10*15) and the screwdriver (2).
2. Pay attention to the connection of the cable, wrong connection will cause damage of the connector.
3. Check that all parts are assembled correctly, then insert the screw (M10*15) into the base (1) to fix the base cover.

9

9

Fantecor

ASSEMBLY INSTRUCTION

Step 6

Put the safety key in the safety area of the console.

Step 7

Use the screwdriver (2) to remove the screw self-tapping screw (M10*15) from the back of the console. Then you can insert the screw that follows (2) with the removed 4 pcs screw (5).

HOW TO FOLD AND MOVE

FOLDING:
Fold up the base frame (1) leaving a knock from the folding (cable tie is not used).

10

10

