

Portable wireless speaker manual

Item	Model	Pairing name
Portable wireless speaker	ARG-SP-3110BK ARG-SP-3110BL ARG-SP-3110PK	ARG-SP-3110



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation





This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Function

Power button 电源键 	Power on/off 开/关机	Press 5 seconds 长按 5S
	Force restart 强制重启	In any case: long press for 8 seconds to force restart 长按 8 秒强制重启
	Mode switch 模式切换	Short press: BT -- AUX—USB
	Enter/exit TWS mode 进入/退出 TWS 模式	Double press 双击
Music&volume 	Volume up 音量加	Short press 短按
	Next song 切换下一曲	Long press 1.5 seconds 长按 1.5S
Music&volume 	Volume down 音量减	Short press 短按
	Previous song 上一曲	Long press 1.5 seconds 长按 1.5S
Pause/Phone call 	Play/pause 暂停/播放	Short press 短按
	Answer/end phone call 接听/挂断电话	Short press to answer During call: short press to end a call 短按接听/挂断
	Reject a call 拒接电话	Incoming call: long press 1.5 seconds to reject 长按 1.5 秒拒绝
	Voice assistant 语音助理	Under BT mode, long press 1.5 seconds 蓝牙模式下长按 1.5 秒
	Redial last number 重播最后的号码	Under BT mode: press 2 times 蓝牙模式下: 双击
	Clear Bluetooth pairing information 清除蓝牙配对信息	Under BT mode: press 5 times 蓝牙模式下: 5 击* (不连接设备状态)
	Disconnect Bluetooth 蓝牙断开	Under BT mode: press 4 times 蓝牙模式下: 4 击

Specifications

Description	Specs
Functions	BT, USB, AUX, Call

Chip-set	JL6965E
Bluetooth version	BT 5.4
Supported music file formats	MP3、WAV、WMA
Bluetooth distance	≤10M
TWS	≤10M
Battery Model/Voltage/Capacity	3.7V, 2200mAh
Directive:	Omnidirectional
Waterproof:	IPX5
Material:	ABS+Fabric
Power:	8W*1, 8W 4 Ω
Battery :	2200mAh
Charging time:	3-4 hrs
Frequency response:	20HZ-20KHZ
Driver size:	53*53
Play time:	100% volume:up to 5.5hours
Size:	70% volume:up to 36 hours
Charging port	114*77*55mm
	Type C
Charging voltage/current	5V/1A
Case:	Rubber Paint