

# 英语

## MORA WIRELESS SPEAKER BOC242



### USER MANUAL

#### PRODUCT SPECIFICATIONS:


- Model: BOC242
- Bluetooth Version: 5.1
- Support: L2CAP/A2DP/AVRCP, receive AUDIO signal and control the AUDIO device. Supports HSP/HFP (hands-free), built in microphone for hands-free calls. Connection Distance: 10M approx
- SNR: 85dB
- Battery: 2400mAh 3.7V 8.88Wh
- Play Time: 3.5H (At 100% Volume) Playing time depends on volume and audio content.
- Charging Time: 4H
- Speaker Size:  $\Phi 45\text{mm}$
- Power: 4W/5W\*2 RMS
- Frequency: 150HZ-20KHZ
- Input: 5V  $\approx$  2A
- Size:  $\Phi 72.4 \times 155.9\text{mm}$
- Weight: 495g

#### PRODUCT FEATURES:

1. Advanced bluetooth chip and circuit design techniques, compatible with all wireless devices.
2. With Hi-Fi speaker, to ensure clear and bright sound.
3. Support TF card and USB card, play audio with MP3 mode.
4. The distance range is about 10 meters.

5. With built-in AUX line, you can directly connect the external devices, such as, tablet PC/TV/cell phone.  
6. It will turn off automatically if you disconnect Bluetooth for 5 minutes.

#### KEY AND SLOT FUNCTIONS:

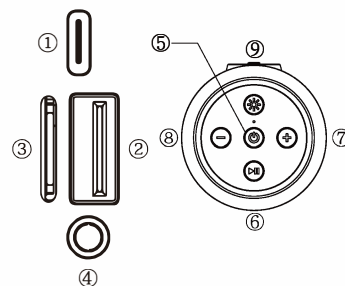

- ①. DC 5V Slot: Use the standard Type C charging cable to charge.
- ②. USB Slot: When inserting the U disk into the slot, it can decode and play audio in MP3/WAV format.
- ③. TF Slot: When inserting a TF card into the slot, it can decode and play audio in MP3/WAV format.

- ④. AUX Line in Slot: Use 3.5mm AUX line input through external equipment.
- ⑤. Power Switch: Long press for "on/off". When play music (U disk /TF card/ Bluetooth), short press to switch U disk /T F/Bluetooth. (Switch to "Line In" if connected to an audio device via an AUX cable).

TWS Pairing: After turning on the two speakers, double click the power button of one of the speakers and the speakers will automatically perform TWS pairing.

- ⑥. Play Button
  - 1) Press once: Play or pause;
  - 2) Long press: enter pairing mode;
  - 3) Radio mode: short press to automatically search for radio stations.
- ⑦. During music playback, press the "+" button once to increase the volume, long press the "+" button to skip to the next song.

In radio mode, press the "+" button once to increase the volume, and press and hold the "+" button to jump to the next station.

- ⑧. During music playback, press the "-" button once to decrease the volume, long press the "-" button to return to the previous song.
- In radio mode, press the "-" button once to reduce the volume and long press the "-" button to return to the previous station.

- ⑨. Light mode switch: When the music starts to play, the certain pattern of the lights will follow the rhythm of the music. To change the light mode, you need to press the button briefly to get the "breathing light"; to turn off the light, you need to press the button long.

**RESET:** Long press ON/OFF for 10 seconds to reset

#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### WARRANTY STATEMENT:

All products are guaranteed to be free from defective materials and workmanship. The warranty period of all equipment provided by our company is 12 months after purchase.

If you have any questions, please contact a customer service representative for assistance.

