
 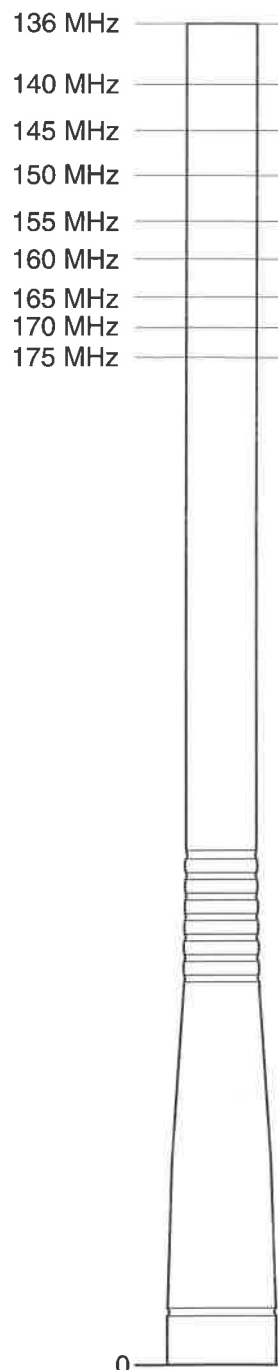


Thank you for purchasing the  
**FA-S67VC** VHF ANTENNA.  
Please read these instructions  
thoroughly before using the  
FA-S67VC.

Antenna Cutting  
Chart

Antenna cap



### FA-S67VC

The optimum bandwidth is  $\pm 3\%$  (approx.) of the tuned frequency. To tune for optimum performance at the center transmit frequency of the radio.

### Cutting Instructions

- ① Align the bottom of the antenna onto the 0 position of the cutting guide diagram at left.
- ② Mark the antenna at the length corresponding to the desired frequency to be tuned.
- ③ Cut the antenna at the mark made in step ②.
  - Use a wire cutter that can cut at least 1.2 mm (d) of piano wire.
- ④ Apply adhesive to the top of the antenna and attach the supplied antenna cap.
  - Use of Cemedine Co. Super-X No. 8008 black (Icom parts number: 8950002910) or similar is recommended.

### NOTE:

The antenna cap must be attached after cutting, otherwise moisture might damage the element.

Center frequency (MHz)	Length (mm)
136	177*
140	169
145	163
150	157
155	151
160	146
165	141
170	137
175	133

\*The antenna can be used at its original length for this frequency. No tuning (cutting) is necessary.

### CAUTION:

Making antenna cuts at other than the prescribed lengths specified could void the user's authority to operate the equipment.

