



 
706Z



The company reserves the right to vary the product design.
Product pictures and content are for reference only,
and specifications of the right, then without prior notice,
specifications appearance please to sales kind prevail.



706Z

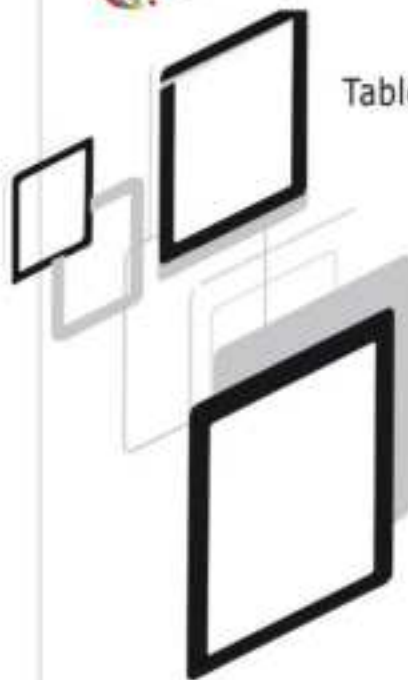

Tablet computer series

The user manual

Attention	2
1. Dock	3
1.1 Touch panel	3
1.2 POWER	3
1.3 BACK	3
1.4 MIC	4
1.5 Volume +, Volume-	4
1.6 earphone jack	4
1.7 Video output interface	4
1.8 TF card	4
1.9 Map USB	4
1.10 DC Adapter	4
1.11 Recovery	4
2. First use	4
2.1 Battery management and charge	4
2.2 Connection with PC	5
3. Equipment operation interface	7
3.1 Main interface describe	8
3.2 status bar describe	9
3.3 Use touch panel	9
4. Equipment basic set	9
4.1 Select mode, Volume, Notification (light), Available selection, Screen lock words	9
4.2 Application	10
4.3 Privacy	10
4.4 Storage	11
4.5 Language & keyboard	11
4.6 Date & time setting	11
4.7 Developer options	12
4.8 About tablet	12
5. Apps install and manage	13
5.1 App install	13
6. Problem solution	14
6.1 Device can't to open	14
6.2 After startup the screen or the opening picture has been appear , the the device appear shutdown	14
6.3 Can copy file or play music and so on	14
7. Basic function	14

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Ple make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature. Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or violent collision of the device, don't make the TFT display screen were violent tremor. This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume. Use headphones should not be too big volume. If feel limitus. Lower the volume or stop using it
- please charge in the following condition,
 - A. The battery power ICONS shows have no power
 - B. The system automatically shut off, startup after power off icon
 - C. Operation buttons no response
 - D. The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect. This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory. The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing products.
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference, products specification and design have any change. The information is subject to changes without prior notice.

3G	Built-in 3G Module(option). WCDMA/HSDPA support calling, message, WiFi ad hoc.
TF expansion	for optional 3G module to realize 3G communication.External MICRO SD(TF) card,Max. 32GB TF card.
USB	USB high speed 2.0. Can be connected to the computer to copy files.
VPU	Maximum support hardware decoding 720P and 1080i, and 480 video encoding.
Gravity	Built-in 3D gravity sensor, to make screen realize 360 degree rotation.
Audio	support gravity sense operation game, AC/ST full-duplex codec, support AAC/AMR/MP3/WMA/RAV/MP3 and so on.
Video	WMV/ASF/MP4/3GP/AVI/MKV/VC-1/DVX/MPEG-2/MPEG-4 (H.263/H.264 720P HD 1080i)
Game	Support several of entertainment games based on Android platform.
Web	Support many internet applications like web, social, video, chatting and so on.
E-book	Assemble e-book text to read based on Android platform.
Photo Frame	Built-in photo player, and take it as a photo frame or calendar.
Office	Support various of office software based on Android platform, to realize office functions. Such as Word/Excel/PPT/PDF.

Manage: click manage, enter third party interface
Click install icon, will enter Action interface

6. Problem solution

6.1 Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact with the supplier

6.2 After startup the screen or the opening picture has been appear , the device appear shutdown

1. Power is not enough, please charge
- Headset can't hear the voice
2. Pls check the volume whether set to 0
 3. Check the music file whether damaged. Try playing other music. If the file have damaged may lead to serious noise or hop sounds.


6.3 Can copy file or play music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. ched the USB cable is good or not
4. USB connection is disconnected

7. Basic function

OS	android8.1/android9.0/android10.1
CPU	Quad-core ARM Cortex A7 processor , up to 1.3GHz
RAM	Support LPDDR3/LPDDR2, up to 533MHZ(LPDDR3), max 2G Byte
ROM	Nand flash 4GB/8GB/16GB/32GB/64GB Optional
LCD	7"opt on HD display
Touch panel	Capacitive Touch panel Optional
2D/3D	Single core ARM Mali-T820 up to 600MHz
Graphic	Support OpenGL ES 1.1/2.0/3.1/3.2 3D graphic
WiFi wireless	Single band 2.4GHz, support 802.11b/g/n

 1. Desk:

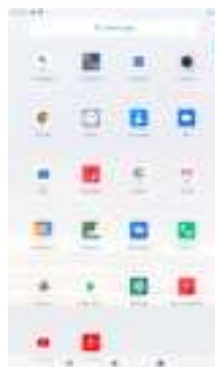

1.1 Touch panel

Capacitive touch panel: In The Operation, in click/dragging on the touch panel

1.2 POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: in the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click "ok", you can safely shut down

Lock screen: Short press Power button to lock screen or unlock screen

Remark 1 When power is empty system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

1.3 BACK

Short Press BACK button will return the last interface.

1.4 MIC

Recording

1.5 Volume +, Volume-

The buttons on top Volume +, Volume- achieve changes in the volume.

1.6 earphone jack

3.5 mm standard earphone jack

1.7 Video output interface

HDMI output interface

1.8 TF card

TF-CARD slot: external T-FLASH card

1.9 Mini USB

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.10 DC Adapter

For charging, your tablet battery

1.11 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 This tablet using Built-in type polymer battery. Charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max., 180MA, Output: DC5.0-5.2V/1.5A), this device without supply DC charging. USB interface can charge. Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power



4.3 About tablet



5. App install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected

Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.



Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now main interface just support 14 language.

Android keyboard: Android keyboard setting

Sound on Key-press

Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Spacebar and punctuation automatically insert highlighted word

4.6. Date & time setting

Set date, set time, Select time zone and select date format.



4.7 Developer options

Choose USB work pattern: OTG/HOST/SLAVE.....

before charge it

【Remark】 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage,pls charge/play the battery once a month.

2. After low battery shut down,connect DC adaptor,device will remind low battery,charging,need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption, it may cause longer charging time.

2.2 Connection with PC

U Use USB cable to connect device to PC,device will pop up the USB connection window,click Turn on USB storage to connect to PC.

 


Into the load mode, you can copy, delete the file on the device and the file on the memory card...

3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface

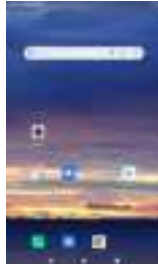

In the main interface, you can Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface



Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box "Add yo Home screen" as shown below



4.4 Storage

Remove TF card, view of the available storage space



【Remark】 pls touch option "delete SD card", so that can safely remove SD card

4.5 Language & keyboard

Setting (Language), text input and automatic error correction options.

4.2 Application

Manage applications



Unknown sources: Click "Unknown Sources", then click "OK".
Manage application: manager and uninstall Application

【Remark】 When you Firmware Upgrade, please close the USB connect

4.3 Privacy

Factory data reset




3.2 status bar describe





- The status bar above of the screen:
Top left display main interface software, T-Flash card, USB connection status and so on.
Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.


3.3 Use touch panel

Device equipped with a 7" touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

 
No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upper.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

【Remain】: The main screen soft key functions as the machine menu.

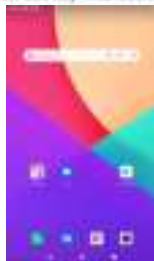

In the main interface, you can touch the icon to open the APPs

In different (browser(file, music, video, pictures). You shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic set

Setting: Click setting icon  enter setting interface



4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds



FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been tested and comply with FCC SAR limits.