

XPERIA XXX

Quick Start Guide



Online Manual (Japanese)

Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from this procedure.

In the Home screen, slide the screen up → [お客さまサポート (Customer support)] → [取扱説明書 (Online Manual)] (Japanese)

Also, you can check "Online Manual" (Japanese) on the au homepage.

 
<https://www.au.com/online-manual/xxxx/> (Japanese)



Descriptions in this manual are based on Android™ 11. For the latest edition, refer to the "Online Manual" (Japanese) or "取扱説明書 詳細版 (Full instruction manual)" (Japanese) available on au homepage. <https://www.au.com/support/service/mobile/guide/manual/> (Japanese)

Names and functions of parts

- ① Headset connection terminal
- ② Second microphone^{*1,2}
- ③ Front camera
- ④ Earpiece/Speaker^{*1,2}
- ⑤ Proximity/Light sensor^{*2}: Switches the touch panel on and off to prevent from erroneous operation during a call/ Auto-control for display brightness.
- ⑥ Notification LED
- ⑦ Display (Touch panel)
- ⑧ Speaker^{*1,2}
- ⑨ Mouthpiece/Microphone^{*1,2}
- ⑩ USB Type-C™ connection terminal
- ⑪ Volume key/Zoom key
- ⑫ Power key/Fingerprint sensor^{*2}
- ⑬ Google Assistant key
- ⑭ Camera key

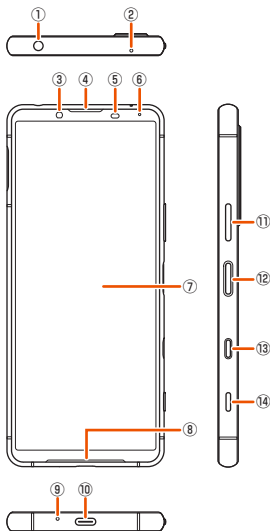

For inquiries, call: Customer Center

For general information (toll free)

Business hours 9:00—20:00 (7 days a week)

From au mobile phones

From non-au mobile phones/general subscriber phones

157 without area code

0077-7-111

In case above numbers are not available (toll free).

0120-977-033

For theft, loss, or malfunction (toll free)

Business hours : 24 hours live support (7 days a week)

From au mobile phones

From non-au mobile phones/general subscriber phones

113 without area code

0077-7-113

In case above numbers are not available (toll free).

0120-925-314

Repair and Delivery Support Center

(Repair and Delivery Service for members)

For repair or replacement cell phone delivery service (toll free)

Business hours 9:00—20:00 (7 days a week)

From au mobile phones/non-au mobile phones/general subscriber phones

0120-925-919



モバイルリサイクルネットワーク
携帯電話やその周辺機器にのみ有効。

Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.



やめましょう、
歩きスマホ。



キケン！
水ぬれ充電



 
あぶない！
電池への衝撃

SONY®

Sold by: KDDI CORPORATION,
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Corporation

June 2021, 1st Edition
F-540-100-11 (1)

- ⑮ Flash/Photo light
- ⑯ RGB-C-IR sensor^{*2}: Detects element of lighting source of shooting environment when shooting.
- ⑰ Main camera
- ⑱ 5G/4G antenna/Wi-Fi® antenna^{*3}
- ⑲ 5G/4G antenna/Wi-Fi® antenna^{*3}
- ⑳ 5G/4G antenna/Wi-Fi®/GPS/Bluetooth® antenna^{*3}
- ㉑ au IC card (SIM card)^{*4}
- ㉒ Wi-Fi®/Bluetooth® antenna^{*3}
- ㉓ mark
- ㉔ Back cover^{*5}
- ㉕ microSD memory card/au IC card (SIM card) slot

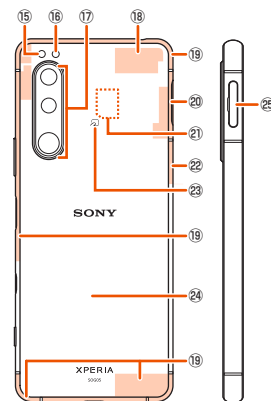

*1 Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.

*2 Note that covering these parts with stickers or fingers, etc. may hinder product performance.

 
*3 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.

*4 For details on handling au IC card (SIM card), refer to the "Online Manual" (Japanese) or "取扱説明書 詳細版 (Full instruction manual)" (Japanese) available on au homepage.

*5 The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

au IC card (SIM card)

Your phone number etc. is recorded in au IC card (SIM card).
The product is compatible with au Nano IC Card O4.

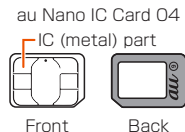

Attaching au IC card (SIM card)

Before attaching au IC card (SIM card), make sure to turn off the product.

1 Remove the tray from the main unit

Put your fingertip (nail) into the groove of the microSD memory card/au IC card (SIM card) slot and draw the cover straight out.

2 Set au IC card (SIM card) into the tray with the IC (metal) part facing down

Pay attention to the location of the notch.

Surely set au IC card (SIM card) into the tray not to come off.

3

■ Turning the power off

1 Press and hold Power key (over one sec.)

2 [Power] → [Power off]

❖ Information

- To restart the product in safe mode (start with almost default state), press and hold Power key (over one sec.) → [Power] → Long-touch "Power off" → [OK].

■ Forcedly turning the power off

1 Press and hold Power key and the upper part of the volume key at the same time for approximately eight seconds, and release your fingers after the product vibrates three times consecutively

FCC ID

To view the regulatory compliance mark

- In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates]
Regulatory compliance mark such as FCC ID is displayed on the screen.

5

3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in. Firmly press where circled ○, and check that there is no gap between the main unit and the microSD memory card/au IC card (SIM card) slot cover.

Turning the power on/off

■ Turning the power on

1 Press and hold Power key until the product vibrates

The lock screen appears.

When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.

Swiping (flicking) the screen up displays the Home screen.

4

Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

- Xperia XXX
- クイックスタートガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)

These items are not included in the package.

- microSD memory card
- AC adapter
- Earphones
- USB Type-C cable

❖ Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

6