

Manual Edition 1.0, July 2023 XX-XXX-XXXXXX-XX

For more information, please visit our website:







Hereby, Edifier International Limited declares that the radio equipment type EDF286005 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.edifier.com/int/eu-doc.html

FCC ID: Z9G-EDF218 IC: 10004A-EDF218

Model: EDF286005

**Edifier International Limited** 

P.O. Box 6264 General Post Office Hong Kong

Tel: +852 2522 6989 Fax: +852 2522 1989

www.edifier.com © 2023 Edifier International Limited. All rights reserved Printed in China

NOTICE: For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown

on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

### **EDIFIER**®

## QR65 Multimedia Speaker

— Manual —

### **EN** Important safety instruction

- · Please read the instructions carefully. Keep it in safe place for future reference.
- Use only accessories approved by the manufacturer.
  Install the instrument properly by following the instructions in the device connection section. Using the product in a 0-45°C environment is recommended. Shipping and storing the product in a 0-45°C environment is recommended.
- To reduce the risk of fire and electric shock, do not expose the product to rain or moisture.
  Do not use this product near water. Do not immerge the product into any liquid or have it exposed to
- dripping or splashing. · Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that
- generate heat).

   Do not place any object filled with liquids, such as vases on the product; neither should any open fire,
- such as lighted candles be placed on the product.

  Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric shock.

  Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is
- recommended). • Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the
- plug matches the jack and is oriented to the right direction. Keep the provided accessories and parts (such as screws) away from children to prevent from being
- swallowed by mistake. • Do not open or remove the housing yourself. It may expose you to dangerous voltage or other
- hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional immediately.

  Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug
- Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface
- Use only neutral solvent or clear water for cleaning.

  The product must be used at an altitude of lower than 2000m.

Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material



resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Important safety instruction

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Place the product near the power outlet for easy use.
 Before use, make sure that the operating voltage is the same as your local power supply. Correct

operating voltage can be found on the product plate.

3. For safety purpose, unplug the product during lightning storms or when unused for extended periods 4. Under normal conditions, the power supply may get hot. Please keep good ventilation in the area and

exercise caution 5. Product nameplate and safety warning labels on the housing or bottom of the product or power adaptor.

This symbol is to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to

This symbol is to warn the user not to disassemble the enclosure of the product and there is no user-replaceable part inside. Take the product to an authorized service center for repair. This symbol indicates that the product is for indoor use only.

This symbol indicates that the product is a CLASS II or double insulated electrical device with no earth requirement.

For wireless product: 1. Wireless product may generate shortwave radio frequencies and interfere with the normal use of other electronic devices or medical equipment.

The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable

2. Turn off the product when it's disallowed. Do not use the product in medical facilities, on airplane, at

gas stations, near automatic gates, automatic fire alarm system or other automated devices.

3. Do not use the product in the vicinity of a pacemaker within a 20cm range. The radio waves may affect the normal operation of the pacemaker or other medical devices.

English

# **Edifier Connect app**

#### Download Edifier Connect app






1. Scan the QR code for the app. 2. Install Edifier Connect app from Apple App Store or Google Play.

#### With this app, you can

- · Switch input modes,
- · Control play in Bluetooth mode and USB audio streaming mode, · Select or customize EQs,
- · Select or customize light effects, · Swap the left and right channels,
- · Upgrade the firmware, and · More functions.

3 English

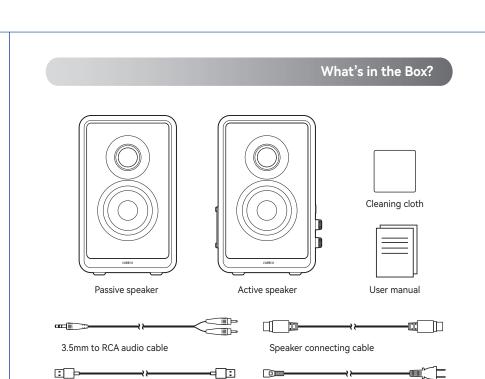

USB connecting cable

· Images are for illustrative purposes only and may differ from the actual product.


Power cable


The bundled USB connecting cable is for audio streaming only. Do not use it for device charging.
For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the


actual product prevails.

English

### **Functional Operation** • Rear view of active speaker Line In input USB audio streaming input lo ⊚ Subwoofer output Connect to the passive speaker USB-A charging output port -Power switch USB-C 1 charging output port **©** Power cable connector USB-C 2 charging output port • Rear view of passive speaker Connect to the active speaker 5 English

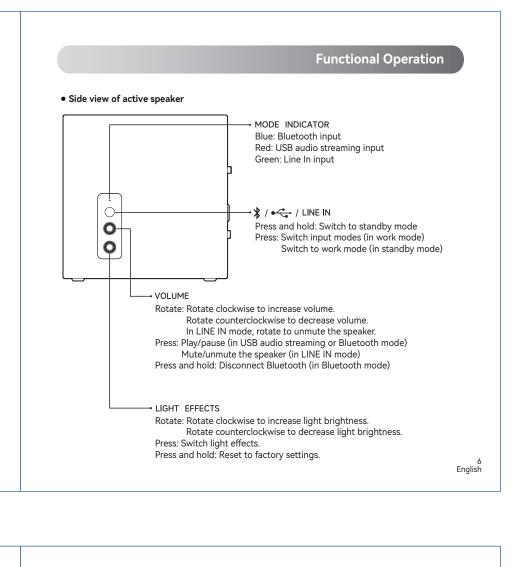

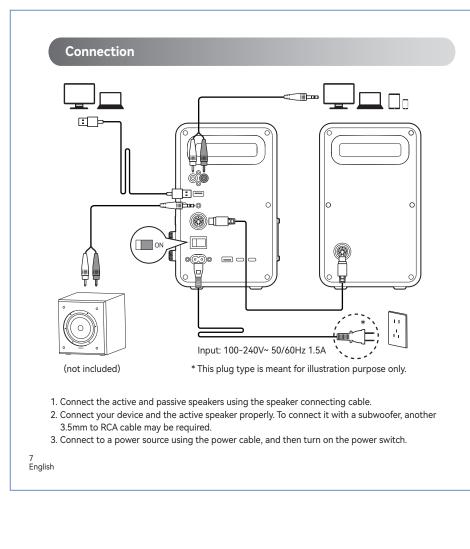


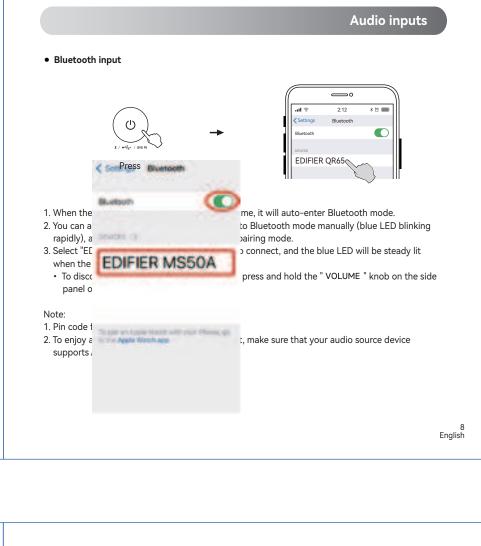


# • Line In input

**Audio inputs** 

  audio cable.







Note: In Line In mode, volume sync is not supported. To adjust the volume, adjust on the speaker

USB audio streaming input

speaker and your computer separately.

1. Press the " 0 " button to switch to USB audio streaming mode (Red LED). 2. Connect the speaker to your computer with the bundled USB connecting cable. 3. On the computer, open the sound settings and select "EDIFIER QR65" as its output device. 1. In USB audio streaming mode, volume sync is not supported. To adjust the volume, adjust on the

 $2. \ The following operating \ systems \ are \ supported: Windows\ 11,\ Windows\ 10,\ Windows\ 8,$ Windows 7, and Mac. 9 English

### Charge external devices During charging, make sure that the power cable is properly connected and the main power button on the rear panel of the active speaker is switched to "ON". To guarantee high-efficiency charging, use a charging cable that supports the charging current of 4.5A or higher. Connect your device to the USB-A port, USB-C 1 port or USB-C 2 port on the rear panel of the active speaker for charging. 0 Input: 100-240V~ 50/60Hz 1.5A USB-A port only (60W max.): 5V=3A, 9V=3A, 12V=3A, 20V=3A USB-C 1 port only (65W max.): 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=3.25A USB-C 2 port only (65W max.): 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=3.25A USB-C 1 port and USB-C 2 port simultaneously: 20W max. + 45W max. USB-C 1 port and USB-A port simultaneously: 15W max. USB-A port and USB-C 2 port simultaneously: 20W max. + 45W max. USB-A port, USB-C 1 port, and USB-C 2 port simultaneously: 15W max. + 45W max.

#### need to swap the left and right channels. 1. Connect your device with the speaker via Bluetooth. 2. Open Edifier Connect app.

Swap the left and right channels If you want to place the active speaker on your left and the passive speaker on your right, you

3. Go to "Settings" > "Swap channels" > "Swap" > "Confirm". Note: If the speaker is reset to factory settings, repeat the steps above to swap channels.

Know more about this speaker Get the latest firmware

upgrading, the LED on the side panel of the active speaker will blink in red, blue and green. Note: Do not disconnect the power supply and Bluetooth connection during upgrading.

How to reset this speaker to factory settings? In work mode, press and hold the "LIGHT EFFECTS" button for 5 seconds.

Note: After the speaker is reset, all settings and pairing records on the speaker will be cleared.

**Specifications** 

 $\label{thm:connect} \mbox{Upgrade the firmware when a version update notice appears in your Edifier Connect app. During \mbox{Upgrade the firmware when a version update notice appears in your Edifier Connect app.}$ 

Total output power: R/L(Treble): 15W+15W R/L(Mid-bass): 20W+20W Frequency response: 55Hz-20kHz

Declaration for EU

RF Power Output: ≤10 dBm (EIRP) There is no restriction of use.

Frequency Band: 2.402GHz ~ 2.480GHz

• Restart this product, enable Bluetooth function on your Bluetooth device, and then try again.  $\bullet\,$  Reset this product to factory settings and try again. No power

Cannot connect to your Bluetooth device

• Make sure that the power cable is properly connected. • Make sure that the power supply is not disconnected. Make sure that the main power button on the rear panel is switched to "ON".

10 meters and there are no obstacles between them.

• Make sure that no device is connected to this product via Bluetooth.

• Make sure that this product is powered on.

· Make sure that this product and your device is properly connected. · Make sure that the playback is not paused. Make sure that this product and your device are not muted. · Increase the volume of this product and your device.

Noise coming from speakers • EDIFIER speakers generate little noise, while the background noise of some audio devices are

too high. Please unplug audio cables and turn the volume up. If no sound can be heard at 1 meter away from the speaker, there is no problem with this product. To learn more about EDIFIER, please visit www.edifier.com For EDIFIER warranty queries, please visit the relevant country page on  $% \left\{ 1,2,\ldots ,n\right\}$ 

 $\bullet\,$  Make sure that the distance between this product and your Bluetooth speaker is less than

 $\bullet \ \ \text{Make sure that this product is in Bluetooth pairing mode. If not, manually switch it to this mode.}$ 

www.edifier.com and review the section titled Warranty Terms USA and Canada: service@edifier.ca South America: Please visit www.edifier.com (English) or www.edifierla.com (Spanish/ Portuguese) for local contact information.

10 English

**Troubleshooting** 

11 English