

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001
Writer	R & D Engineer		R & D Director		
Vera					

COVER:

2.4GHz Multiemdia Wireless Keyboard Mouse Set Media Mouse included

User's Quick Guide

2.4GHz Wireless Solution for Longer Operation Distance

© 2005 All Rights Reserved. The copyright is the property of its respective owners.

Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the user' s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CE Declaration Of Conformity

Hereby, the manufacturer, declares that this Multiemdia Wireless Keyboard Mouse Set is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Essential requirements - Article 3

Protection requirements for health and safety - Article 3.1a

--Testing for electric safety according to EN 60950 has been conducted. These are considered relevant and sufficient.

Protection requirements for electromagnetic compatibility -Article 3.1b

--Testing for electromagnetic compatibility according to EN 301 489-1, EN 301 489-17 and EN 55024 has been conducted. These are considered relevant and sufficient.

Effective use of the radio spectrum -Article 3.2

--Testing for radio test suites according to EN 300 328-2 has been conducted. These are considered relevant and sufficient.

CAUTION: The batteries may explode or leak if they are improperly recharged, inserted, disposed in fire or mixed with used or different battery types.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

Congratulations on your purchase of the Multiemdia Wireless Keyboard Mouse Set featured with the unique Smart Link function. The Media Mouse provides an easy way to enjoy multimedia. Please carefully read the User's Quick Guide to learn about the installation and the powerful functions of your new Multiemdia Wireless Keyboard and Media Mouse.

Contents of Package

- ✓ Multimedia Wireless Keyboard
- ✓ Media Wireless Optical Mouse
- ✓ 2.4GHz Dongle
- ✓ Driver CD-ROM
- ✓ AC-to-DC Adapter (Option)
- ✓ USB-to-DC Cable (Option)
- ✓ User' s Quick Guide
- ✓ Keyboard Battery: Alkaline AAA * 2
- ✓ Mouse Battery: Ni-MH AAA * 2

CAUTION:

- *The batteries may explode or leak if they are improperly recharged, inserted, disposed in fire or mixed with used or different battery types.*
- *Risk of explosion will be caused if battery is replaced by an incorrect type.*

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

- ***Dispose of used batteries according to the instructions.***
- ***It ' s important that batteries should be recycled in a proper way for green environment.***

Install Hardware

- Install Dongle
 - 1) Turn on the computer.
 - 2) Connect the USB dongle to the computer.
- Link Keyboard and Mouse with Dongle

Note:

 - ***The min. operation distance is 6 meters. Please link the devices within the effective distance.***
 - ***The linkage period is 15 seconds. Once press the dongle' s Link Button, please complete the keyboard or the mouse linkage process within the linkage period.***
 - 1) Place the batteries into the devices.
 - 2) Press the ID Link Button on the dongle. There are 15 seconds for the keyboard linkage.
 - 3) Press the ID Link Button of the keyboard.
 - 4) Press the ID Link Button on the dongle. There are 15 seconds for the mouse linkage.
 - 5) Press the ID Link Button of the mouse.
 - 6) The keyboard and the mouse are linked with the dongle and the dongle' s LED indicator is off.
 - 7) The product designs with the unique Smart Link function.
Once the linkage process is complete, you don' t have to re-link the keyboard and the mouse even if you change batteries or restart the computer.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

- 8) If the keyboard or the mouse does not link with the receiver, please repeat Step 2~3 or Step 4~5.
- 9) The 2.4GHz product features with 4 channels and there are 256 changeable IDs for each channel. If the selected channel or ID is interfered by other wireless-mouse or keyboard users nearby, please change the Link ID by re-linkage the device immediately. The channel and the ID will automatically change.

Install Mouse Driver

Note:

- ***The driver supports Windows 98 and ME.***
- ***If your OS is Windows 2000 or XP, the media hot keys are valid without installing the driver.***
- ***When you change the interface port, please reinstall the driver.***

- 1) Insert the driver CD-ROM to your computer. The PC system may automatically install the driver through selecting the PC auto-install function.
- 2) If the PC system does not set the auto-install function, please double click the file "Setup.exe" and follow the setup instructions to complete the driver installation.
- 3) Restart the computer. A media mouse icon will appear on the task bar of Windows after you successfully finish the installation.

Mouse Function Introduction (4-way Navigation Scroll Wheel and Media Hot Keys)

- **4-way Navigation:** The enhanced scroll wheel not only acts as a wheel button also can freely browse documents from left, right, down and up.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

- **Complete Media Hot Keys:** Freely control Media Player, Play/ Pause, Previous Track, Next Track, Stop, Volume Up, Volume Down & Mute.

Mouse Charge Mode (Optional)

Note:

- ***Please skip this section if your mouse is not rechargeable.***
 - ***Please use rechargeable batteries for the chargeable mouse.***
 - ***At the first time of usage, please charge the AAA batteries at least 6 to 8 hours.***
- Charge through the USB-to-DC Cable: Connect the cable with the mouse and then plug the USB connector of the cable to the computer.
 - Charge through the AC-to-DC Adapter: Connect the adapter' s DC jack to the mouse for charging.

Introduction of Hot Keys

- **8 Keyboard Hot Keys:** Freely provide the total function control of Web, Internet, Media and Computer.

	Web Home	Start the default Web browser or go to the Home Web page. If the Web browser is already activated it opens the Home Web page. You can reassign the Home key to start another Web browser, another Home Web page or another application.
--	----------	---

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

	E-mail	Start the default e-mail program. If you are not sure what the default e-mail program is, press this key to find out. You can reassign the Email key to start another e-mail program or another application.
	Play/Pause	Play or Pause media. Once paused, press this key again to resume playing.
	Stop	Stop playing media
	Pre Track	Switch to the previous media track. Press once for each preceding track
	Next Track	Switch to the next media track. Press once for each subsequent track.
	Volume up	Increase the volume. Hold down to increase the volume more quickly.
	Volume down	Decrease the volume. Hold down to decrease the volume more quickly.

- 8 Calculator Hot Keys: Shortcuts to access PC/CAL Mode, Send, +/-, AC, M+, M-, MR and MC.

	PC/CAL Mode	Change the default mode to Calculator Mode.
	Send	Transfer the calculating result to PC.
	+/-	Change the value to “+” or “-”.
	AC	Clear panel
	M+	Memory plus.
	M-	Memory minus.
	MR	Memory recall.
	MC	Memory clean.

- Low-battery Indicator: Specially designed for low-battery notice.

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001
	Low-battery Indicator	The LED Low-battery indicator shows the battery status. The LED will light while the batteries are low.			

Notification

- This equipment is intended for use in the following countries.
28 European Countries:
Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Hungary, Germany, Greece, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Slovak Republic, Slovenia, Spain, Sweden, Switzerland and United Kingdom.
- The low-battery LED indicator of the wireless keyboard will light while the keyboard is in the status of low battery and a low-battery icon will appear on the taskbar of Windows. Please change the batteries immediately.
- The mouse' s scroll wheel or the LED indicator will blink while the mouse is low battery. Please recharge or change the batteries immediately. The scroll wheel will light during the charge period.
- The optical technology can precisely detect the mouse motion on most surfaces. Please avoid using the optical mouse on any reflective, transparent, metallic or complex-pattern surface.
- Please do not use the mouse during charge periods.
- Press any button to wake up the keyboard or scroll the wheel to wake up the mouse while they are in the sleeping mode.
- If the keyboard or the mouse does not work properly, please make sure the USB port of the computer is valid.
- Please avoid using the devices under direct sunlight, extreme hot, cold or dusty environment.

Vera Tsai
5/5/2006 9:08 AM

The copy is according to the product information provided by engineers.

DATE	PRODUCT	CONTENT	ART DESIGNER	TOTAL PAGE	VERSION
Dec. 20, 2005	K64-c330-2.4GHz	Neutral User' s Guide	Omar	7	001

Wireless Mouse Patents

- Wireless Mouse and Stand Body: Taiwan 078386, China 01360042.7, Germany 401 06 575.8, and USA Pending
- Improved Structure of Wireless Mouse System: Taiwan 89222812, China 01100419.3, Germany 201 12 178.6 and USA Pending
- Wireless Mouse Recharge System: Taiwan 90104125, China 01109443.5, Germany 20112177.8, USA Pending
- Multiple Recharge System: Taiwan 90115187, China 01120050.2, Germany 20201110.0, USA Pending