

WR08 Remote Control Instructions

1. Product Overview

Product Name: Remote Control

Product Model No.: WR08

2. Environment requirement


Operation temperature: $+10^{\circ}\text{C} \sim +40^{\circ}\text{C}$.

Storage temperature: $-10^{\circ}\text{C} \sim 65^{\circ}\text{C}$.

Operating Humidity: 10%~80%RH, non-condensing.

Storage Humidity: 10%~85%RH, non-condensing.

3. Directions for Operation

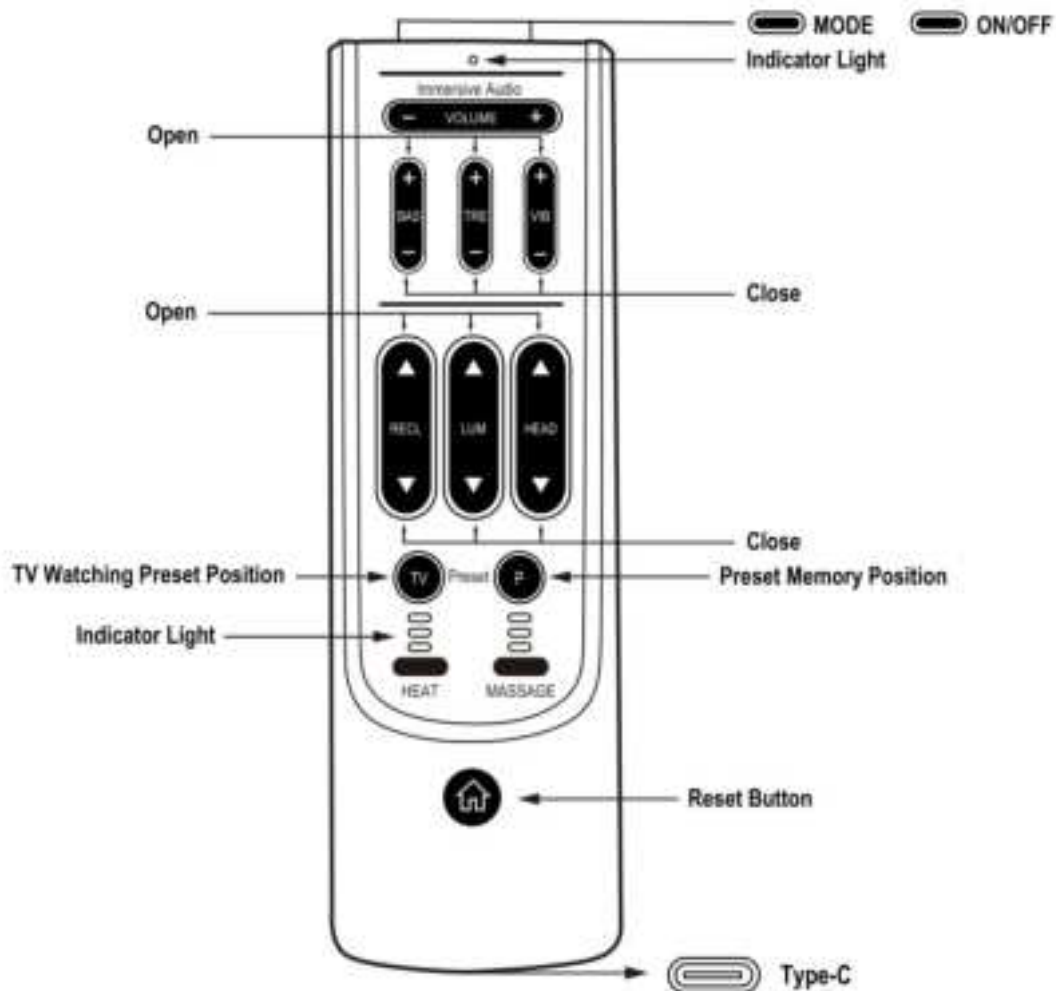

Care should always be taken to assure there is nothing in the path of the mechanism before and during operation.

How to pair the recliner with the remote control

First power off the recliner, then press and hold the open and close buttons of the RECL button

on the remote control at the same time until the indicator light dims, indicating that the remote control has entered the pairing state, and then reconnect the recliner to the power, when the recliner sends a connection prompt, it means that the recliner and the remote control are successfully paired.

How to connect the speaker

Press and hold the ON/OFF button on the top of the remote control to turn on or off the audio function, the recliner will sound "Power on" when it is turned on, and the recliner will prompt "Power off" when it is turned off. Press and hold the MODE button on the left side of the top of the remote control, when the blue signal light starts flashing, it means that the remote control has entered pairing mode; If you want to stop pairing, press the MODE button again, and the blue signal light will stop flashing and eliminate when pairing is stopped. When the remote control is successfully connected to the speaker's wireless connection, it prompts "connected". Then double-click the MODE button to enter the broadcast mode, the recliner sends out a prompt sound "broadcast mode", indicating that the broadcast mode has been entered, and the blue signal light turns red at this time, if it enters the broadcast mode when it is connected to the wireless connection, the signal light turns purple; If you want to exit the broadcast mode, double-click the MODE button again and hear the prompt "broadcast off". Finally, press and hold the MODE button to disconnect from the speaker's wireless connection, and the recliner prompts "disconnected".

How to use massage and heating

The heating function is indicated by a red light, the massage function is indicated by a green light, and both functions have three gears. The heating function will automatically stop after 30 minutes, and the massage function will also stop automatically after 20 minutes. After the massage and heating functions are automatically paused, if you need to continue using them, press the corresponding function button again.

How to use Memory Function

Press the TV button and the P button simultaneously until the blue signal light turns off, indicating that the current position has been memorized. If you want to memorize the current position to the TV button, press the TV button next. If you want to memorize the current position to the P button, press the P button next. To go to a preset TV or P position, press and hold the desired memory button TV or P. Please note that the TV button initially stores a default preset comfortable position set by the Recliner.

How to charge the remote control

There is a USB port on the lower end of the remote control, which can be plugged in to charge the remote control.

There are 10 gears of adjustment of the Volume/Bass/Treble/Vibrator button, and the blue light bar on the upper side of the remote control changes with the gear change of the Volume/Bass/Treble/Vibrator function, the longer the light bar, the larger the gear.

4. Matters needing attention:

- 4.1 The function will only work normally in proper working power conditions.
- 4.2 Remote Control needs DC 3.7-3.85V powered by li-ion batteries.
- 4.3 The control box is needed for proper control.
- 4.4 If problems are identified, they must be treated by professional personnel.

5. Additional attention for user:

5.1 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

5.2 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5.3 For Intentional and unintentional radiators the manual shall caution the user and manufacturer that changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.