



# User Manual

- Basic Operation
- After Service

# SER

## 1. Basic Operation



### Button & Ports

- |                       |               |
|-----------------------|---------------|
| 1. USB port           | 5. LAN port   |
| 2. Type-C port        | 6. HDMI port  |
| 3. MiC headphone jack | 7. DC in port |
| 4. power button       |               |

## 2.Vesa Mount Installation Guide



**⚠** Failure to use the included power adapter may violate regulatory compliance requirements and may expose the user to safety hazards.  
 \*specifications are subject to the physical product

## The following operations should be started with the power off

**DDR Memory Installation.** (As shown in the picture)  
 1.Align the memory module key along with the memory socket key and insert the memory at a 30 degree angle,Slide the module into place.



**SSD Card Installation.** (As shown in the picture)  
 1.Align the notches on the SSD with the tabs in the M.2 slot on the mother board.  
 2.Slide ssd in then secure the SSD with screw.



Note: TheHDD installation guide is inscribed on HDD cover.

## Connection steps



1. Connect the power supply
2. Connect to the monitor with HDMI cable
3. Connect the keyboard and mouse

## How to Change Your Audio Playback Devices on Windows

Connect speakers, headphones, a webcam with a built-in microphone, a Bluetooth headset, or another audio devices to your Windows PC and you'll need to choose which devices Windows actually uses.



## Cautions

- In order to continue to improve the user experience, we may occasionally update app and firmware.
- Do not use harsh of chemical solvent, cleaning products, We recommend using a soft cloth to wipe.
  - Do not throw product into fire, avoid having fire accident.
  - Do not attempt to open the housing or to repair, if a failure occurs, please contact the customer service.
  - Please note seepage while clean electronics, be careful of electric shock.
  - Check for any frayed or damaged cords or plugs.
  - Don't arbitrary discard the product, we should protect the environment.
  - Operating environment: -10°C--45°C, 30%—85% humidity.
  - Storage environment: -20°C—60°C, 10%—90% humidity.

## Compliance FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## Cautions

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure com

Power-on and Wake-on-LAN, setting guide file storage path (Select the corresponding file according to the machine model): C:\Power On and WOL  
 System drive file storage path: C:\Driver

## After service

- ✉ Email:  
 Mini PC: Support-pc@bee-link.com  
 TV BOX: Support-box@bee-link.com  
 Sales: Wholesale@bee-link.com
- ☎ Call us! +86-755-36633117/36633118

Manufacturer: ShenZhen AZW Technology co., Ltd  
 Address: 70, Building B, Hengda Shishang Huigu, nek to Fulong Road, Shanghenglang Community, Dalang Street, ShenZhen, GuangDong, China



Video Tutorial



Forum



MADE IN CHINA