



- |   |   |   |
|---|---|---|
| <p><b>FR</b></p> <p>1 Touche 1<br/>2 Touche 2<br/>3 Bouton de sélection gauche<br/>4 Entrée/bouton<br/>5 Bouton de démarrage</p> <p><b>RU</b></p> <p>1 Кнопка 1<br/>2 Кнопка 2<br/>3 Кнопка выбора влево<br/>4 Кнопка входа<br/>5 Кнопка запуска</p> <p><b>CH</b></p> <p>1 按钮 1<br/>2 按钮 2<br/>3 左侧选择按钮<br/>4 启动按钮<br/>5 启动按钮</p> <p><b>RU</b></p> <p>1 Кнопка 1<br/>2 Кнопка 2<br/>3 Кнопка выбора влево<br/>4 Кнопка входа<br/>5 Кнопка запуска</p> | <p><b>EN</b></p> <p>1 Touch 1<br/>2 Touch 2<br/>3 Left selection button<br/>4 Enter button<br/>5 Learning button</p> <p><b>FR</b></p> <p>1 Touche 1<br/>2 Touche 2<br/>3 Bouton de sélection gauche<br/>4 Bouton d'entrée<br/>5 Bouton d'apprentissage</p> <p><b>RU</b></p> <p>1 Кнопка 1<br/>2 Кнопка 2<br/>3 Кнопка выбора влево<br/>4 Кнопка входа<br/>5 Кнопка запуска</p> <p><b>CH</b></p> <p>1 按钮 1<br/>2 按钮 2<br/>3 左侧选择按钮<br/>4 启动按钮<br/>5 启动按钮</p> <p><b>RU</b></p> <p>1 Кнопка 1<br/>2 Кнопка 2<br/>3 Кнопка выбора влево<br/>4 Кнопка входа<br/>5 Кнопка запуска</p> | <p><b>EN</b></p> <p>1 Camera<br/>2 15-inch Full-color LCD screen (resolution 1920x1080)<br/>3 Left selection button<br/>4 Extended USB-C communication interface<br/>5 USB-C firmware burning interface</p> <p><b>FR</b></p> <p>1 Appareil photo<br/>2 Écran LCD couleur intégré de 15 pouces (résolution 1920x1080)<br/>3 Bouton de sélection gauche<br/>4 Interface de communication USB-C étendue<br/>5 Interface de gravure de firmware USB-C</p> <p><b>RU</b></p> <p>1 Камера<br/>2 15-дюймовый полноцветный ЖК-экран (разрешение 1920x1080)<br/>3 Кнопка выбора влево<br/>4 Интерфейс USB-C для коммуникации<br/>5 Интерфейс для прошивки прошивки USB-C</p> <p><b>CH</b></p> <p>1 摄像头<br/>2 15英寸全彩LCD 显示屏 (分辨率 1920x1080)<br/>3 左侧选择按钮<br/>4 扩展 USB-C 通信接口<br/>5 USB-C 固件烧录接口</p> <p><b>RU</b></p> <p>1 Камера<br/>2 15-дюймовый полноцветный ЖК-экран (разрешение 1920x1080)<br/>3 Кнопка выбора влево<br/>4 Интерфейс USB-C для коммуникации<br/>5 Интерфейс для прошивки прошивки USB-C</p> |
|---|---|---|

- ```

100  bcd1 =
101  bcd2 =
102  quadmem=
103  quat=
104  quatmul=

```

- ① Before using, please log in to the official website to upgrade VinciBot to the latest firmware version.  
② Camera usage instructions and examples, please log in to VinciBot's programming official website tutorial and help center to view.

### Safety instructions

- This product is not intended for use by children under the age of three.
- The power adapter that is included with the battery is not to be used out of reach of children.
- This product should only be used with a transformer for toys.
- Disconnect the product from the power supply before cleaning. Clean the product with a dry, clean, fine cloth.
- Children should play the product under the guidance of an adult.
- Falling even from a low height can damage the product.
- Never return and/or insert the product to avoid malfunctioning.
- Do not use or charge the product in any conditions outside its operating range.
- The product is not to be used for a long period of time. Fully charge it before storage or charge it at least once every 15 days in use.
- Use only the recommended power adapter SW72A1 to charge the product.
- Regularly check whether the device plug, shell or other components are damaged. If damaged, stop using immediately.



This user guide contains important information, please keep it!

- 1 Avant utilisation, veuillez vous connecter sur le site officiel pour mettre à jour VinciBot vers la dernière version du firmware.
- 2 Instructions d'utilisation de la caméra et exemples, veuillez vous connecter du site officiel de programmation de VinciBot pour consulter les tutoriels et le centre d'aide.

### Conclusions de la recherche

- [illegible]



Ce manuel d'utilisation contient des informations importantes, veuillez le conserver.



**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.