


Welcome Guide

WA918 Door Bell



Product Illustration

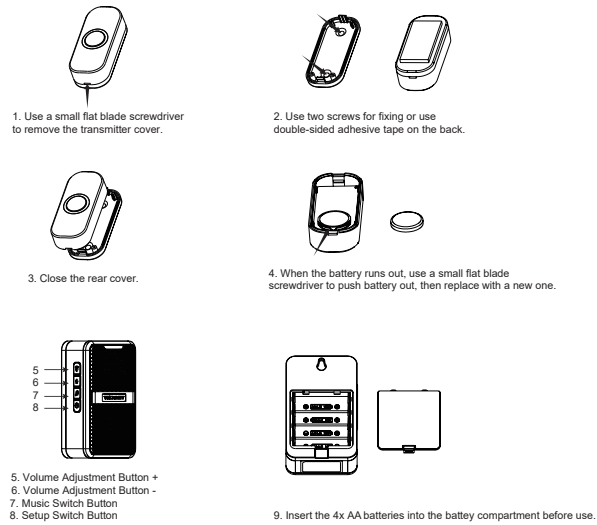

1•

Package Contents

- 1 x Transmitter (Remote controller, CR2032 Button-Battery Included)
- 1 x Receiver (Doorbell)
- 3 x Screws
- 3 x Screw-joint Coupling
- 1 x Double-Side Adhesive Tape
- 1 x User Manual

Product Features

- Stylish, sleek exterior design .
- Super-efficient eco power management mode reduces power consumption.
- Powerful transmitter provides an amazing 200 metres range for remote control.
- 58 optional music chimes. You can easily select and change chimes to suit your taste or occasion.
- Four-level adjustable volume control.
- 3 Modes: LED + ring tone, LED, ring tone.

Product Specification

Transmitter Working Voltage:	≤ 3V
Transmitter Power Consumption:	<10mW
Receiver Working Voltage:	DC 4 x AA1.5V
Receiver Power Consumption:	0.4W
Sound Volume:	25-105dB
Working Frequency:	433MHZ±2MHZ
Transmitter Dimensions:	72 x 31 x 20mm
Receiver Dimensions:	113 x 68.5 x 37.5mm

2•

Instructions

Install Batteries
Insert the 4x AA batteries (not included) into the battey compartment.

Music Selection
Press "music switch" button to change the melody.

Mode Selection
There are 3 operating modes for VOXON WA918: LED + ring tone, LED, ring tone. Simply press "Setup" button to change the mode.

Volume Adjustment
There are 4 levels of volume for VOXON WA918: Press "Volume +" button to increase the volume. Press "Volume -" button to decrease the volume.

Pairing Method

- (1) Choose the LED + ring tone mode.
- (2) Press "Volume +" button 5 seconds until it chirps. The receiver is now in pairing mode. Then press the transmitter button. When select melody sounds, the pairing is successful.

Note: The pairing method only takes place in the LED + ring tone mode.

Pairing Memory Clearance

Press the "Volume -" button 5 seconds until ringing (ding dong). All pairing is now cleared and programme settings are returned to the default setting. The unit returns to the first music chime and the transmitter is not paired with receiver.

3•

Method of Installation

1. Receiver Installation:
You can stand the receiver in an upright position wherever you like or use screws to fix the receiver in a desired location on a wall.

2. Transmitter Installation:
Method 1, Screws:
There are screw locator knockouts in the back cover of transmitter - punch these out to allow the screws to pass through and fix the transmitter in a desired location on the wall.

Method 2, Adhesive Tape:
Apply the double-sided adhesive tape on the back of transmitter case. Remove the outer side of tape and attach the transmitter in a desired location on the wall and press hard for 30 seconds.

Maintenance

- 1. Ideally, use high quality alkaline batteries - they last longer and reduce the chance of electrolyte leakage.
- 2. In order to protect the precision internal electronic components, it's advisable that unqualified users should not attempt to open the unit for maintenance.
- 3. Do not expose to direct sunlight or a humid environment - this will adversely affect the unit.
- 4. Correct use of the products helps to effectively extend the service life of the unit.

4•

VOXON

Thank for purchasing this VOXON product!

IMPORTANT SAFETY INSTRUCTIONS
CAREFULLY READ AND FOLLOW THESE INSTRUCTIONS.

- 1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.
- 2. Before using the product, read all instructions and caution markings on the product, accessories and device when using our product.
- 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 4. Children should be supervised to ensure that they do not play with the appliance.
- 5. Keep the product away from fire or explosion may occur.
- 6. For indoor use only. Do not expose to rain, water, excess moisture or snow.

5•

- 7. Do not place product in or near inflammable, explosive or hazardous objects.
- 8. Do not place in or near water, rain, excess moisture or extreme heat.
- 9. Do not operate the product with a damaged cord or plug.
- 10. Do not operate product if it has been damaged in any way.
- 11. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
- 12. Do not throw or shake the product.
- 13. To reduce the risk of electric shock, unplug the product from the power supply when not in use or switch off the power supply.

6•

Limited 18-Month Warranty:

This warranty covers:
Shenzhen VOXON Technology Co., LTD. (Manufacturer: "VOXON") warrants to the original purchaser of this VOXON product that the product shall be free of defects in design, assembly, material, or workmanship.
The period of cover:
VOXON warrants the VOXON product for 18 Months.
What will we do to correct problems?
VOXON will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).
What is not covered by this warranty?
All above warranties are null and void if the VOXON product is not provided to VOXON for inspection upon VOXON's request at the sole expense of the purchaser, or if VOXON determines that the VOXON product has been improperly installed, altered in any way, or tampered with. The VOXON Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.
How to claim the warranty?
Please contact retailers or visit VOXON website www.voxonstore.com for more information.

7•

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.


Warranty

We warrant that products purchased from authorized distributors will meet the applicable product specifications and be free from all defects in design, assembly, materials and workmanship. Please contact retailers or visit our website (www.voxonstore.com) for more information.



E-mail: support@voxonstore.com
Website: www.voxonstore.com

8•

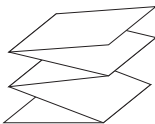

FCC warnings:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.